


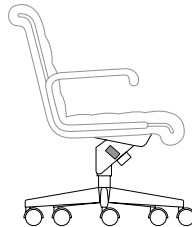


#### **Pneumatic Seat Height Adjustment**

To adjust the height, lift the handle on the right side of the seat.




#### **Tilt Lock**

To lock the chair upright, push down on the handle under the left side of the chair. Pull up to release.

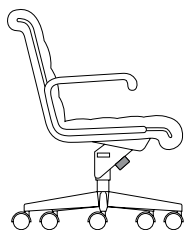


#### **Tension Adjustment**

Lean back and recline. If tension needs adjusting, reach under the front-center of the seat and increase tension by turning the knob to the left, or decrease tension by turning the knob to the right.

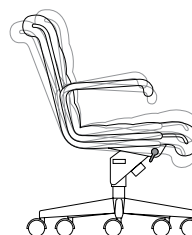

#### **Forward Tilt**

Reach under the right side of the chair toward the front and twist the lever to the front while slightly reclining to activate forward tilt. To deactivate forward tilt, recline slightly and twist the lever to the rear.

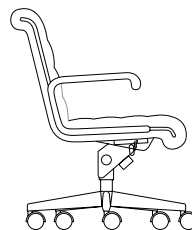

#### **Adjustable Lumbar Support**

*(optional)*

To raise the lumbar support, slide the curved lever on the left side of the chair toward the rear of the chair. To lower the lumbar, slide the lever toward the front edge of the chair.

Compliancy: ANSI/BIFMA x 5.1 – 1993, Cal 133 (with approved FR upholstery)  
Operating Instructions also available online at [www.knoll.com](http://www.knoll.com)