

Digital Control Switch

Quick Set-Up Guide

For Use with Tone and Antenna Telescope

The Antenna Digital Control Switch is designed for use with Tone Height-Adjustable Tables and Antenna Telescope. The switch features basic up and down buttons; programmable quick sit and quick stand buttons; and three additional programmable height settings.

This document will guide users through basic set up and programming the most commonly-used functions of this Switch. For more detailed instructions, or for the full Antenna Digital Control Switch User Guide, visit the Tone or Telescope product pages at www.knoll.com.

Program a Quick Sit Height

1. Move the table to seated height.
2. Press and hold  for 3 seconds.
3. Immediately press . Quick sit is programmed.
4. To travel to the Quick Sit Height, press and hold .

Program Quick Stand Height

1. Move the table to standing height.
2. Press and hold  for 3 seconds.
3. Immediately press . Quick stand is programmed.
4. To travel to the Quick Sit Stand, press and hold .

Program Positions 3, 4 or 5

1. Move the table to desired height for position 3.
2. Press  once and immediately press  once.
3. The Menu mode icon will appear in the top left corner.
4. Press  until the display reads 3. 
5. Press  to store position.

The display will confirm the setting by flashing three times. Repeat steps above for positions 4 and 5, navigating to Presents 4 and 5 respectively.

To Travel to Stored Positions 3, 4 or 5

1. Press  once. The memory icon will appear in the top left corner.
2. Use   to navigate to stored positions 3, 4 or 5. 
3. Press  and hold while the table moves to the stored position.

Operating the Table

Tone and Antenna Telescope feature press-and-hold adjustments to prevent injury to users and damage to surrounding objects. To adjust the table up or down or to move to any of the preset heights, a user must press and hold the appropriate button.

