

Antenna Fence Intermediate Free Standing Gallery Panel Installation Instructions

Freestanding Antenna Fence Intermediate Gallery Screen

Tools Required

- Drill/Driver (**DO NOT USE** Impact Driver)
- Pencil
- 3/8" drill bit
- Tape measure
- Two (2) 4mm allen wrenches
- Level

1. Lay Gallery Panel on a clean, soft and raised surface (table or bench)
2. Measure 10" in from each end and mark a line
3. Align the outer edge of the freestanding foot to this line and the bottom edge to the bottom of the Intermediate Gallery Panel
4. Using slots in the freestanding foot as a template, mark two drilling locations (near the bottom of the slot). Repeat steps 3 and 4 for both ends of the Intermediate Gallery Panel
5. Using the marks above, a drill and a 3/8" drill bit, drill (4) four through-holes perpendicular to the face of the Intermediate Gallery Panel
6. Using the hardware provided loosely install the gallery panel free standing feet as shown (do not install the covers (item 6) at this time) (**Figure A**)
7. Stand the Intermediate Gallery Panel up – with the free-standing feet loosely installed, level the Intermediate Gallery Panel so the bottom edge is even with the **BOTTOM** edge of the adjacent Antenna Fence cover (**Figure 1a**)
8. Using a level, adjust the gallery panel free-standing feet independently to ensure the Intermediate Gallery Panel is plumb and tighten the fasteners securely, from each side, with two (2) 4mm allen wrenches. (**Figure 1b**)
9. With the Intermediate Gallery Panel now level and plumb, turn each leveler clock-wise so that the full weight of the Intermediate Gallery Panel is resting on the free-standing feet.
Failure to follow this step can cause the Intermediate Gallery Panel to feel wobbly.
10. Install the foot covers (item 6) with the supplied Velcro pads (item 7).

