

# k.<sup>TM</sup> base Handset

## Setup

### Initial Reset

Critical step. At installation or if a critical component such as a column or motor is changed or disconnected, a Reset must be performed.

1. Ensure the area around and under the desk is clear and that there is nothing under the table that will obstruct the table's travel.
2. Press and hold the DOWN button until the table reaches its lowest limit and the display reads RST. Release.
3. Press and hold the DOWN button again, this time until the desk first lowers slightly, then rises slightly, and finally stops. Release the DOWN button.
4. A height read-out will appear. The desk is ready to be used.

### Setting Presents 1–4

1. Adjust the desk to the desired height.
2. Press M (the display will show S -).
3. Press any number 1–4.

### Accessing Presets 1–4

Pressing and holding the associated number will move the desk to the programmed height.


## Custom Settings

### Adjust the height readout

The display is programmed to the approximate height to the top of the worksurface. The accuracy may be affected by different worksurface thickness and leveling.

#### To change the readout height:

1. Measure the distance from the floor to top of the worksurface.
2. Press and hold the DOWN button until the desk reaches its lowest position. Release. Press and hold the DOWN button again, until the display flashes RST. Release.
3. Press and hold the M button until it begins to flash the starting height.
4. Use the UP or DOWN button to adjust the display by 0.1 inch at a time until the display shows the correct height, as measured in Step 1.
5. Wait 5 seconds and the display will automatically return to RST, which indicates Reset Mode.
6. Complete the reset process by pressing and holding the DOWN button again while the desk lowers a little bit more, slightly rises, and then stops.
7. Release the button. Display will show the new starting height  $\pm$ .1 inches. The new readout height is now saved.

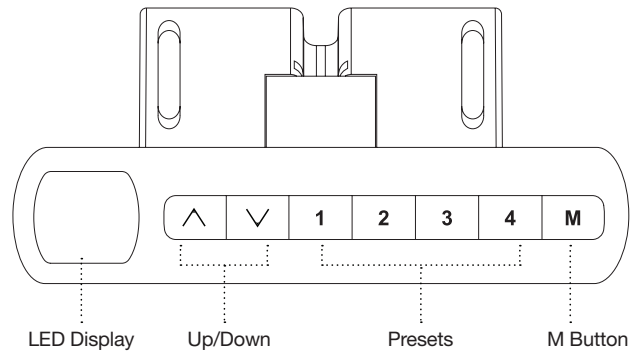

## Set Upper and Lower height limits

### To set the upper limit

1. Use the UP/DOWN buttons to move the desk to the desired maximum height.
2. Press the M button and release, then press the UP button and release. The display will flash S - to show that it is ready to set the upper limit.
3. Press and hold the M button for about 2 seconds. The display will show "999" and then return to the height readout. This indicates that the upper limit is set.

### To set the lower limit

1. Use the UP/DOWN buttons to move the desk to the desired minimum height.
2. Press the M button and release, then press the DOWN button and release. The display will flash S - to show that it is ready to set the lower limit.
3. Press and hold the M button for about 2 seconds. The display will show "000" and then return to the selected height. This indicates that the lower limit is set. You did it!

### To remove upper limit and lower limit settings

1. Press the M button and release. "S -" will appear on the display.
2. Within 5 seconds, press the M button again and hold for about 2 seconds until the display shows "555".
3. Release the button. The display will automatically change back to the height display, and the height limits will reset.

## Change Units

1. Press and hold the DOWN button until the desk reaches its lowest position. Release.
2. Press and hold the DOWN button again, until the display begins to flash RST.
3. Press and hold the 2 button for 5 seconds. The handset will register the unit change and display the corresponding readout:  
10.3 = Centimeters  
10.4 = Inches
4. To toggle to the next setting, press and hold the 2 button again for 5 seconds, until the displayed readout updates.
5. Once the preferred setting displays, release the button and wait about 5 seconds for the display to return to RST.
6. Complete the reset process by pressing and holding the DOWN button again while the desk lowers a little bit more, slightly rises, and then stops. Release the button. The units have been changed.