

Saarinen Coffee Tables

Laminate and Veneer Tops

2 Installers Required

162TR 35" – Round

162TO – 42" Oval



For step-by-step video
instructions, visit knoll.com



 
Knoll, Inc
1235 Water Street
East Greenville, PA 18041

Saarinen Coffee Tables

Hardware

(3) M8 X 16MM slotted machine screws

**included in base carton*

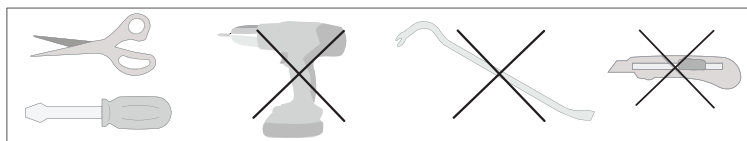

Tools

Scissors

 
Slotted screwdriver

CAUTION: DO NOT REPLACE SCISSORS WITH AN X-ACTO KNIFE AS SCRATCHES CAN OCCUR

Unpacking top and base cartons

A MINIMUM OF (2) INSTALLERS ARE REQUIRED FOR PROPER TABLE ASSEMBLY. BE SURE TO ASSEMBLE THE TABLE IN THE DESIRED SPACE IT WILL BE USED IN; AVOID MOVING THE TABLE ONCE TOP AND BASE HAVE BEEN ASSEMBLED.

1. The coffee table will arrive in two packages: a box containing the laminate top and a box containing the base and hardware. Begin by unpacking the base carton. Using scissors, open the box and carefully remove the table base and bag of hardware, set aside.
2. Place the top box flat on the floor. Using scissors open the box and remove the carton face. Leave the top laying in the bottom half of the box.


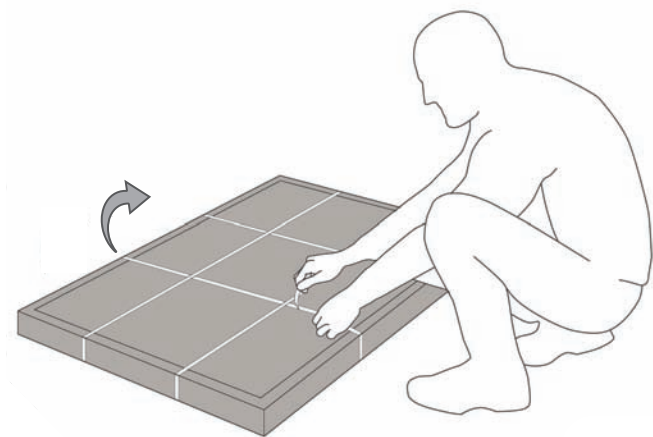


Saarinen Coffee Tables

Screwing the top and base together


3. Pick up table base and carefully line up the three predrilled holes on the subtop to the three inserts on the underside of the top.
4. Using a slotted screwdriver, screw the (3) M8 X 16MM screws into the inserts in the top until they make contact and then tighten an additional ¼ turn.

  CAUTION: OVERTIGHTENING CAN CAUSE DAMAGE; ALWAYS USE A SCREWDRIVER NOT A DRIVER OR POWER DRILL

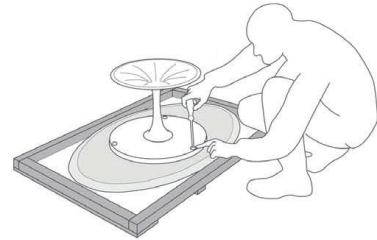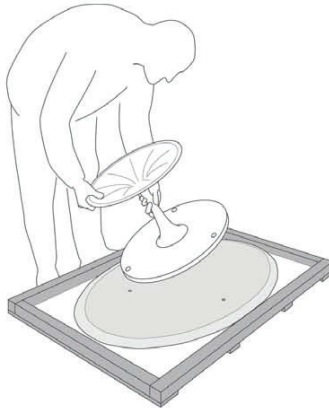

Placement of coffee table

 5. Two installers carefully lift the table from opposite sides out of the open carton. Carefully rotate table to be top side up and place on desired spot on floor.

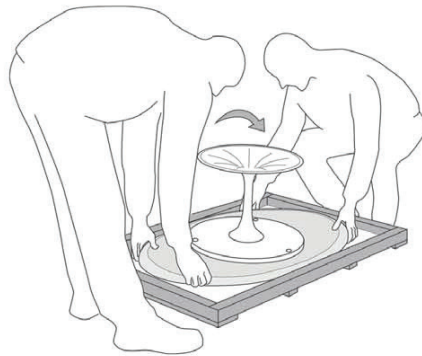

Moving the table

6. Never move the table by the top only. The table should be assembled in its final location. If the table's position must be adjusted slightly, you may carefully move it a few inches by grasping the stem of the base and sliding the table into the desired position. If the table needs to be moved any distance greater than a few inches, the table must be disassembled.