

Saarinen Medium Dining Tables

Marble Tops

4 Installers Required

164TR – 54" Round

165TR – 60" Round



For step-by-step video
instructions, visit [knoll.com](https://www.knoll.com)




Knoll, Inc
1235 Water Street
East Greenville, PA 18041

Saarinen Medium Dining Tables

Hardware

(3) M8 X 16MM slotted machine screws

**included in base carton*

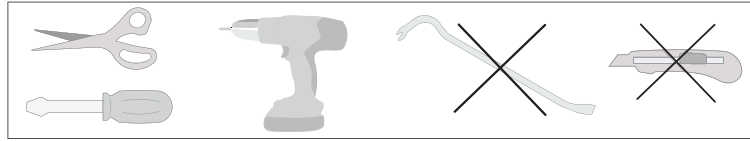

Tools

Scissors

Slotted screwdriver

Driver (for use on marble crate only)

T20 torx bit


CAUTION: DO NOT REPLACE SCISSORS WITH AN X-ACTO KNIFE AS SCRATCHES CAN OCCUR

Unpacking top and base cartons

A MINIMUM OF (4) INSTALLERS ARE REQUIRED FOR PROPER TABLE ASSEMBLY. ALL MARBLE TOPS MUST REMAIN IN CRATE UNTIL DELIVERY AT INSTALLATION SITE. TOP SHOULD REMAIN IN A VERTICAL POSITION DURING STORAGE AND TRANSPORT.

BE SURE TO ASSEMBLE THE TABLE IN THE DESIRED SPACE IT WILL BE USED IN; AVOID MOVING THE TABLE ONCE TOP AND BASE HAVE BEEN ASSEMBLED.

1. The dining table will arrive in two packages: a wooden crate containing the marble top and a box containing the base and hardware. Begin by unpacking the base carton. Using scissors, open the box and carefully remove the table base and bag of hardware, set aside.
2. Begin breaking down the marble crate. Two installers hold crate frame stable while one installer uses driver to remove the four corner screws and the crate face.

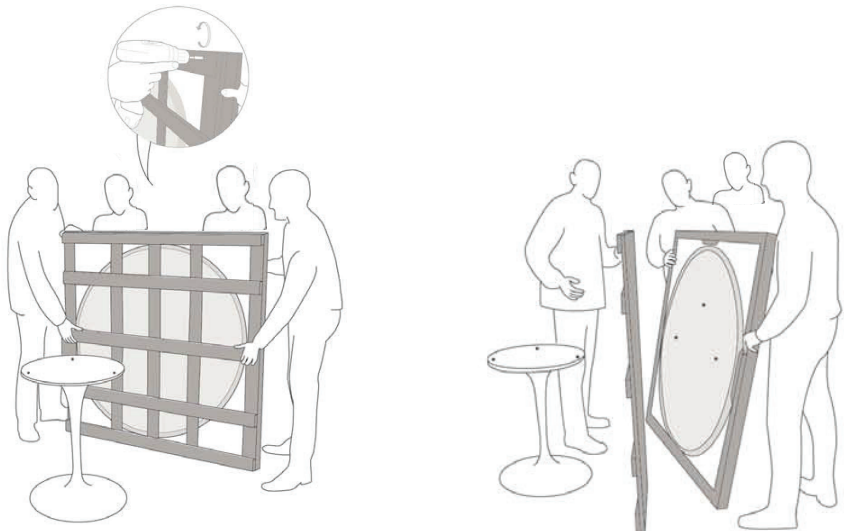


Saarinen Medium Dining Tables

Screwing the top and base together

3. While one installer holds the crate frame stable, the other three installers carefully lift the marble top out of the crate and onto the table base. Be sure to line up the three predrilled holes on the subtop to the three inserts on the underside of the marble top.
4. Using a slotted screwdriver, screw the (3) M8 X 16MM screws into the marble top from beneath the subtop until they make contact and then tighten by an additional $\frac{1}{4}$ turn.

CAUTION: OVERTIGHTENING CAN CAUSE DAMAGE; ALWAYS USE A SCREWDRIVER NOT A DRIVER OR POWER DRILL

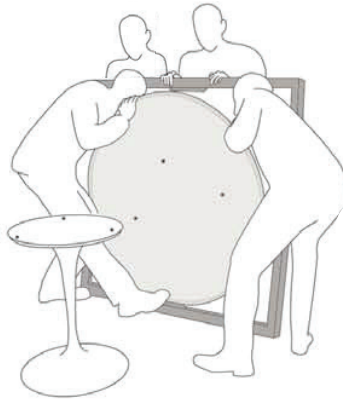

Moving the table

5. Never move the table by the top only. The table should be assembled in its final location. If the table's position must be adjusted slightly, you may carefully move it a few inches by grasping the stem of the base and sliding the table into the desired position. If the table needs to be moved any distance greater than a few inches, the table must be disassembled.

