
Suspended Modesty

Parts List - Hardware


(A) P\N VARIES

- MODESTY MOUNTING BRACKET (B) 5112200
- SCR,SM PNP 10x1/2 T-A ZN (C) P\N VARIES
- SUSPENDED MODESTY
- (D) 5110011 SCR,MACH 1/4-20UNCx5/8
- (E) P\N VARIES (ORDERED SEPERATELY) SIDE-MOUNTED WIRE MANAGER



Tools Needed Measuring Tape 8/16" Diameter Drill Square Drive Screw Driver

- *Note:* All dimensions suggested in these instructions are based on the optimal position of a suspended modesty for a rectangular peninsula top application with leg supports and a grommet. The location you mount the modesty may vary but the attachment method should be the same.
- Mark the location where the modesty bracket (A) is to be mounted and fasten it to the underside of the mounting surface using fastener (B). (Fig. 1A & 1B)
- 2. Secure modesty (C) to the mounting bracket (A) using fastener (D). (Fig. 2)
- Note: If optional side-hung wiremanager (E) (ordered separately) is being used, it must be assembled in conjunction with the modesty (C) also using fastener (D). (Fig. 3)

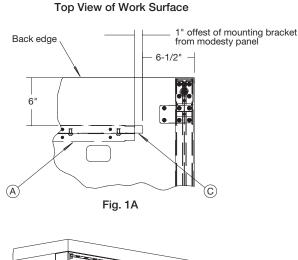

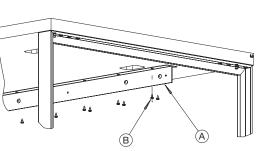


Fig. 1B

