

# Dividends Horizon® Panel End Trim


1. Assemble End Trim Brackets to end of panel using screws provided (**Fig. 1**). Drive screw into pilot hole.

2. Snap Panel End Trim on to panel, leaving approximately 1" between Panel End Trim and top of panel. (**Fig. 2**)

3. Slide Panel End Trim down until transition cap bottoms out on the top of the panel frame.

4. Snap on Top Cap (**Fig. 3**)

continued...

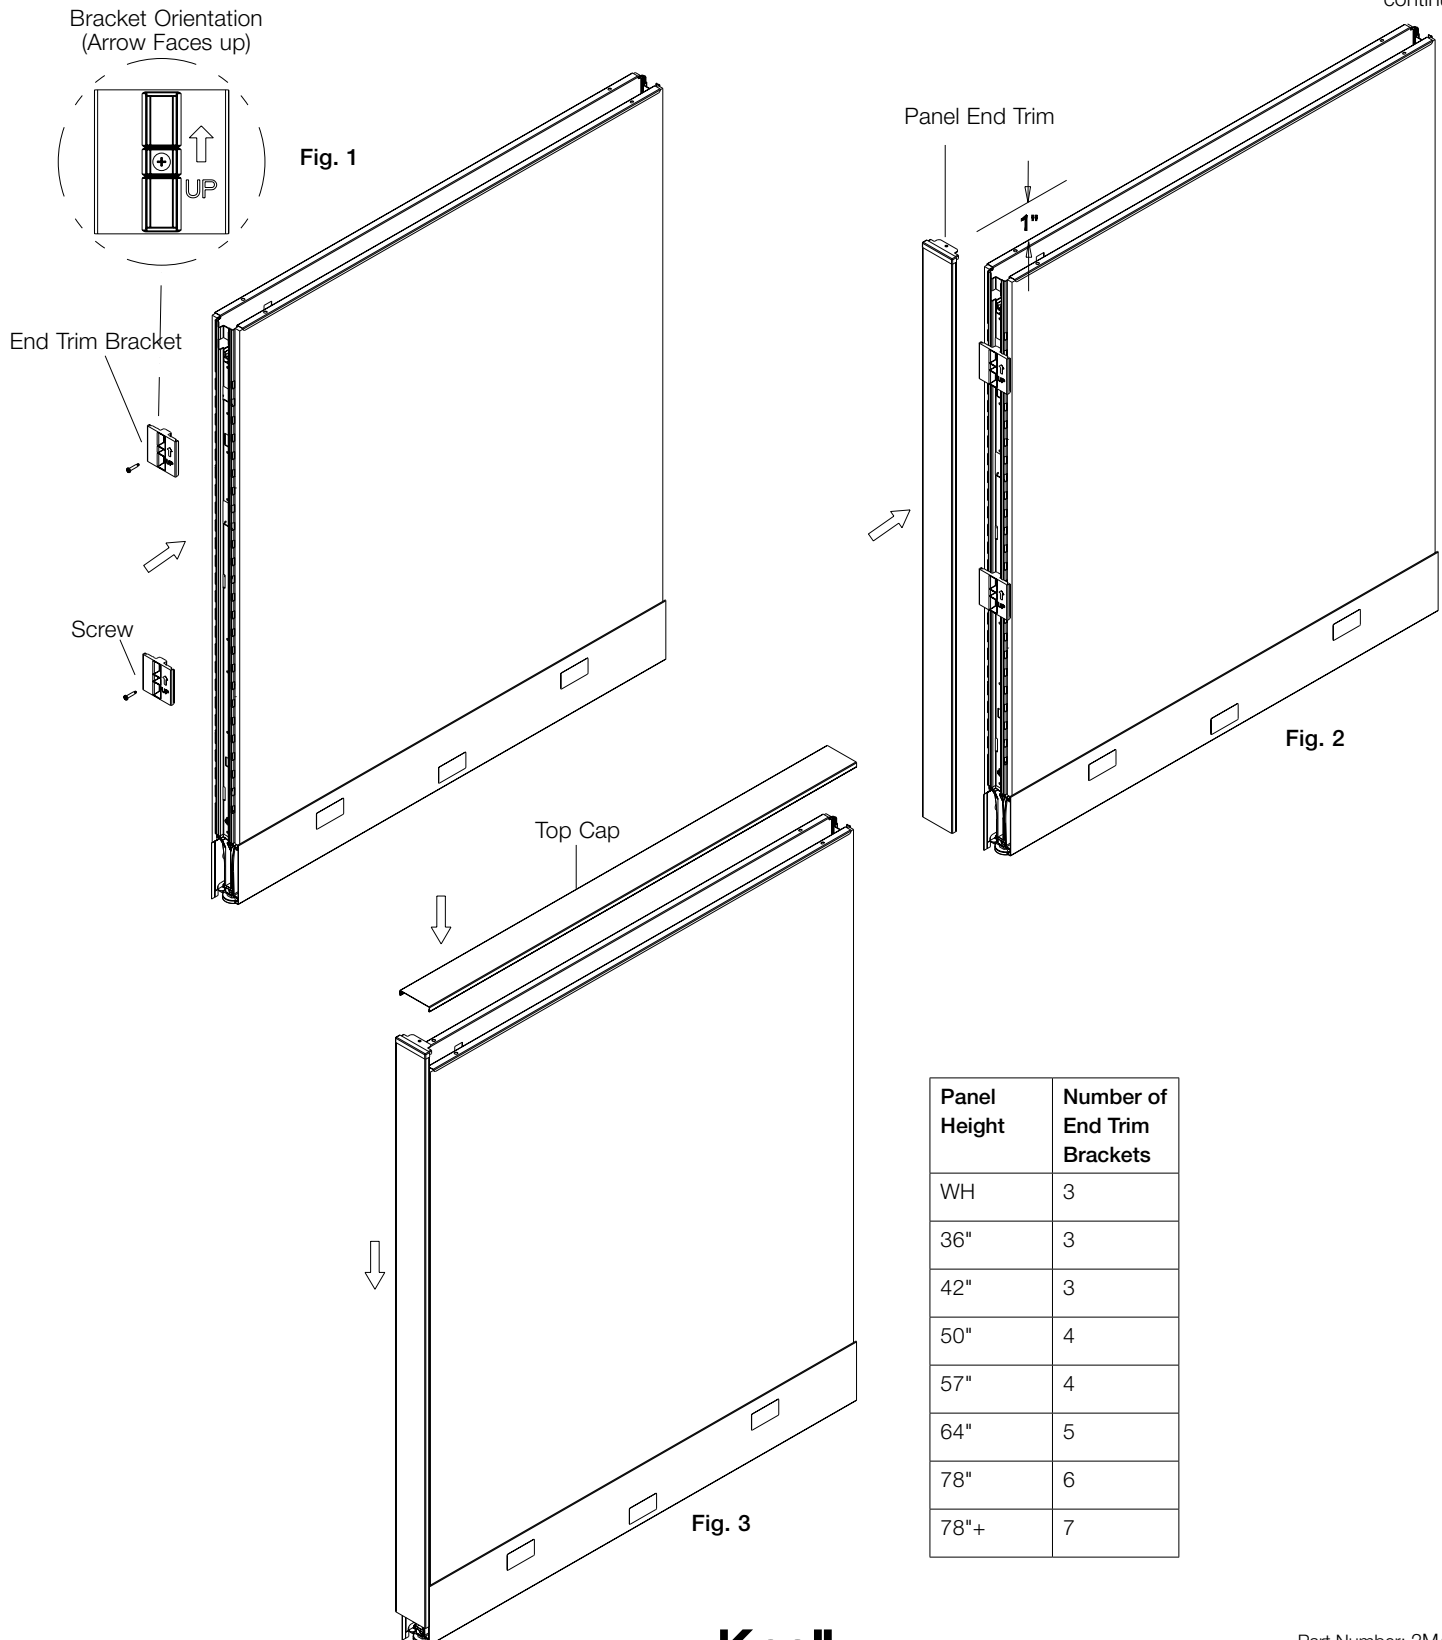

## Dividends Horizon Panel End Trim, continued

### High-Low Panel End Trim

1. Assemble End Trim Brackets to end of upper panel using screws provided, add provided (Fig. 1) Drive screws into pilot hole.

2. Insert Lower Transition Cap into High-Low Panel End Trim (Fig. 2)

**Note:** when a frameless recessed glass channel is used in the lower position, the Lower Transition Cap is omitted.

3. Snap High-Low Panel End Trim onto end of upper panel (Fig. 3)

4. Snap on Top Cap (Fig. 4)

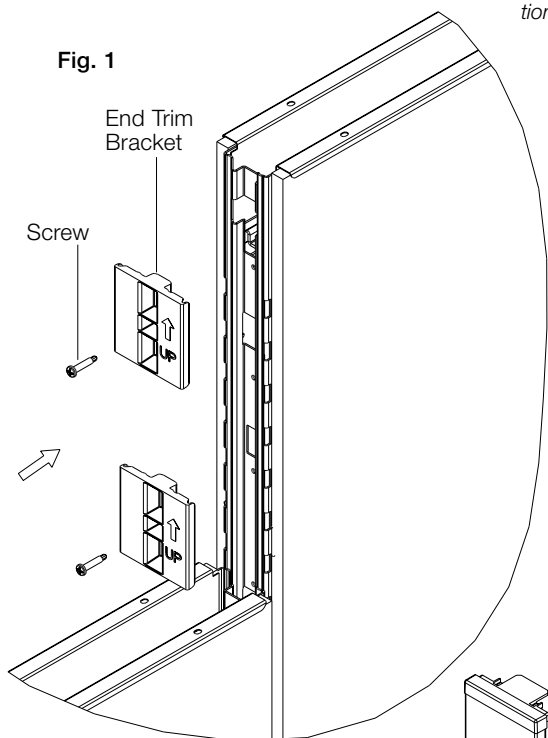


Fig. 1

Hi-Low Panel End Trim Height	Number of End Trim Brackets
7"	2
14"	2
21"	2
28"	3
36"	3

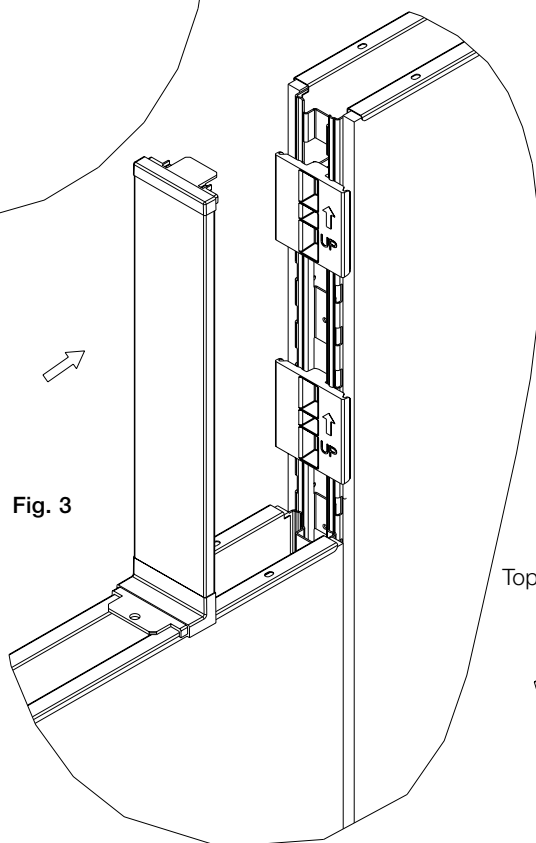


Fig. 3

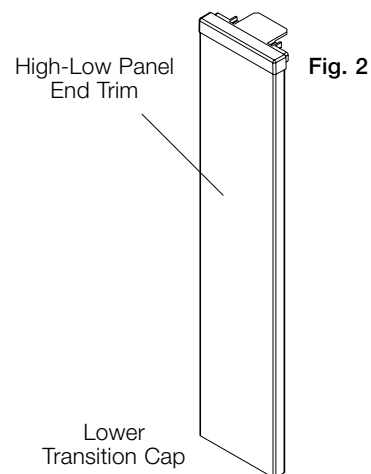


Fig. 2

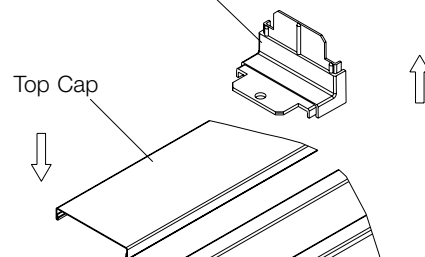


Fig. 4

### DISASSEMBLY FOR RECYCLING

#### Materials Identification and Segregation:

Where possible plastic components are marked with ASTM recycling codes. Use these codes to identify material type for recycling. Non-marked components should

be treated as mixed plastic. Ferrous metals can be identified using a small magnet for recycling. Non-ferrous metals should be separated and recycled separately.

**To disassemble product,** reverse the above installation steps.