



# Flexible Vertical Wire Manager

Reference Number: 6TP00435

HARDWARE LIST	
 <p>6TP41109 WIRE MGR,VER\SNAKE</p>	 <p>5114120 SCR,FLP #8x1 T-A BL</p>

## Tools Needed

Drill gun  
#2 Phillips driver bit  
Tape measure

## 1. Assembly Instructions

### 1.1. Mounted to a flat surface

- 1.1.1. Position the wire manager (A) as required and use fastener (B) to secure top to mounting surface. (Fig. 1)

### 1.2. Mounted to a wire cable basket

- 1.2.1. The top mount of the wire manager (A) is attached via a snap-fit. Remove the top mount by simply pulling off. (Fig. 2)

- 1.2.2. Position the remaining portion of the wire manager as required through bottom of the cable basket and re-assemble the top mount through the top of the cable basket snapping them together capturing the cable basket in-between completing the assembly. (Fig. 3)

Fig 1

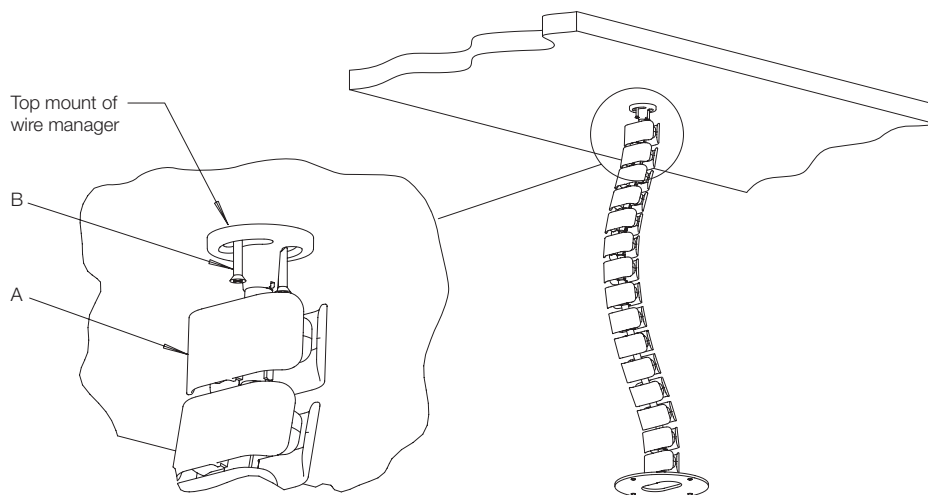


Fig 2

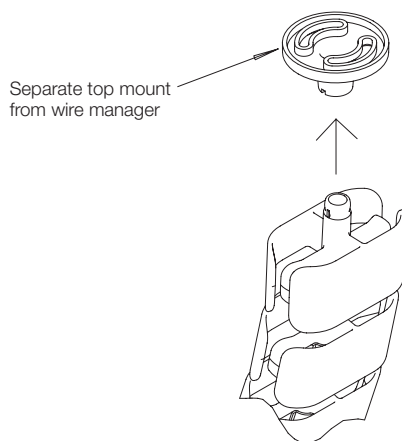


Fig 3

