








Cable Basket Kits Under-Mounted

Pattern Number: 6TP00434



HARDWARE LIST				
<div><div>A</div><div></div><div>P/N VARIES CABLE BASKET</div></div>				
<div><div>B</div><div></div><div>3AB8018 HANGER ROD, LG</div></div>	<div><div>C</div><div></div><div>3AB8016 HANGER BRACKET, UPR</div></div>	<div><div>D</div><div></div><div>3AB8017 HANGER BRACKET, BTM</div></div>	<div><div>E</div><div></div><div>5122218 SCR, TRP #14x7/8 T-AB BL</div></div>	<div><div>F</div><div></div><div>7060440 SCR, PNP 5/16-18UNCx3/4 MS BL</div></div>

Typical Configuration







Up to 24" in length

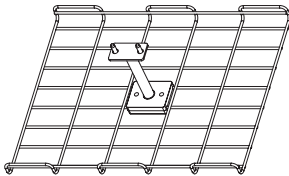

24" and up in length

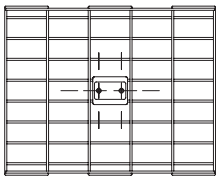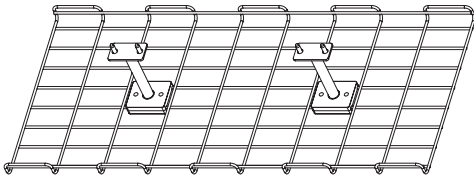

Centered

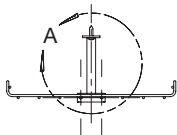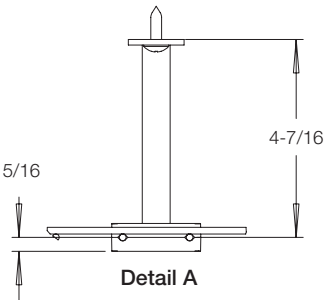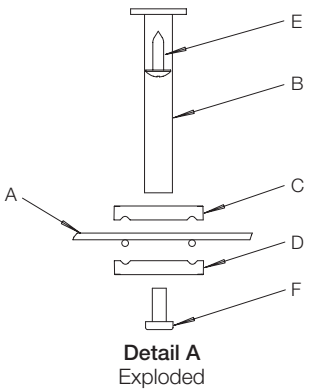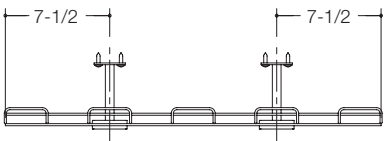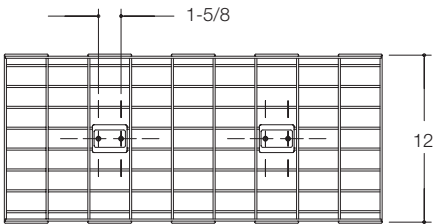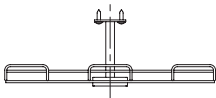

Cable Basket Kits Under-Mounted

Pattern Number: 6TP00434

Tools Needed

Drill gun
#3 Phillips driver bit
#4 Phillips driver bit
Tape measure

1. Assembly Instructions

- 1.1. Assemble the cable basket brackets (A) with the hanging rod components (B), (C) and (D) using fastener (F) based on the illustrations in the previous section titled "Typical configurations".
- 1.2. Using the basket assembly as a template, position the basket as required on the mounting surface and mark the locations of the hanger rod where it makes contact. (Fig. 1)
- 1.3. Dis-assemble the basket assembly then position and secure the hanging rods (B) using fastener (E) based on the positions marked in the previous step. (Fig. 2)
- 1.4. Re-assemble the basket assembly to complete the installation. (Fig. 3)

Fig 1

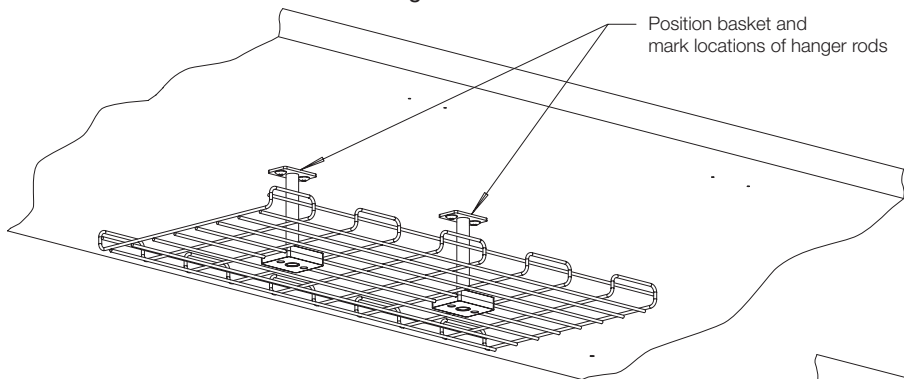


Fig 2

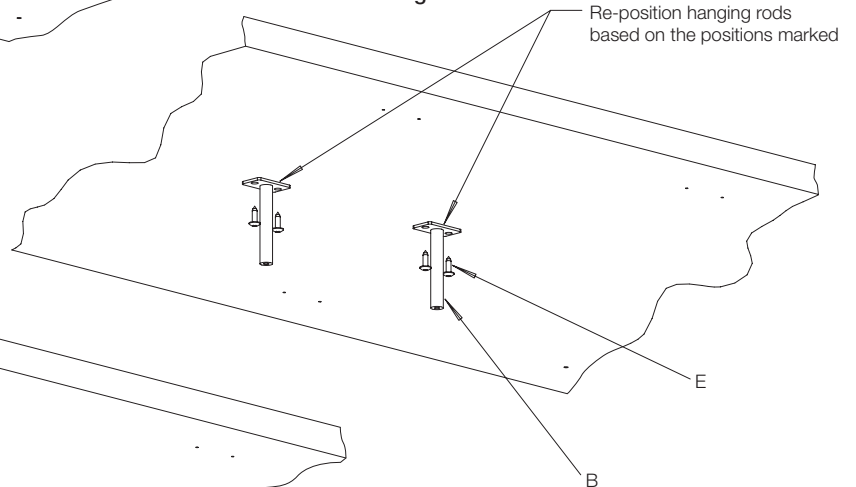


Fig 3

