
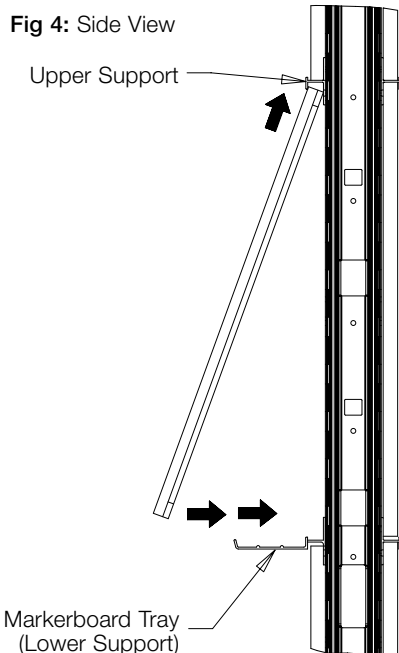
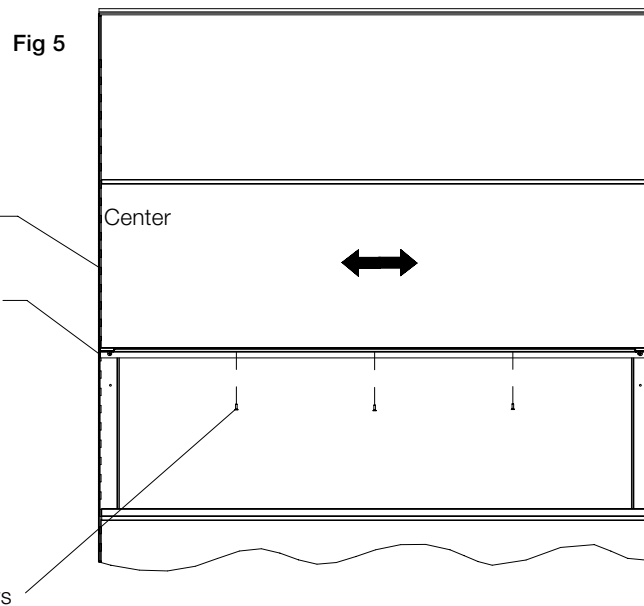
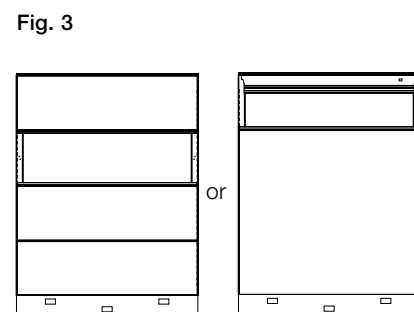
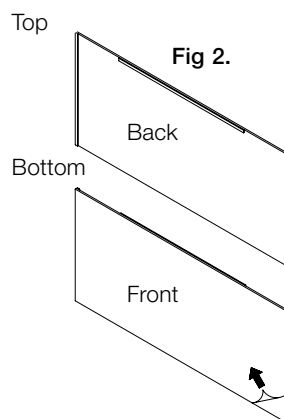


# Dividends Horizon® Markerboard

1. Install markerboard tray in desired position using (4) #10 x 3/8" screws. Screws to be mounted in all holes of markerboard tray. (Fig. 2)
2. Remove protective peel coat (clear film) from the front surface of the markerboard. (Fig. 2)
3. The top of the markerboard has neoprene, the bottom does not. See (Fig. 2)
4. Markerboards mount between tile supports. (Fig. 3) To install the markerboard, insert the top edge of the markerboard into the upper support and lift the markerboard up into the upper support until the lower edge clears the lower support channel. Then slide markerboard down to seat in the lower support. (Fig. 4) Center markerboard horizontally on the panel. (Fig. 5)
5. Drive (1,2 or 3 depending on size) #6 x 1/2" flat head screws into the bottom of the markerboard. (Fig. 5)

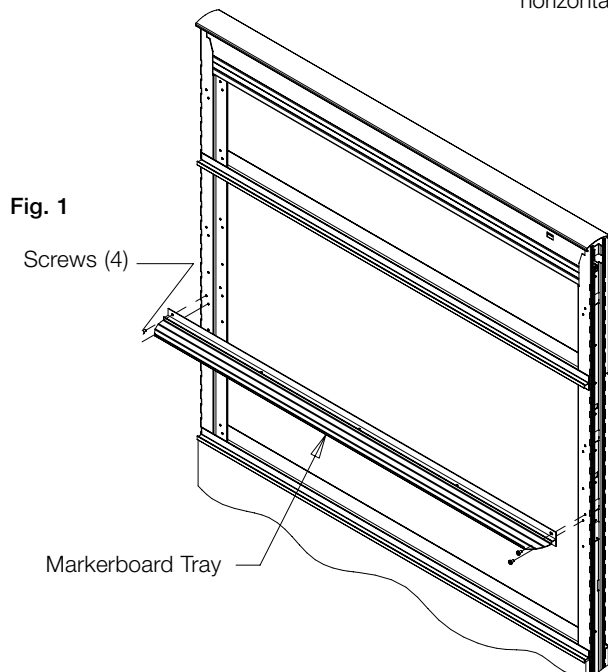

## DISASSEMBLY FOR RECYCLING

### Materials Identification and Segregation:

Where possible plastic components are marked with ASTM recycling codes. Use these codes to identify material type for recycling. Non-marked components should be treated as mixed plastic. Ferrous metals can be identified using a small magnet

for recycling. Non-ferrous metals should be separated and recycled separately.

**To disassemble product,** reverse the above installation steps.