

LSM Table - Installation Instructions

Pattern number: L3-RV01, L3-RV04


EXPLODED VIEW.

Parts List:

- A. V-Base
- B. Glide (3 per base)
- C. Trough
- D. Bottom Access Panels w/ Thumb Screw
- E. Plastic Covers for Trough Cutouts
- F. 1/4-20 x 3/4" Washer Head Screw (Trough to V-Base)
- G. #12 x 3/4" Phillips Pan Head Wood Screw (Trough to Top/Subtop)
- H. 5/16-18 x 1" Phillips Pan Head Machine Screw (V-Base to Top/Subtop)

Tools needed:

- Phillips screwdriver
- Adjustable wrench
- Allen wrenches

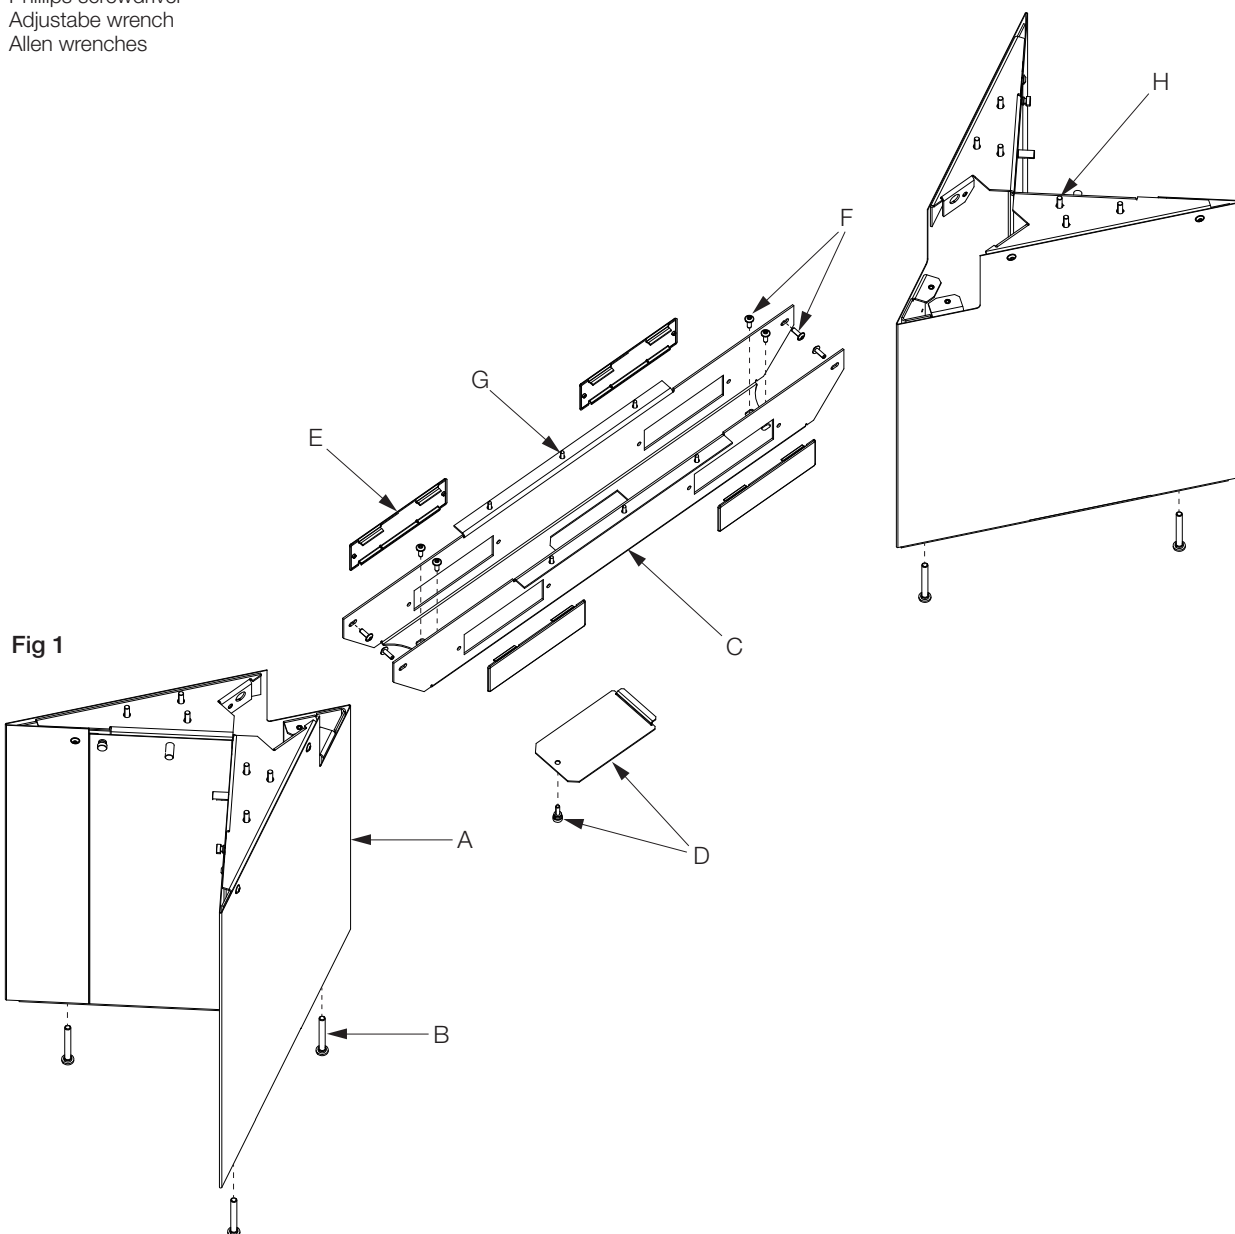

LSM Table - Installation Instructions

Pattern number: L3-RV01, L3-RV04

HARDWARE



1/4-20 x 3/4"
Washer Head Screw

F



#12 x 3/4"
Phillips Pan Head Wood Screw

G



5/16-18 x 1"
Phillips Pan Head Machine Screw

H

LSM Table - Installation Instructions

Pattern number: L3-RV01, L3-RV04

STEPS.

1. Remove the V-bases (A) from their boxes. They are fully assembled. Locate the table cross channel (trough). All hardware is included.
2. Adjust the glides (B) of the V-bases so that they are just proud to the base skirts edge

Fig 2


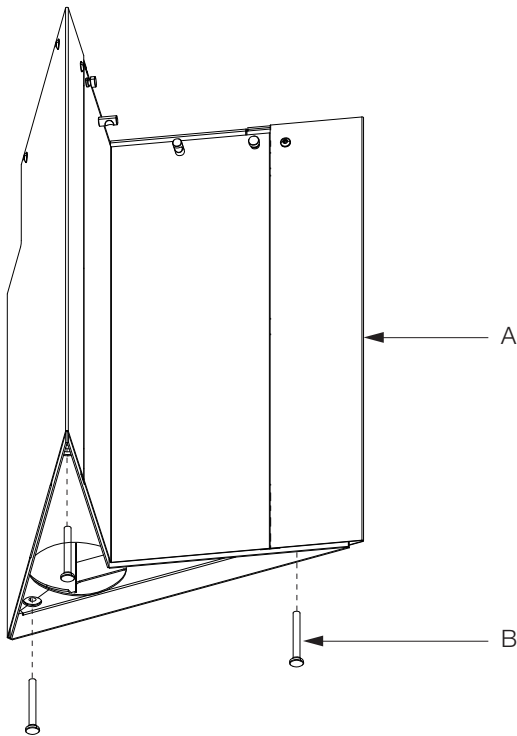


Fig 3


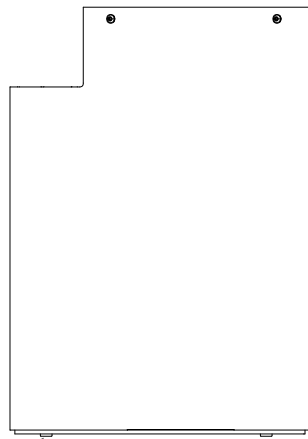


LSM Table - Installation Instructions

Pattern number: L3-RV01, L3-RV04

STEPS.

3. Set the V-bases (A) on desired location approximately trough (C) length apart and insert the trough.

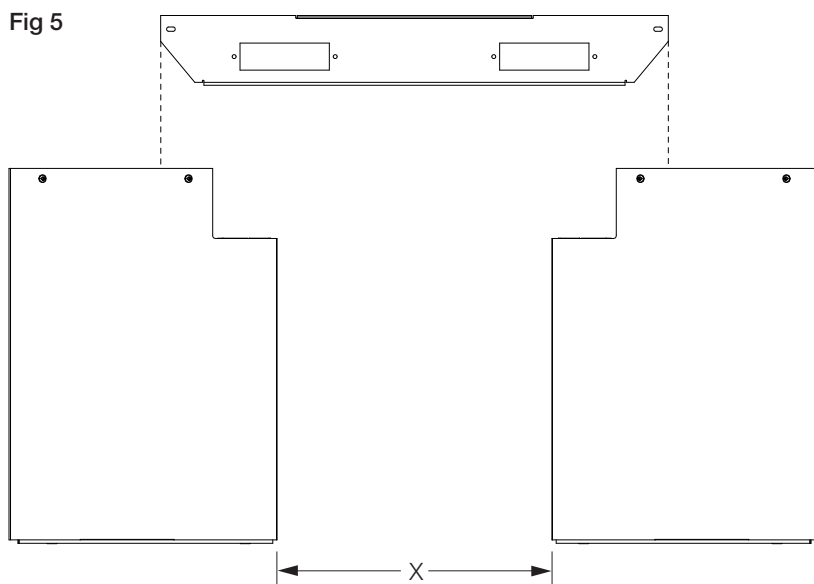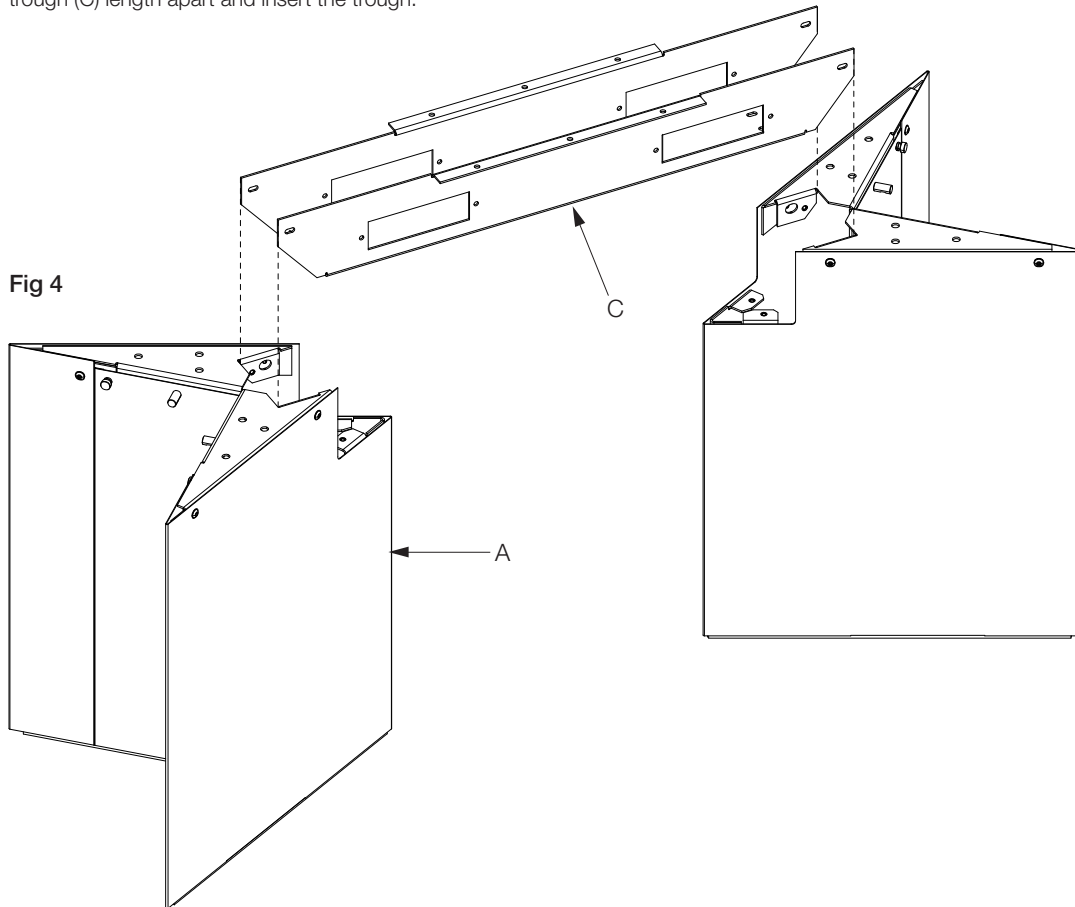

Dimensions (X) Between V-bases

For table: L3-RV01, X = 20¹/₈"

For table: L3-RV04, X = 20¹/₈"


LSM Table - Installation Instructions

Pattern number: L3-RV01, L3-RV04

STEPS.

4. Attach the Trough End (C) to the V-Base (A) with 1/4-20 x 3/4" Washer Head Screws (F).

Do not completely tighten these screws.
Adjustment for the top attachment is usually needed.

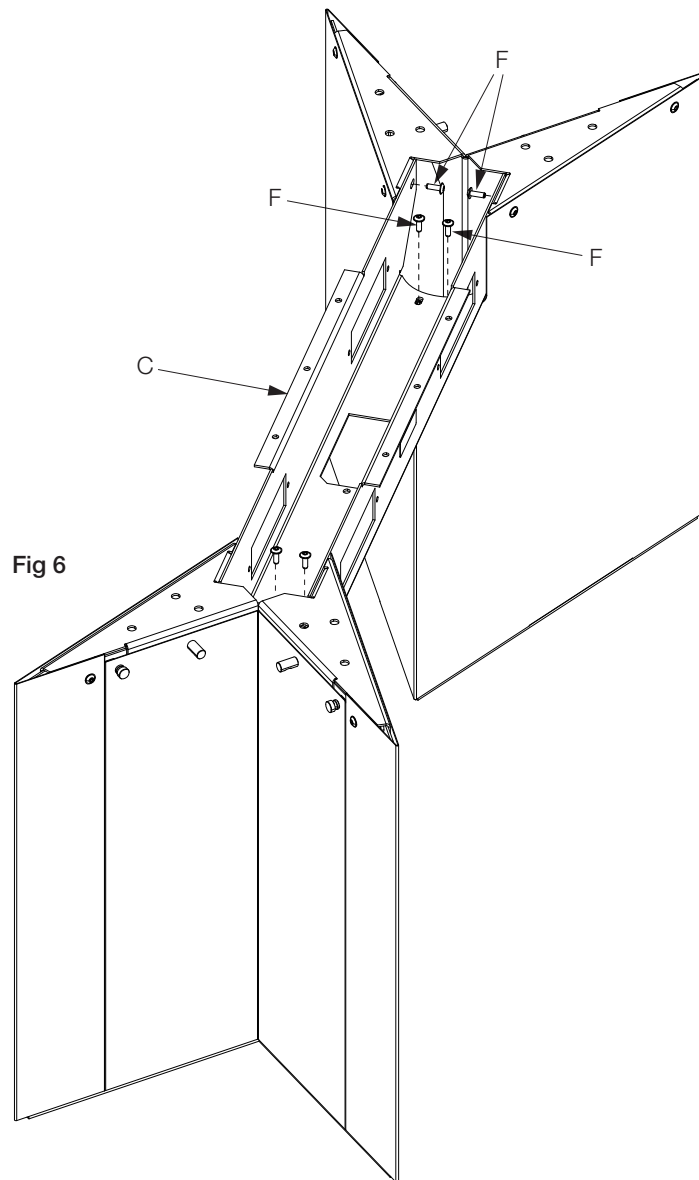


LSM Table - Installation Instructions

Pattern number: L3-RV01, L3-RV04

STEPS.

5. Take off the V-Base (A) removable panel by unscrewing the two thumb screws and then lift the cover with two round knobs.

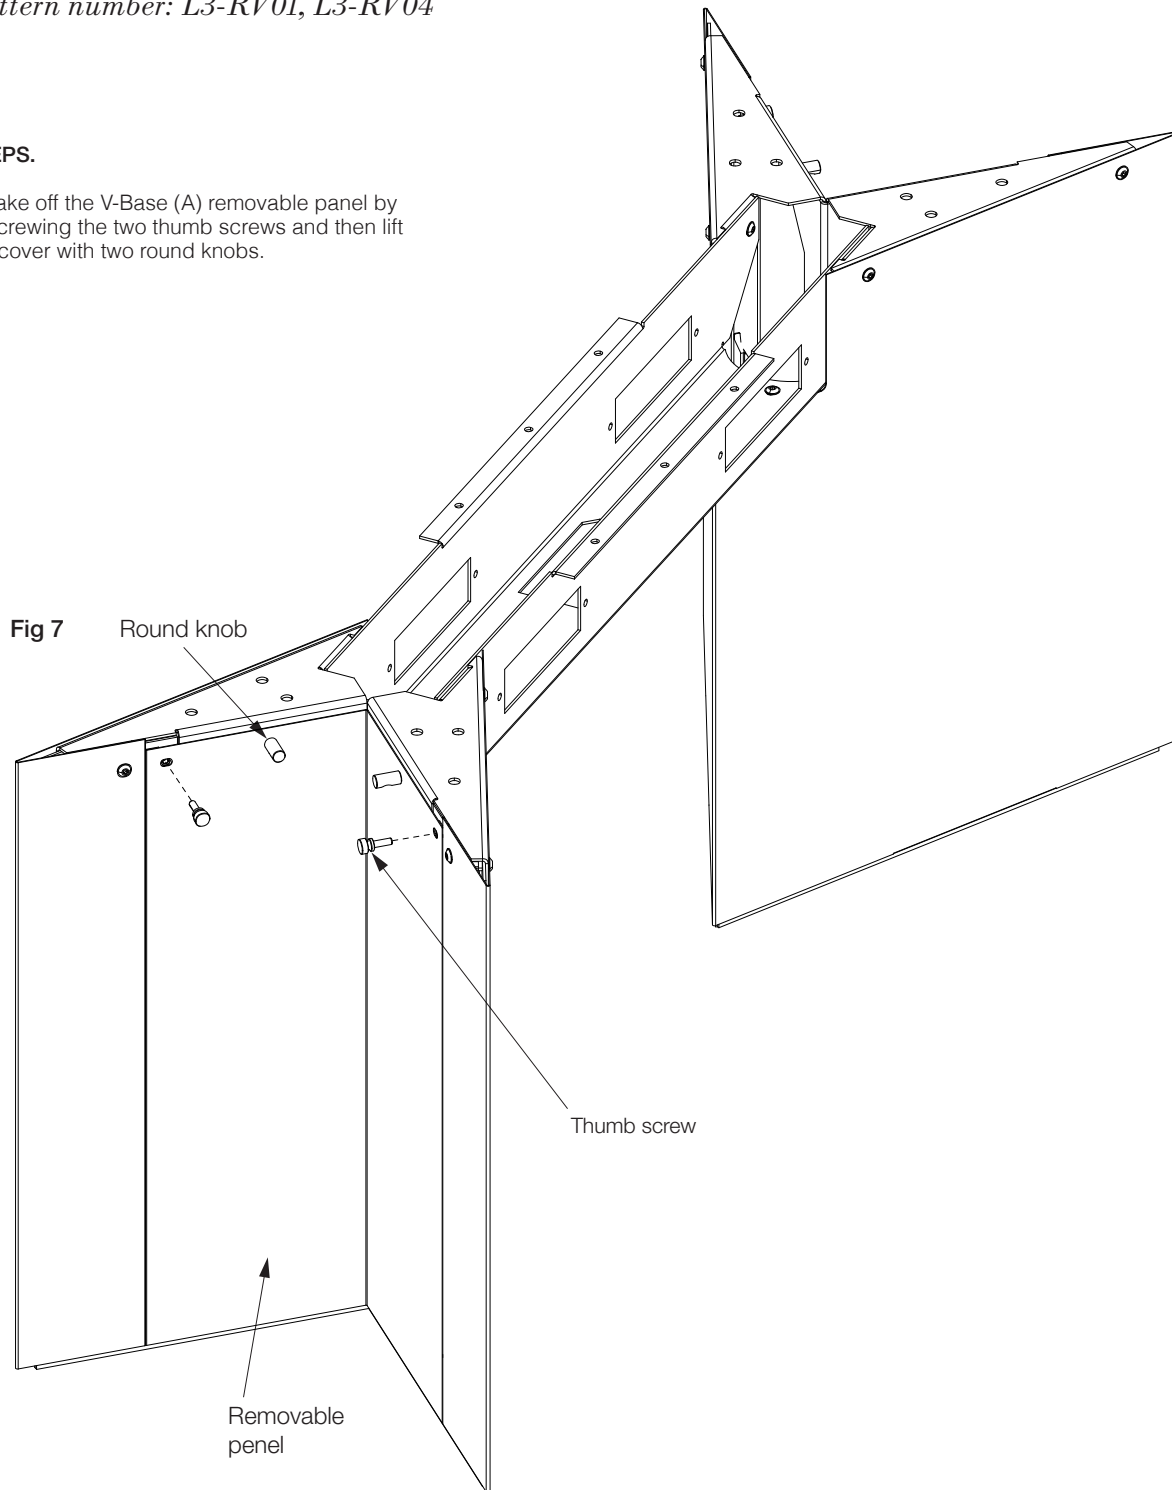

LSM Table - Installation Instructions



Pattern number: L3-RV01, L3-RV04

STEPS.

6. Insert the Powerport into the trough if applicable.
Fasten with thumb screws.

Run the Powerport cables through the V-Base to the floor monument (power outlet).

Insert Blank Plastic Cover Plates (E) into the trough cutouts where Powerports are not used.

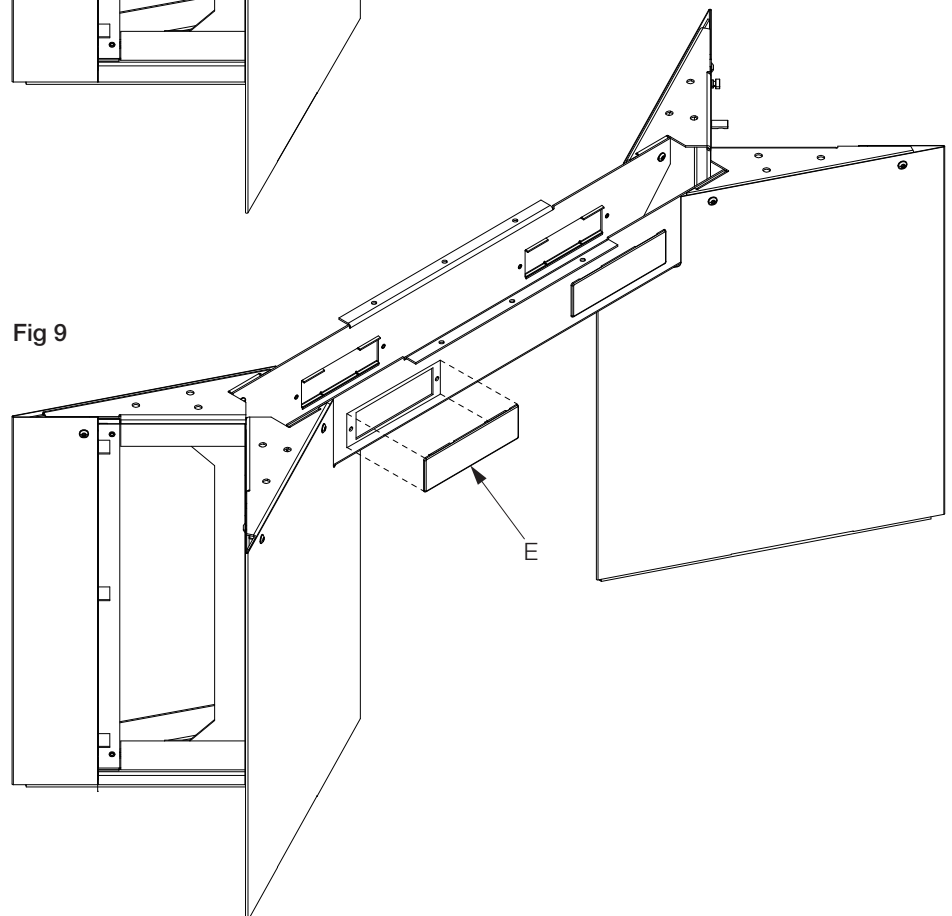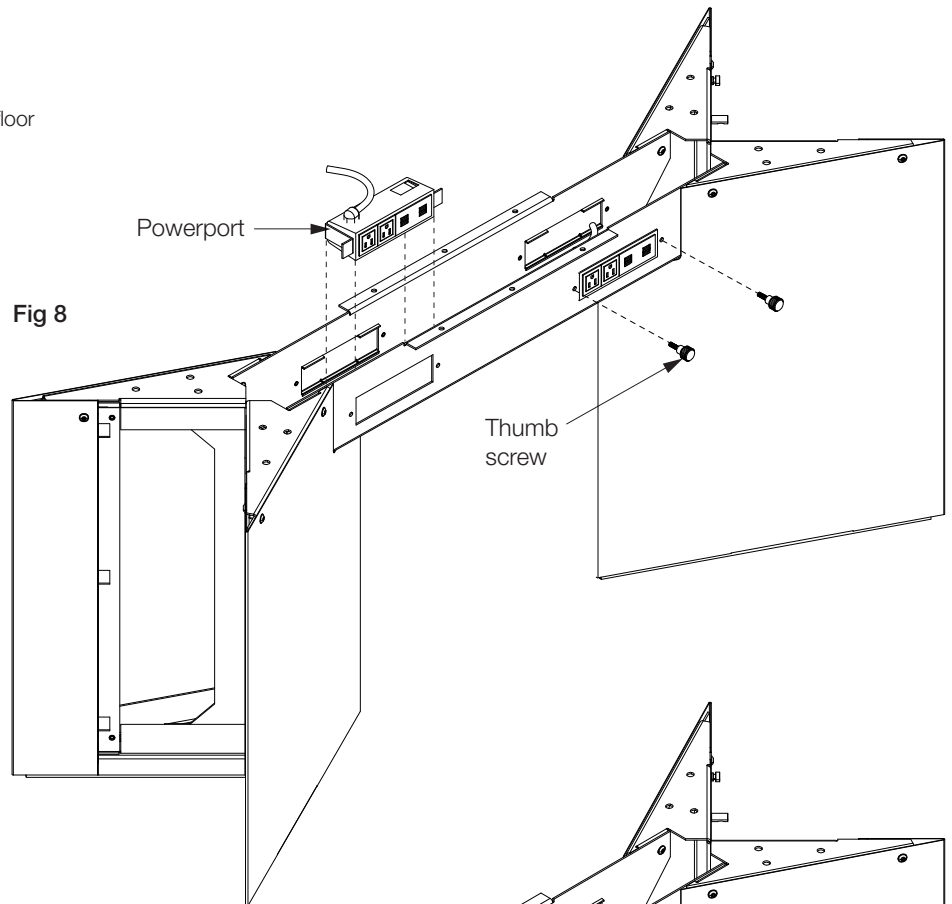

LSM Table - Installation Instructions

Pattern number: L3-RV01, L3-RV04

STEPS.

7. If there is any table top electrical box, use the bottom trough latch (D) and the V-Base Removable Cover Opening for wiring access and installation. Insert and fasten the latch with thumb screws.

8. Adjust the glides (B) that are incorporated into the V-Bases to level the entire assembly so that the top surface is flat and horizontal.

Fig 10


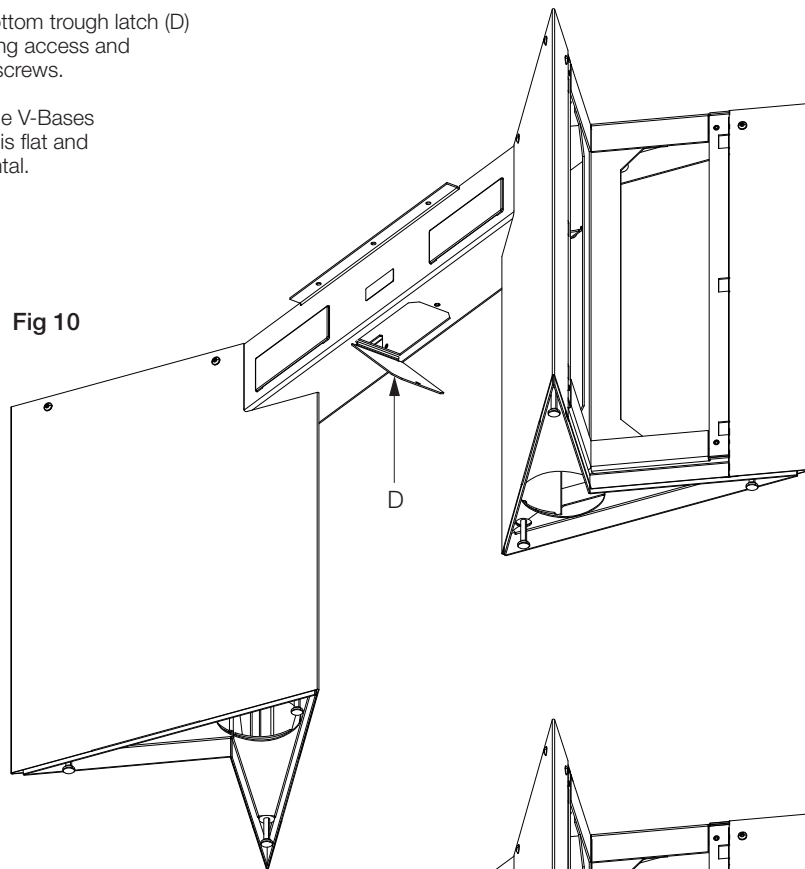


Fig 11

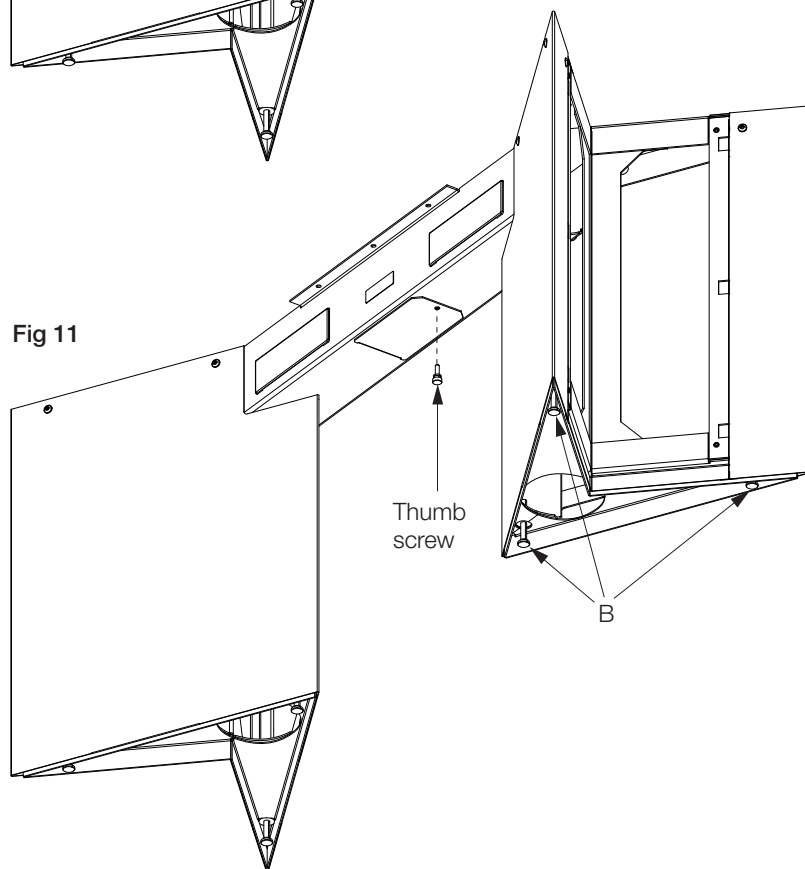

LSM Table - Installation Instructions

Pattern number: L3-RV01, L3-RV04

STEPS.

9. Attach either the Subtop or Table Top to the V-Base with 5/16-18 x 1" Phillips Pan Head Screws (H). Access these screws through the removable cover opening. The Subtops / Top have threaded inserts.

Note: Veneer and Laminate tops do not have subtops. All other materials require a subtop.

10. Attach the Trough to the subtop / top with #12 x 3/4" Phillips Pan Head Wood Screws (G).

11. Attach the Removable Base panels and tighten the (2) thumb screws.

12. If a separate top is placed on the subtop, shim as required to make all the sections level.

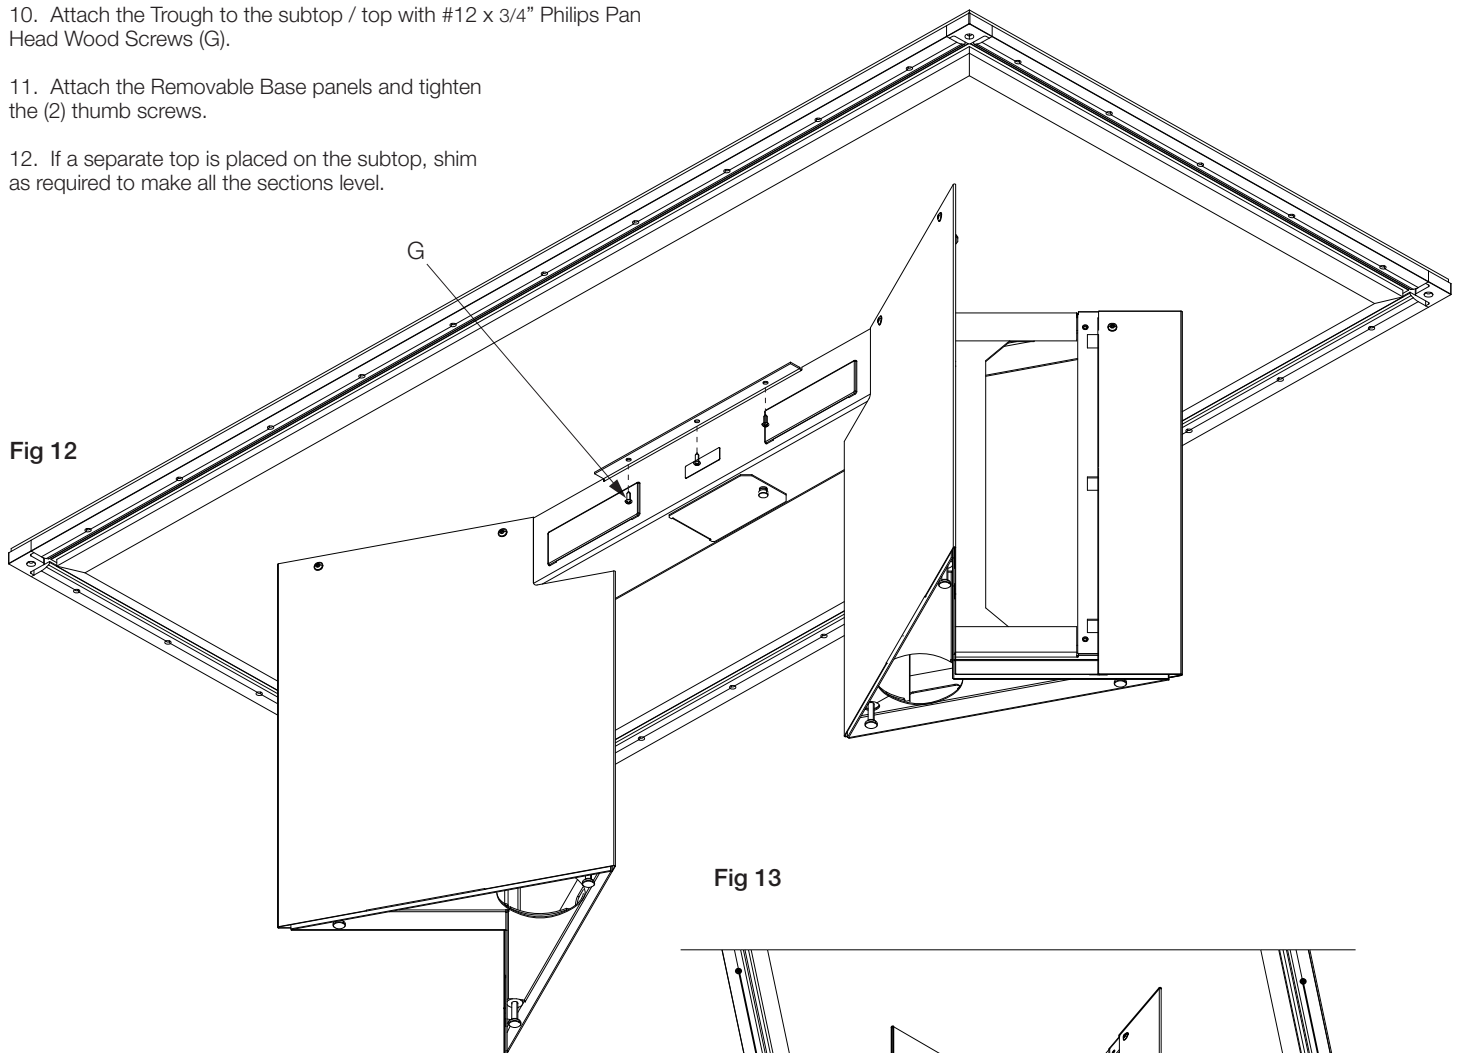


Fig 12

Fig 13

