

Sapper XYZ® Interpole Direct Channel Mount: Attach Mount to Interpole and then Arm to Mount

Tools Needed


Allen wrenches (in inches)

- Bracket – 5/32" (G)
- Phillips Screwdriver
- Anti-dislodgement – 5/64" (J)

1. If applicable, remove and retain any channel cover from Interpole.
Establish desired height on Interpole then drill (3) pilot holes for screws (A).

Note: Bottom of monitor support arm post will be almost 1/4" below the center mounting screw.

2. Install bracket (B) using (3) screws (A).
3. Attach mount plate (C) using (4) screws (D).
4. Install hooking plate (E) with top hook oriented up using washers (F) and screws (G).
5. Hang mounting bracket (H) onto hooking plate (E) by engaging hanger bar (I) with top hook. Seat mounting bracket (H) down fully and secure with screw (J).
6. Install Sapper XYZ monitor arm by sliding the hole in the bottom of the post onto stem of mounting bracket (H). Seat firmly.
7. If applicable, cut Interpole channel cover carefully to correct lengths for below and above mount and reinstall.

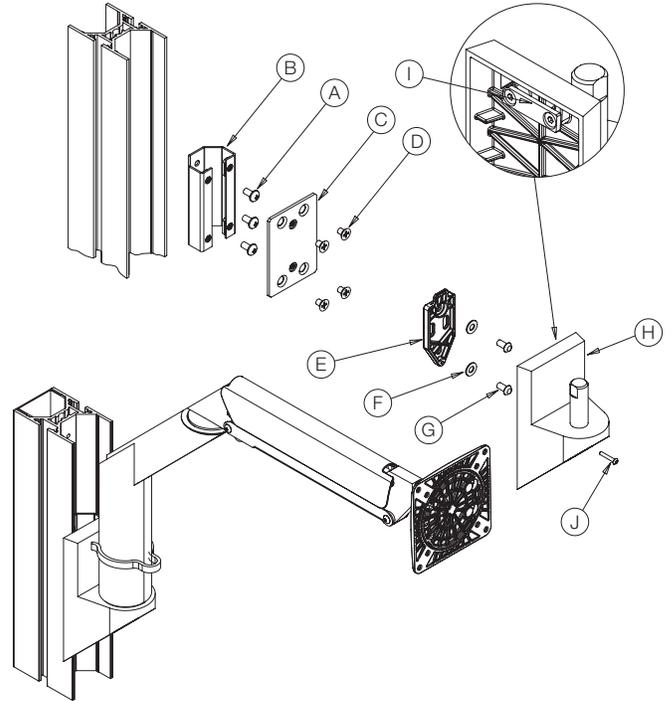

For complete monitor arm installation instructions, visit exchange.knoll.com/products/knollextra_inst.jsp

Sapper XYZ® Interpole Direct Channel Mount: Attach Mount to Interpole and then Arm to Mount

Tools Needed


Allen wrenches (in inches)

- Bracket – 5/32" (G)
- Phillips Screwdriver
- Anti-dislodgement – 5/64" (J)

1. If applicable, remove and retain any channel cover from Interpole.
Establish desired height on Interpole then drill (3) pilot holes for screws (A).

Note: Bottom of monitor support arm post will be almost 1/4" below the center mounting screw.

2. Install bracket (B) using (3) screws (A).
3. Attach mount plate (C) using (4) screws (D).
4. Install hooking plate (E) with top hook oriented up using washers (F) and screws (G).
5. Hang mounting bracket (H) onto hooking plate (E) by engaging hanger bar (I) with top hook. Seat mounting bracket (H) down fully and secure with screw (J).
6. Install Sapper XYZ monitor arm by sliding the hole in the bottom of the post onto stem of mounting bracket (H). Seat firmly.
7. If applicable, cut Interpole channel cover carefully to correct lengths for below and above mount and reinstall.

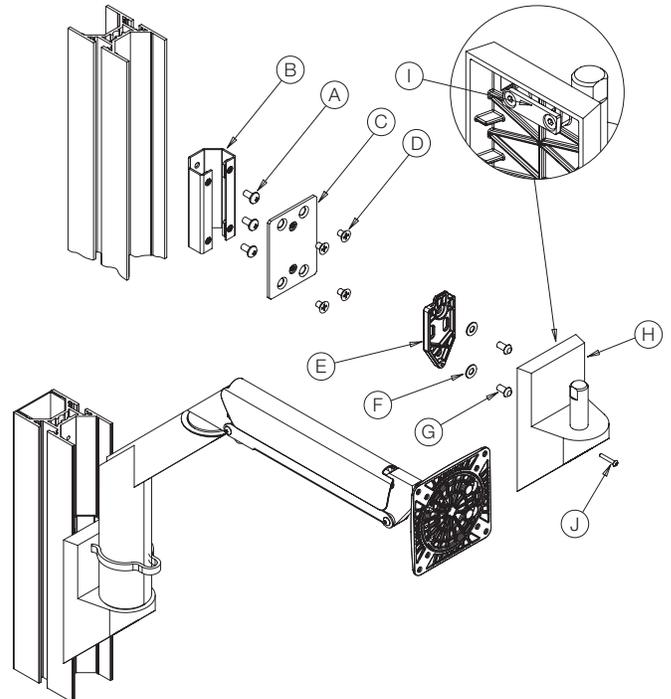

For complete monitor arm installation instructions, visit exchange.knoll.com/products/knollextra_inst.jsp