

# Dividends Horizon® Rolling Door Screen Mount Header

1. Remove Header and hardware kit from packaging and recycle packaging.
2. Remove top screw from screen in upper corner (**Fig. 1**) and set aside.
3. Position Screen Mount Header Bracket as shown, pushed down tight against the top of the screen. Re-install top screw from screen in upper corner (**Fig. 2**). Be careful not to strip the threads.
4. Install #10 x 1/2" self-drilling screw through pilot hole in Header Bracket (**Fig. 3**).
5. Install #10-24 x 3/8" screws through Mounting Bracket, into pilot holes in Header (**Fig. 4**).
6. Continue with installation of door.

Fig. 1

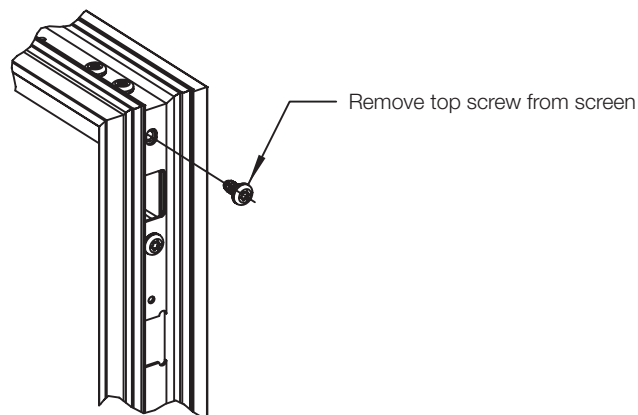


Fig. 2

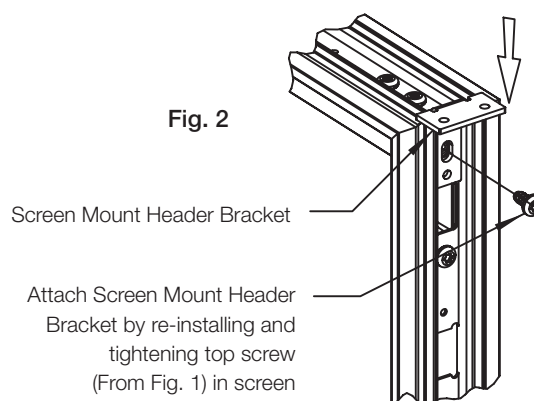


Fig. 3


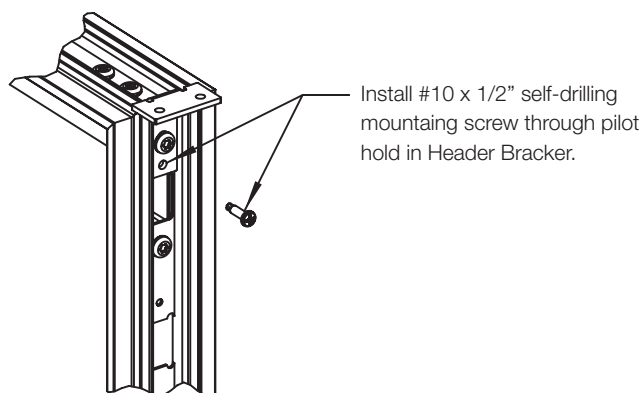


Fig. 4

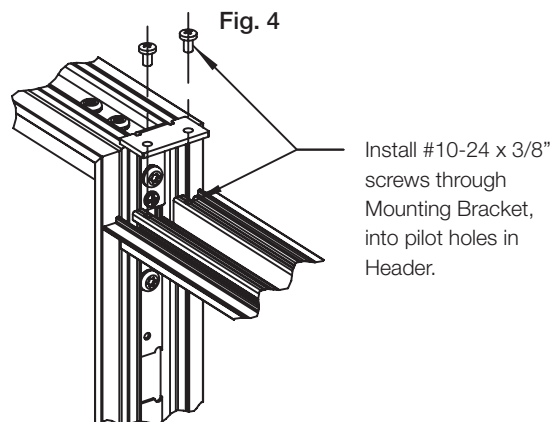

## DISASSEMBLY FOR RECYCLING

### Materials Identification and Segregation:

Where possible plastic components are marked with ASTM recycling codes. Use these codes to identify material type for recycling. Non-marked components should be treated as mixed plastic. Ferrous metals can be identified using a small magnet for recycling. Non-ferrous metals should be separated and recycled separately.

To disassemble product, reverse the above installation steps.