

LSM Table - Installation Instructions

Pattern number: L3-SV22, L3-SV24, L3-SV26, L3-SV32, L3-SV35, L3-TV52


EXPLODED VIEW.

Parts List:

- A. V-Base
- B. Glide (3 per base)
- C. Trough
- D. Side Rail
- E. Bottom Access Panels w/ Thumb Screw
- F. Plastic Covers for Trough Cutouts
- G. 5/16-18 Serrated Flange Nut (Support Rail to V-Base)
- H. 5/16-18 x 1" Black Flat Head, Phillips Machine Screw (Support Rail to V-Base)
- I. 1/4-20 x 3/4" Washer Head Screw (Trough to V-Base)
- J. #12 x 3/4" Phillips Pan Head Wood Screw (Trough to Top/Subtop)
- K. 5/16-18 x 1" Phillips Pan Head Machine Screw (V-Base to Top/Subtop)
- L. 5/16-18 x 3/4" Phillips Flat Head Machine Screw (Mending Plate to Top/Subtop)
- M. Black Mending Plate

Tools needed:

- Phillips screwdriver
- Adjustable wrench
- Allen wrenches

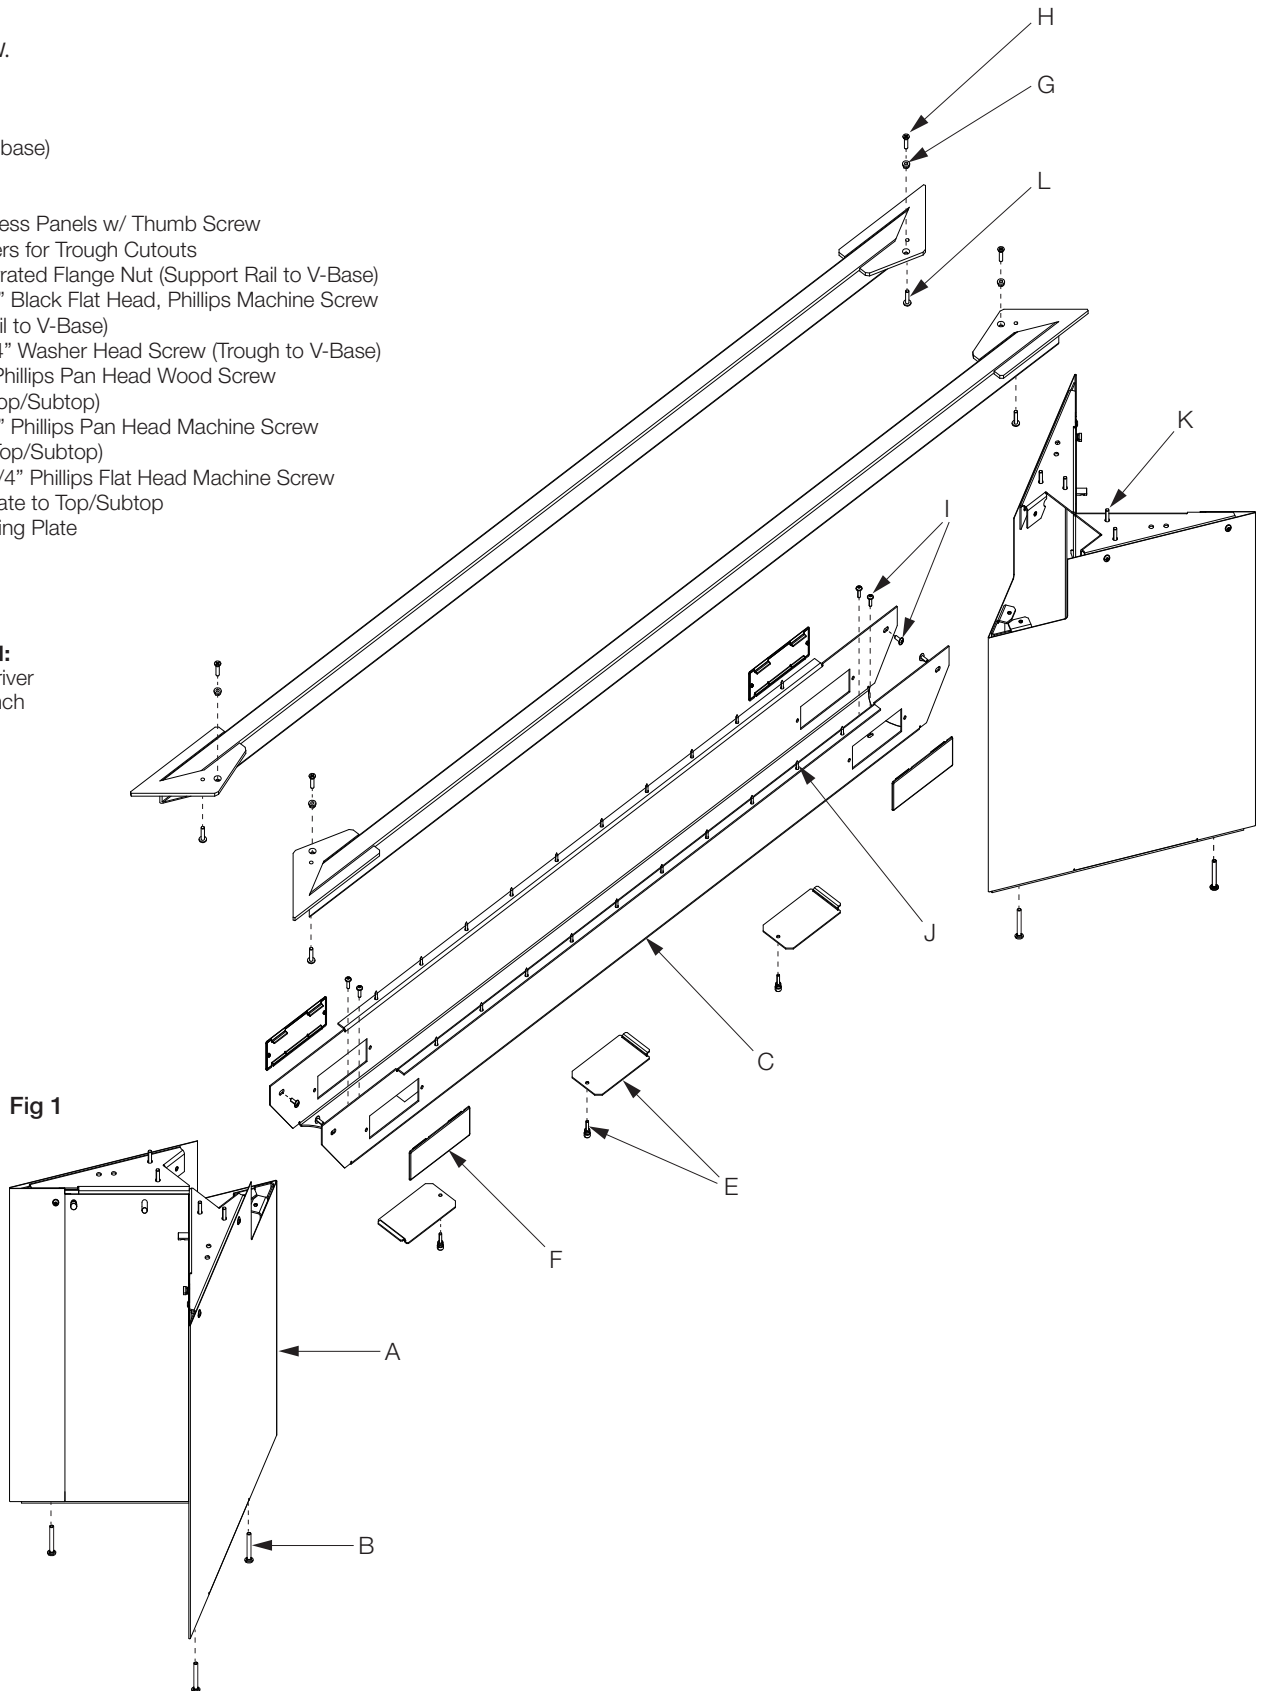

LSM Table - Installation Instructions

Pattern number: L3-SV22, L3-SV24, L3-SV26, L3-SV32, L3-SV35, L3-TV52

HARDWARE



5/16-18
Serrated Flange Nut
G



5/16-18 x 1"
Black Flat Head Phillips
machine screw
H



1/4-20 x 3/4"
Washer Head Screw
I



#12 x 3/4"
Phillips Pan Head Wood Screw
J



5/16-18 x 1"
Phillips Pan Head Machine
Screw
K



5/16-18 x 3/4"
Flat Head Machine Screw
L

LSM Table - Installation Instructions

Pattern number: L3-SV22, L3-SV24, L3-SV26, L3-SV32, L3-SV35, L3-TV52

STEPS.

1. Remove the LSM V bases from boxes. They are fully assembled. Locate the table cross channel (trough) and side rails. All hardware is included.
2. Adjust the glides (B) of the V bases so that they are just proud to the base skirts edge

Fig 2


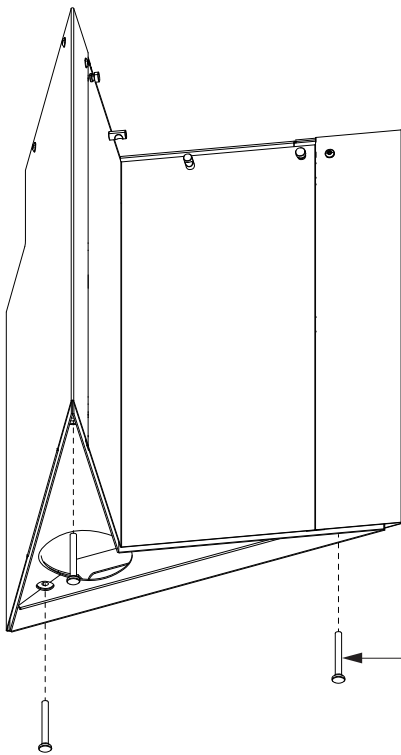


Fig 3

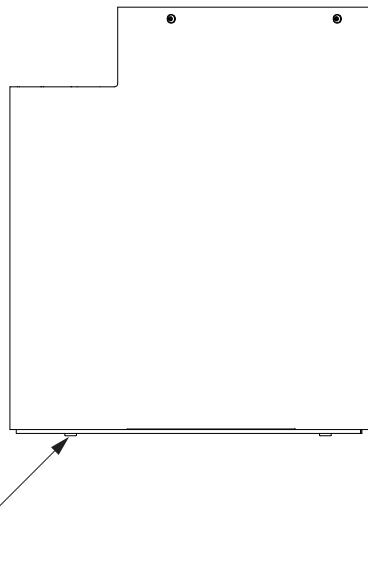


LSM Table - Installation Instructions

Pattern number: L3-SV22, L3-SV24, L3-SV26, L3-SV32, L3-SV35, L3-TV52


STEPS.

3. Set the V-bases (A) on desired location approximately trough (C) length apart and insert the trough.

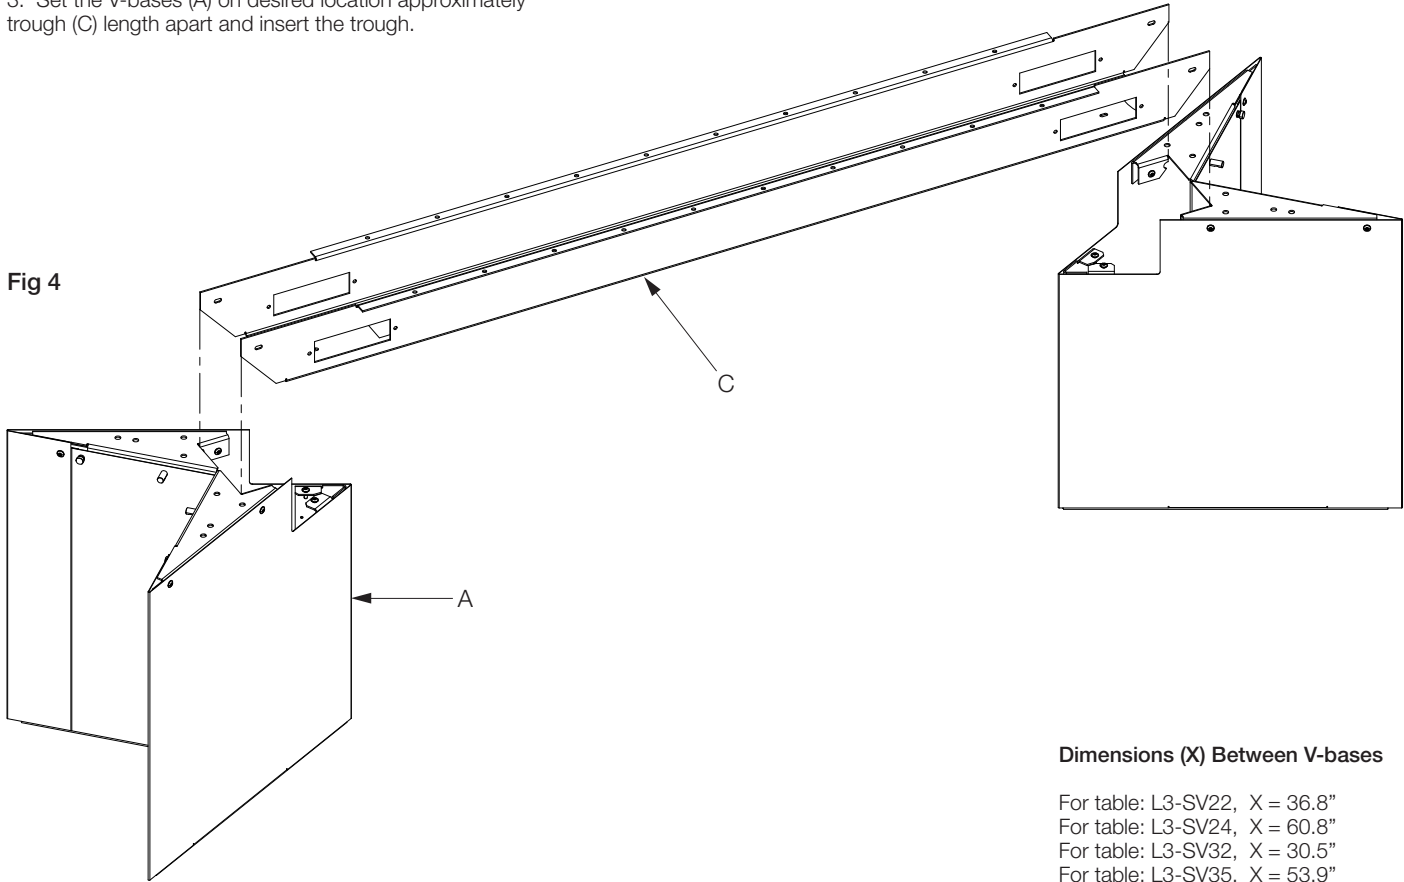

Dimensions (X) Between V-bases

For table: L3-SV22, X = 36.8"
For table: L3-SV24, X = 60.8"
For table: L3-SV32, X = 30.5"
For table: L3-SV35, X = 53.9"
For table: L3-TV52, X = 84.8"
For table: L3-SV26, Y = 25.5"

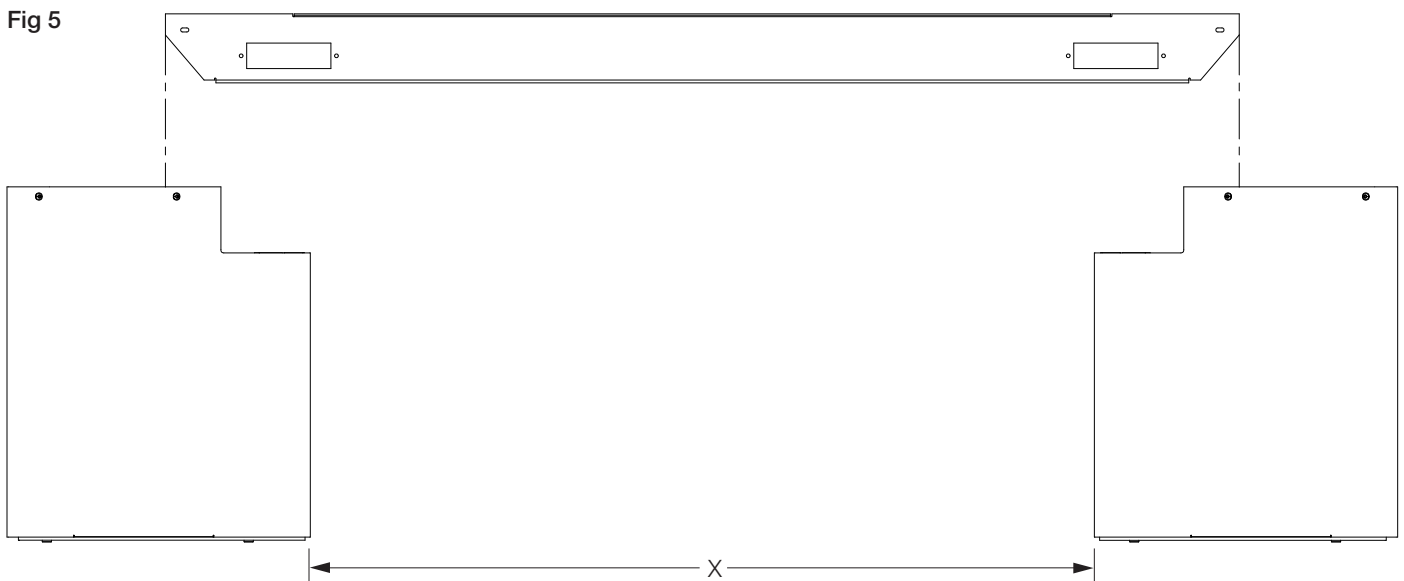


LSM Table - Installation Instructions

Pattern number: L3-SV22, L3-SV24, L3-SV26, L3-SV32, L3-SV35, L3-TV52

STEPS.

4. Attach the Trough End (C) to the V-Base (A) with 1/4-20 x 3/4" Washer Head Screws (I)

Do not completely tighten these screws.
Adjustment for the top attachment is usually needed.

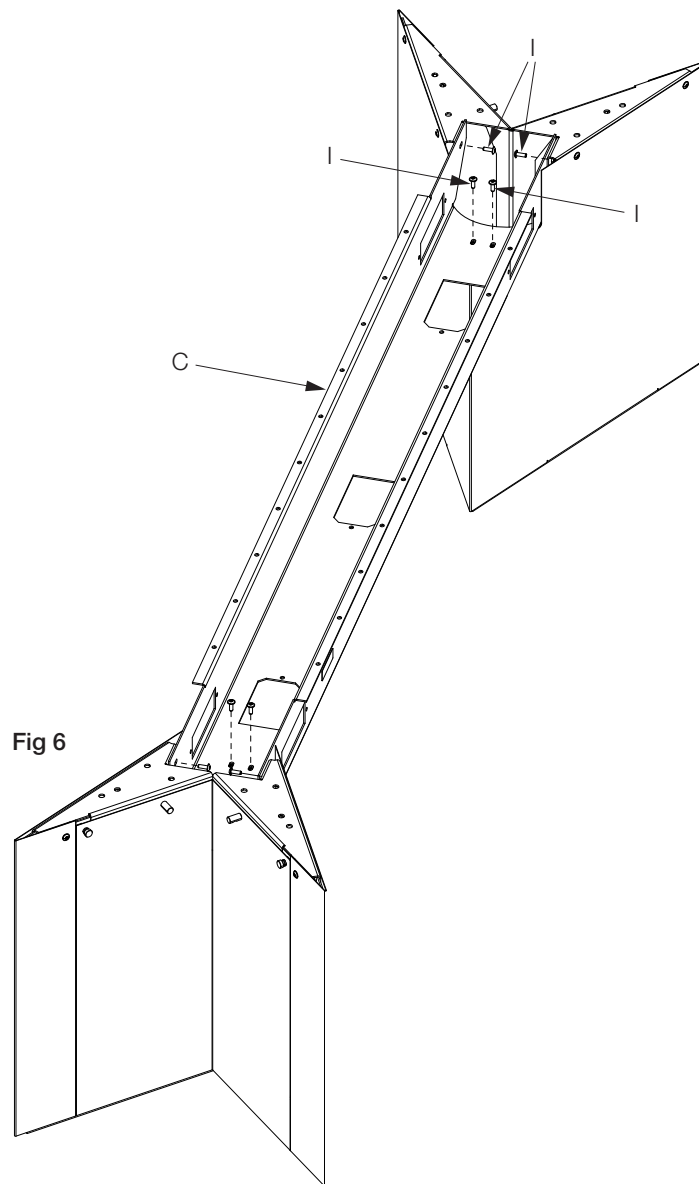


LSM Table - Installation Instructions

Pattern number: L3-SV22, L3-SV24, L3-SV26, L3-SV32, L3-SV35, L3-TV52

STEPS.

5. Take off the V-Base (A) removable panel by unscrewing the two thumb screws and then lift the cover with two round knobs.

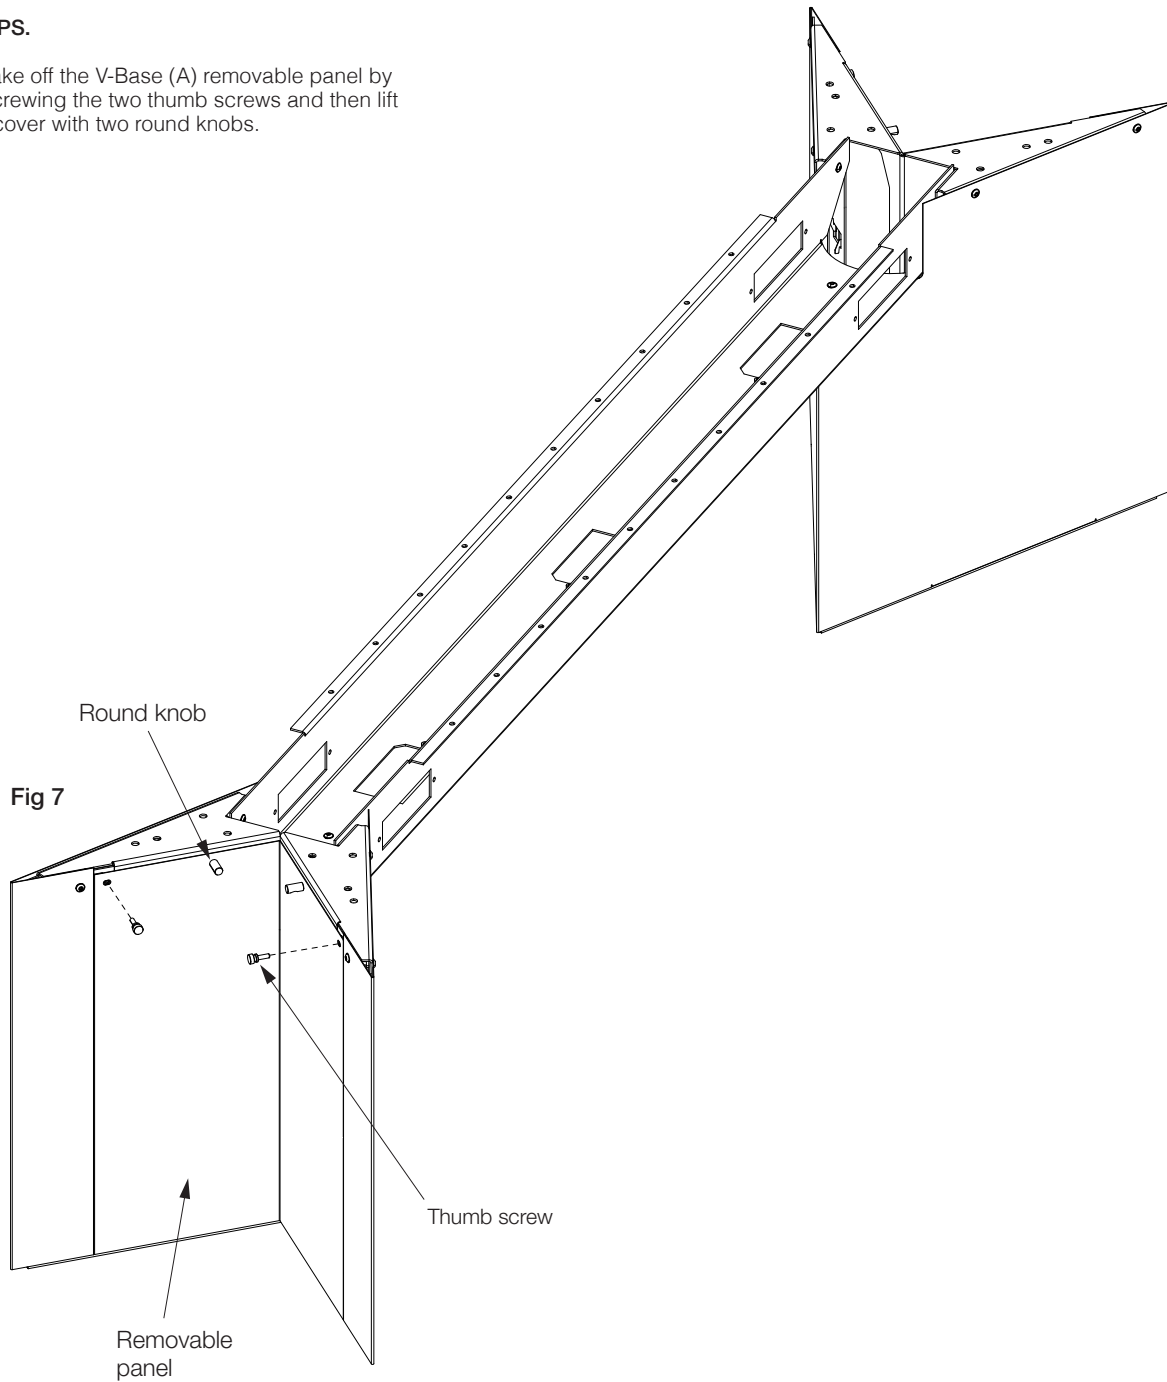


LSM Table - Installation Instructions

Pattern number: L3-SV22, L3-SV24, L3-SV26, L3-SV32, L3-SV35, L3-TV52

STEPS.

6. Attach the side rails (D) using (4) 5/16-18 Black Flat Head Screws and 5/16-18 Serrated Flange Nuts.

Use the removable panel opening to access the 5/16-18 Serrated Flange Nuts (G).

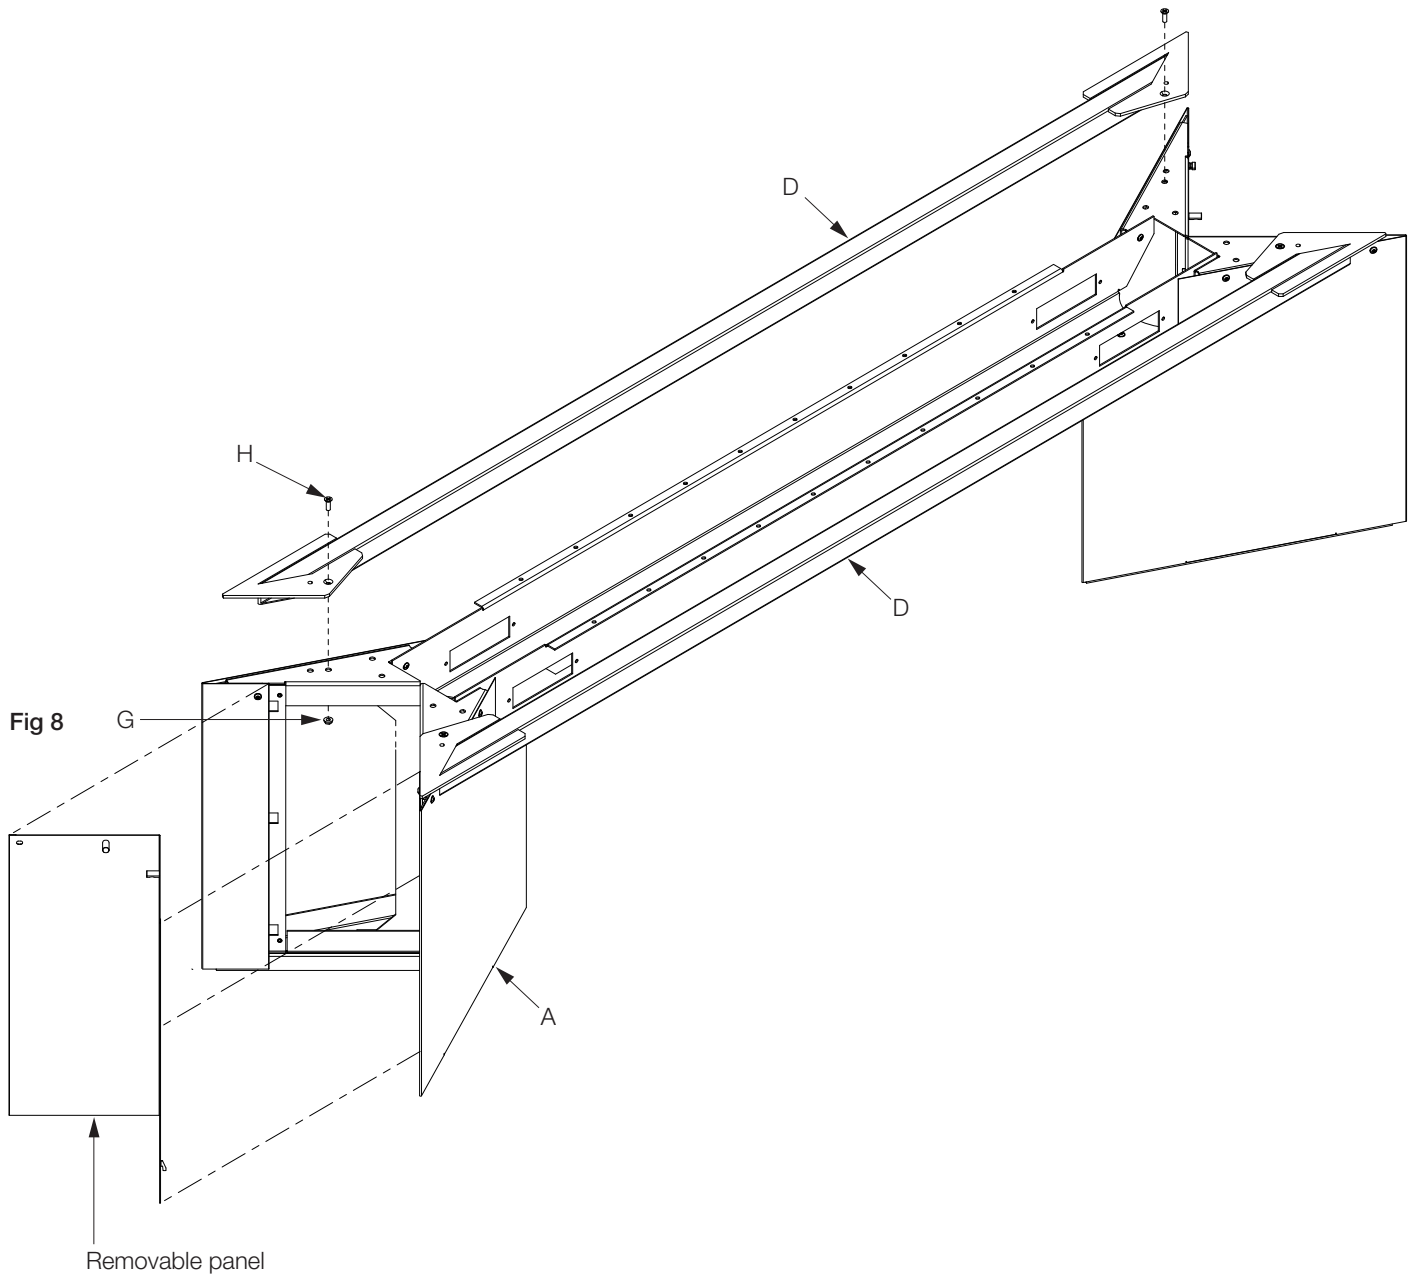

LSM Table - Installation Instructions


Pattern number: L3-SV22, L3-SV24, L3-SV26, L3-SV32, L3-SV35, L3-TV52

STEPS.

7. Insert the Powerport into the trough if applicable.
Fasten with thumb screws.

Run the Powerport cables through V-Base to the floor monument (power outlet).

Insert Blank Plastic Cover Plates (F) into the trough cutouts where Powerports are not used.

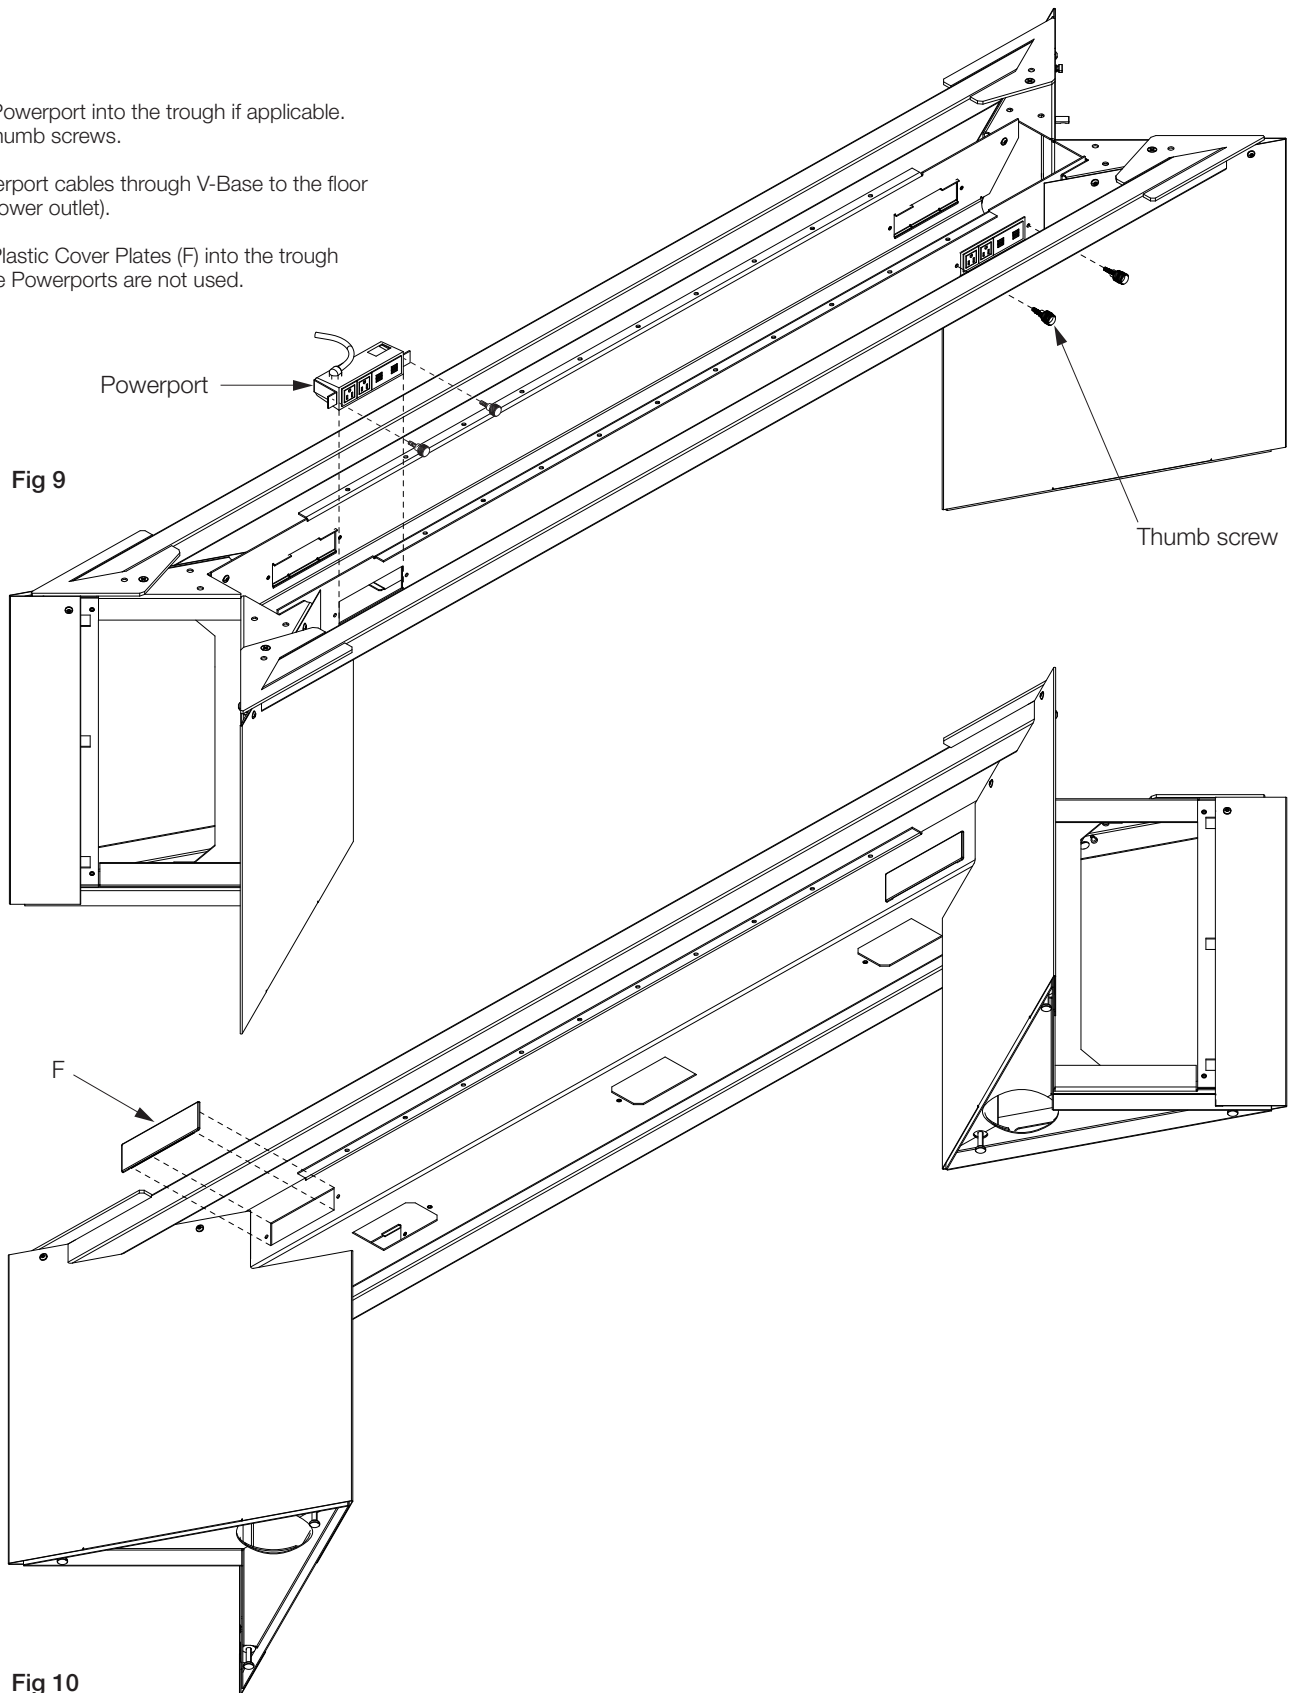


LSM Table - Installation Instructions

Pattern number: L3-SV22, L3-SV24, L3-SV26, L3-SV32, L3-SV35, L3-TV52

STEPS.

8. If there is any table top electrical box, use the bottom trough latch (E) and the V-Base Removable Cover Opening for wiring access and installation. Insert and fasten the latch with thumb screws.

9. Adjust the glides (B) that are incorporated into the V-Bases to level the entire assembly so that the top surface is flat and horizontal. so that the top surface is flat and horizontal.

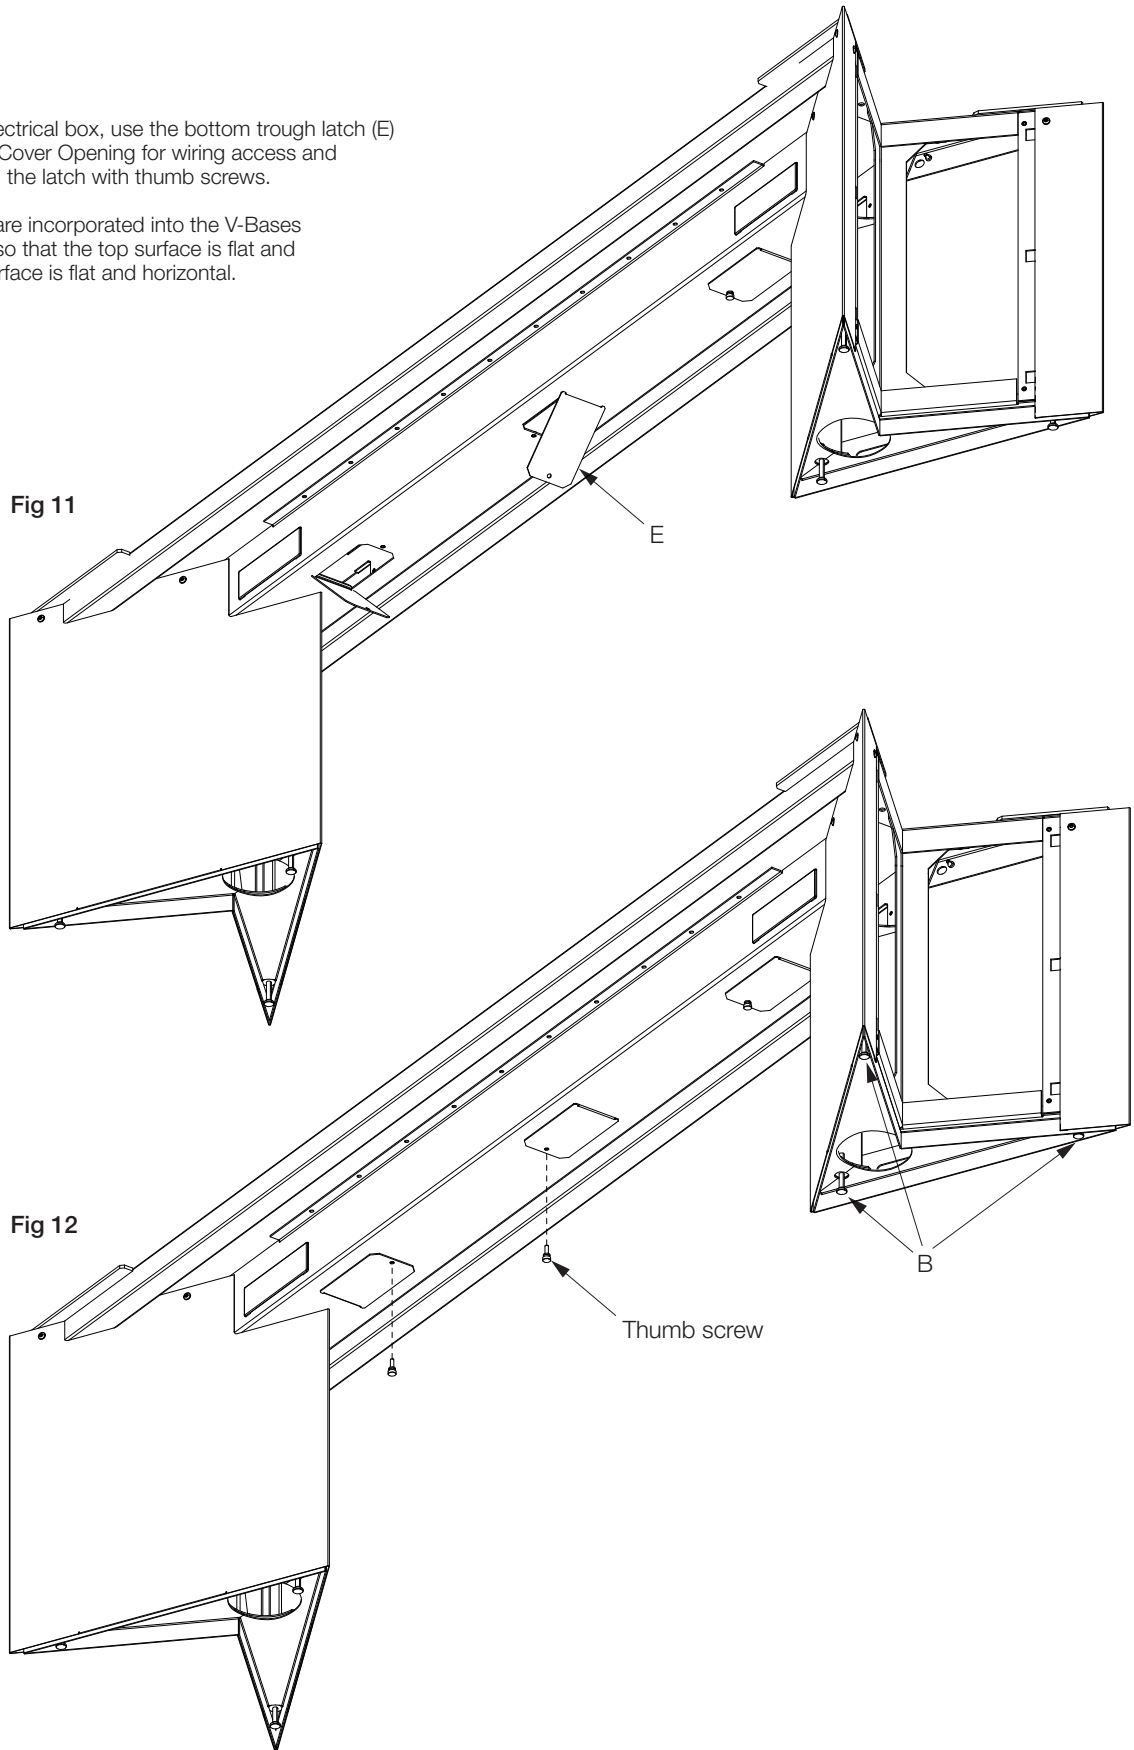

LSM Table - Installation Instructions

Pattern number: L3-SV22, L3-SV24, L3-SV26, L3-SV32, L3-SV35, L3-TV52

STEPS.

10. Attach either the Subtop or Table Top to the V-Base with 5/16-18 x 1" Phillips Pan Head Screws (K). Access these screws through the removable cover opening. The Subtops / Top have threaded inserts.

Note: Veneer and Laminate tops do not have subtops. All other materials require a subtop.

11. Attach the Trough to the subtop / top with #12 x 3/4" Philips Pan Head Wood Screws (J).

22. Attach the Mending Plates to the subtop / top.

12. Attach the Removable Base panels and tighten the (2) thumb screws.

13. If a separate top is placed on the subtop, shim as required to make all the sections level.

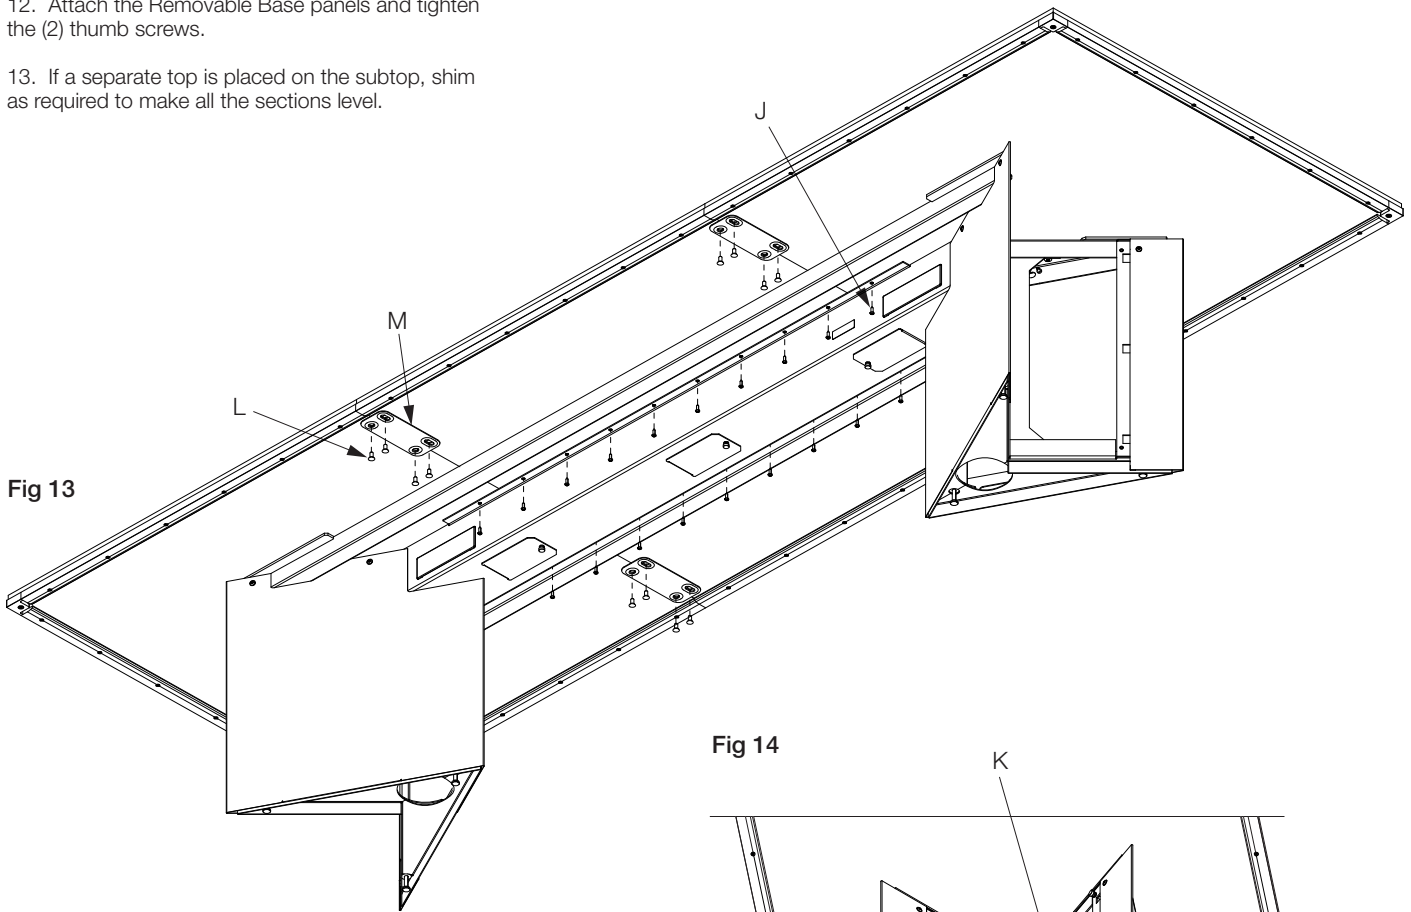


Fig 13

Fig 14

