
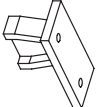
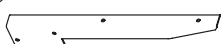
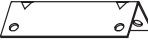







# Hinged Modesty Assembly

Reference Number: N/A

## Hardware List

(A)	(B)	(L)
		
2TP40068 PRESS-FIT, KEKU/MALE	B. 2TP40068 FIT, KEKU/MALE	L. 2TP40107 CANT,MOD/HINGED,13.250
(D)	(E)	(F)
		
5340110 BRKL,L/BLK,1X1X3	759074 MINIFIX CAM-15MM	5144142 MINIFIX BOLT 262-27-921
(H)	(J)	(K)
		
5112220 SCR,SM PNP #10X3/4 17 BLK	5124120 SCR,SM FLP #10X3/4 ZNC	7532440 SCR,SM FLP #8X5/8 TYPE A ZINC

## Tools Needed

Drill gun  
Phillips driver bit

## End Supports

- Using the drilling provided, attach connector (A) using screw (K) (Fig. 1A) to both end supports.
- Using the drilling provided, attach bracket (D) using screw (H) (Fig. 1A) to both end supports (Left+1 and Right+1).

## Centre Supports (for hinged modesties over 48")

- 1.1. A. Using the drilling provided, attach bracket (D) using screws (H) (Fig. 1B).





Note: Pay attention to the location of the center support. If worksurface contains a grommet, make sure bracket (C) does not obstruct the grommet opening. If it does, it may be necessary to relocate center support to adjacent attachment points provided (Fig. 1 and 2).

## Hinged Modesty Frontset

- 1.1. On the top portion of the frontset (using the drilling provided) attach connector (B) using screw (K) (Fig. 1A).
- 1.2. On the bottom portion of the hinged modesty frontset (using the drilling provided) attach 4-6 minifix bolts (F) (Fig. 1A).

## Hinged Modesty Frontset

- 1.1. Attach the supports to the frontset (using the drilling provided) by inserting previously assembled minifix bolts (F) into the mating holes on the supports and use minifix cam (E) to fasten (Fig. 1A).

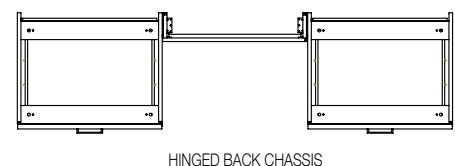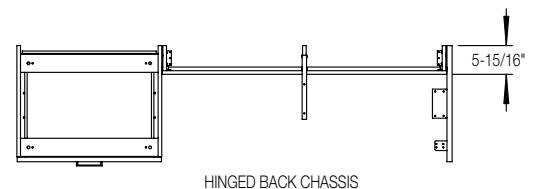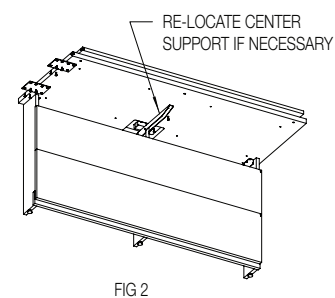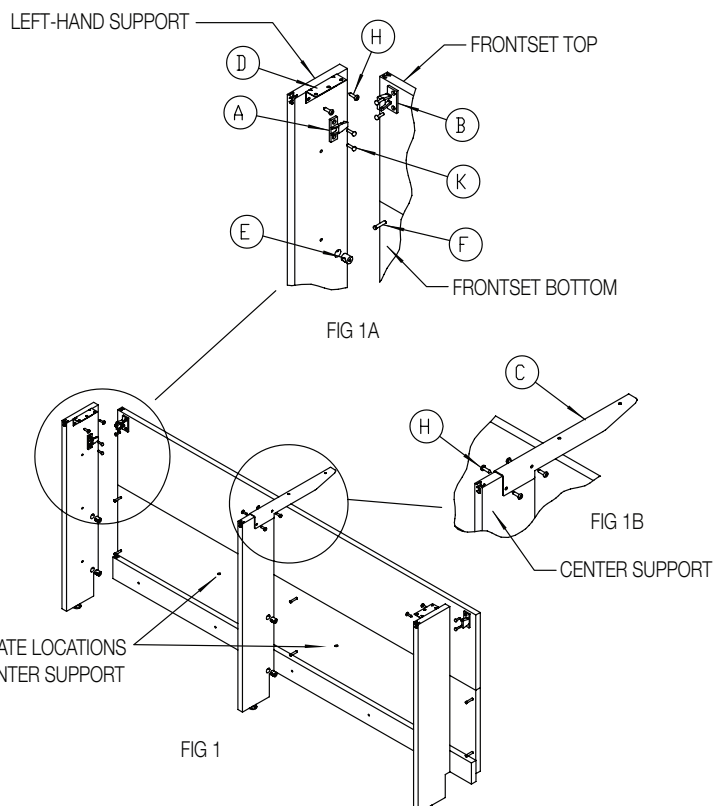

# Hinged Modesty Attachment

Reference Number: N/A

1. On the hinged modesty end supports (using the drilling provided) attach 2 connectors (A) using screw (K) (Fig. 4A).
2. On the hinged modesty end supports (using the drilling provided) attach 2 brackets (D) using screw (H) (Fig. 4A).
3. On the door portion of the hinged modesty frontset (using the drilling provided) attach 2 connectors (B) using screw (K) (Fig. 4A).
4. If applicable, on the hinged modesty center supports (using the drilling provided) attach bracket (A) using screws (H) (Fig. 4B).  
  
Note: Pay attention to the location of the center support. If worksurface contains a grommet, make sure bracket (C) does not obstruct the grommet opening. If it does, it may be necessary to re-drill holes for the minifix bolt connection to avoid the interference.
5. On the fixed portion of the hinged modesty frontset (using the drilling provided) attach 4-6 minifix bolts (F) (Fig.4A)
6. Attach the supports to the frontset (using the drilling provided) by inserting previously assembled minifix bolts (F) into the mating holes on the supports and use minifix cam (E) to fasten (Fig. 4A).

