


# Progressive Height Adjustable Peninsula

Reference Number: 6TP00501

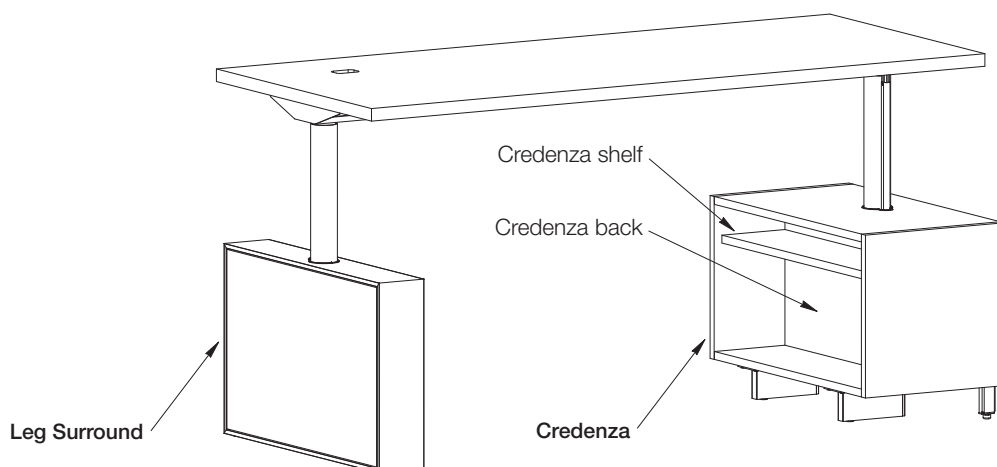

## 1. Credenza

HARDWARE LIST		
<b>(A)</b>  P/N : 5156133 INSERT, TYPE E-142013-ZN	<b>(B)</b>  P/N : 5126220 SCR, MACH PNP 1/4-20UNCx5/8	<b>(C)</b>  P/N : 6TP41997 LEG, RECT \ 1x8 \ 1-PC \ ASM, 4.000
<b>(D)</b>  P/N : 6TP41999 BRKT, LEVELLER \ CRED \ BOX	<b>(E)</b>  P/N : 5444010 LEVELLER, GABLE, 5/16-18-2A	<b>(F)</b>  P/N : 5122218 SCR, TRP 14x7/8 T-AB BL (BACK PACK)


### Tools Needed

Drill gun  
#2 - Phillips driver bit  
#6 - Allen key  
Tape measure

## 1. Credenza Installation Instructions

(Fig 1)




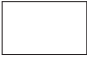

- 1.1 Attach wood inserts (A).
- 1.2 Attach front legs (C) to the bottom, using screws (B).
- 1.3 Attach levelers (E) to the brackets (D).
- 1.4 Attach back supports (D) to side gables, using screws (F).

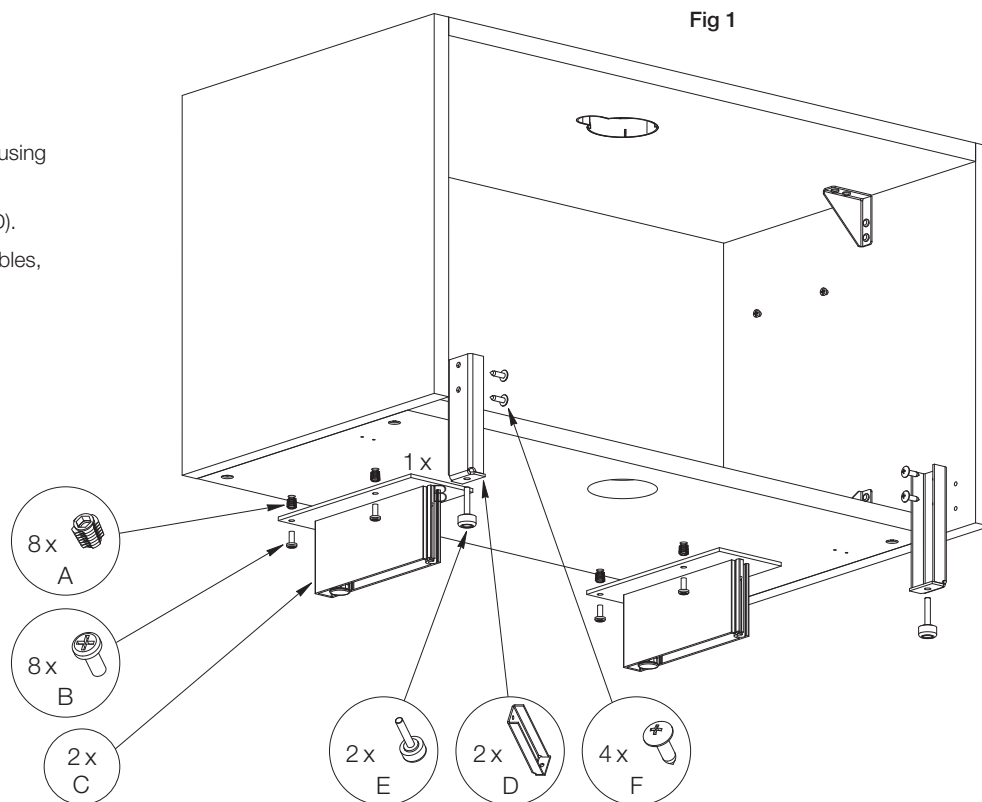

# Progressive Height Adjustable Peninsula

Reference Number: 6TP00501

## 2. Leg Surround

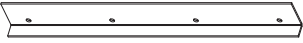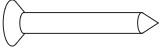HARDWARE LIST		
<p>(G)</p>  <p>P/N : 6TP42000 STIFFENER, BRKT, 13.125</p>	<p>(H)</p>  <p>P/N : 5110440 SCR, SM FLP #8x1-1/4 T-A ZN</p>	<p>(I)</p>  <p>P/N : 5418012 SOFTER DUROMETER BUMPERS</p>
<p>(J)</p>  <p>P/N : 6TP42049 DUALLOCK, LOW PROFILE, 0.625x1.0</p>	<p>(K)</p>  <p>P/N : 6TP41309 GROM,LEG \ ADJ \ RND \ WA, 80MM</p>	

### Tools Needed

Drill gun  
#2 - Phillips driver bit  
Tape measure

### 2. Leg Surround Installation Instructions

#### 2.1 Attach the fixed panel. (Fig 2)

- 2.1.1. Attach the bumpers (I) as shown on all 4 corners (4x3=12 pcs).
- 2.1.2. Attach the panel to the frame, using bracket (G) and screws (H).

#### 2.2 Attach the removable panel. (Fig 3)

- 2.2.1 Connect the duallock (J) in pairs and place them in all 4 corners (4x2=8 pcs).
- 2.2.2 Attach the bumpers (I) as shown on all 4 corners sides (4x2=8 pcs).

#### 2.3 Attach the grommet (K). (Fig 4)

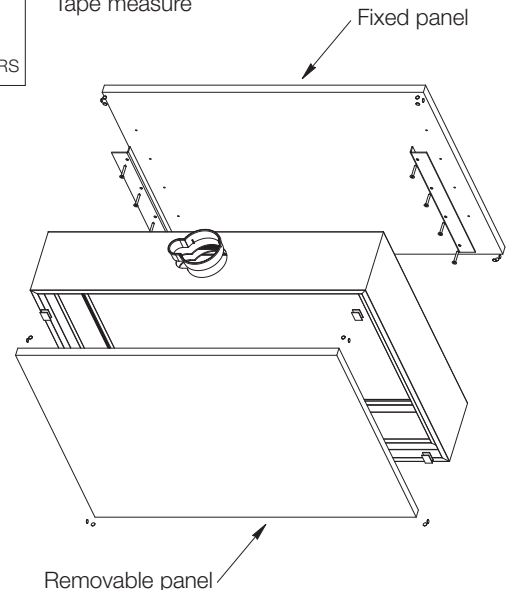


Fig 2  
Attach the fixed panel

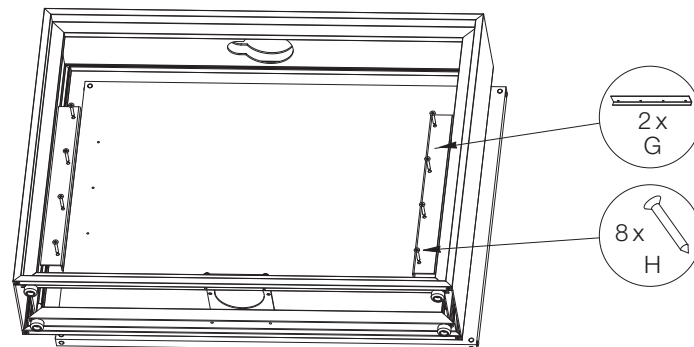
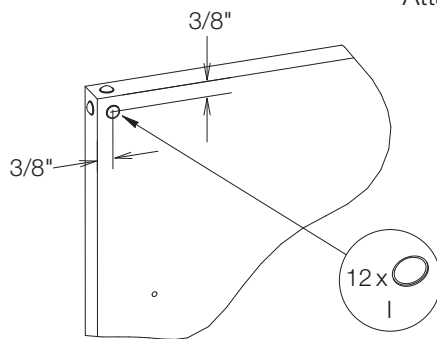


Fig 3  
Attach the removable panel


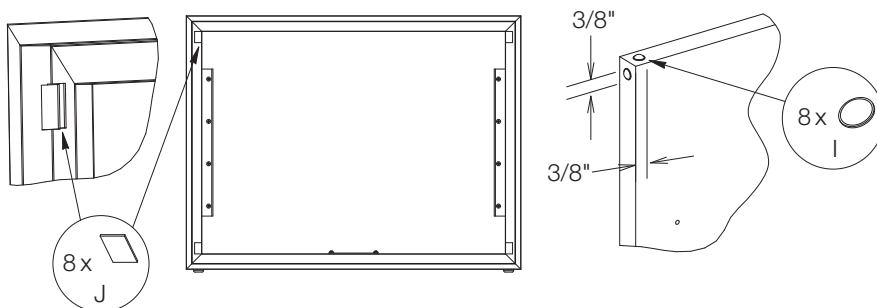


Fig 4  
Attach the grommet

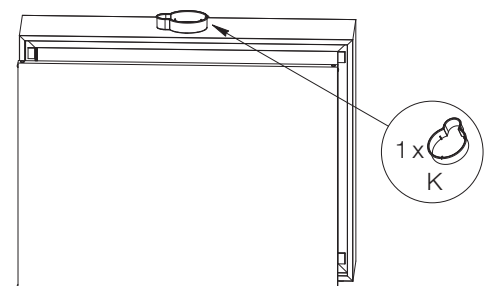

# Progressive Height Adjustable Peninsula

Reference Number: 6TP00501


## 3. Attach and Secure the Legs

3.1 Slide height adjustable leg through leg grommet. (Fig 5 and 6)

3.2 Attach foot to height adjustable leg using screws provided. (Fig 5 and 6)

Leg Surround


Fig 5

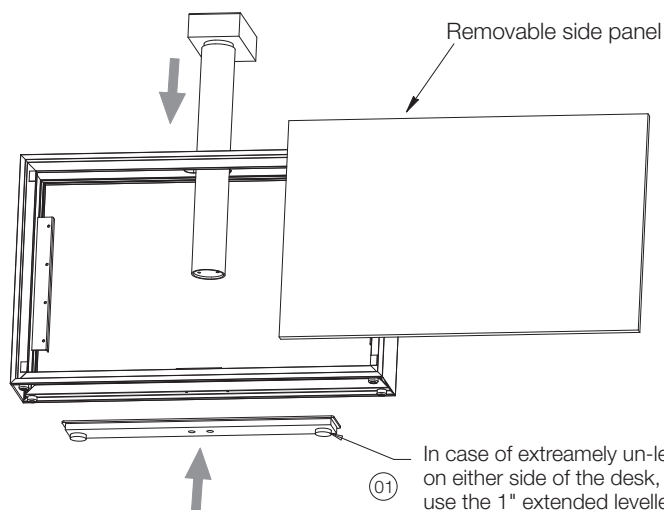

In case of extremely un-level surfaces, on either side of the desk, use the 1" extended levellers from the hardware kit provided with base.

Credenza

Fig 6

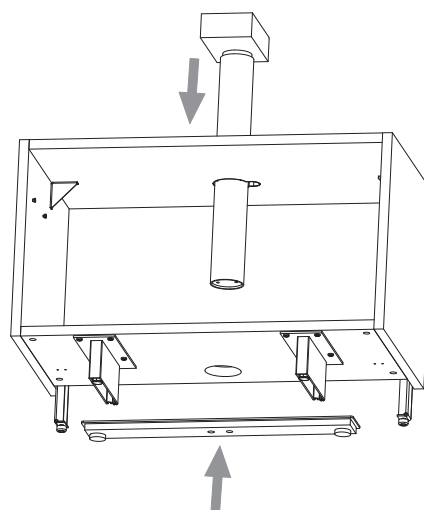

## 4. Connect the Legs, Attach the Back, Shelf and Top Surface

4. Connect the legs, attach the back, shelf and top surface (Fig 7)

4.1 Connect the legs and cross rails.

**Note:** Refer to "Users Manual 6TP00004" available on Knoll Exchange.

4.2 Drop in place and secure the top surface.

4.3 Connect the wire manager.

4.4 Insert credenza back.

4.5 Lock the back in place with the fixed shelf.

4.6 Connect removable panel.

Fig 7

