


Gallery Panel Installation Instructions – Antenna Fence Shared T

Tools Required:

- Drill/Driver (Do NOT USE Impact Driver)
- #2 and #3 Phillips driver bits
- Rubber mallet with block
- Pry bar

1. Lay Gallery Panels on a clean, soft and dry surface
 - a. Tip: screw the leveling glides all the way in on gallery panel 1 and leave the leveling glides 3/4" tall on gallery panel 2) (**Fig. 1**)
2. Install the male spring clip (with the tang in the up position) using the pre-drilled holes on gallery panel 1. (**Fig. 2**)
3. Install the female spring clips (with the tang in the down position) in the machined pocket on gallery panel 2 using the pre-drilled holes (**Fig. 3**)

Fig. 1

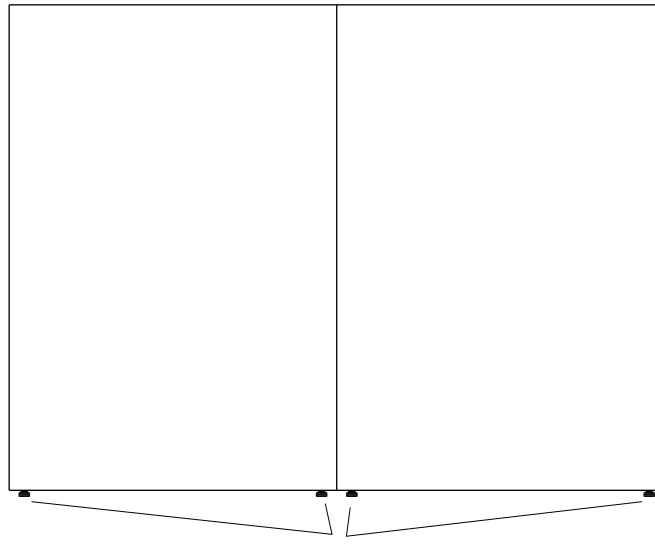

Leveling glides

Fig. 2


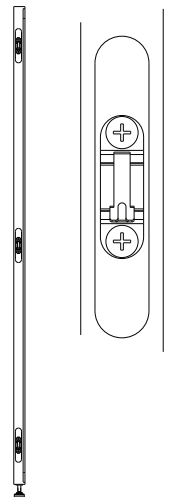


Fig. 3

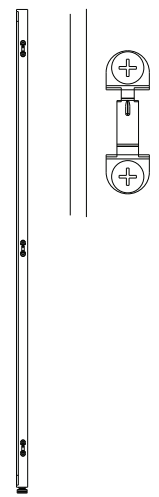

Torque setting – since drill drivers can be different, set the torque at the mid-point of the driver's torque range.

4. Stand both gallery panels up and with the gallery panel 2 raised slightly higher than gallery panel 1, align the panels to one another and press downward to seat until the top plane of both panels are even. (**Fig. 4**) then (**Fig. 5**)
 - a. Tip: if a rubber mallet is required, use block to prevent damage to the gallery panel

Fig. 4


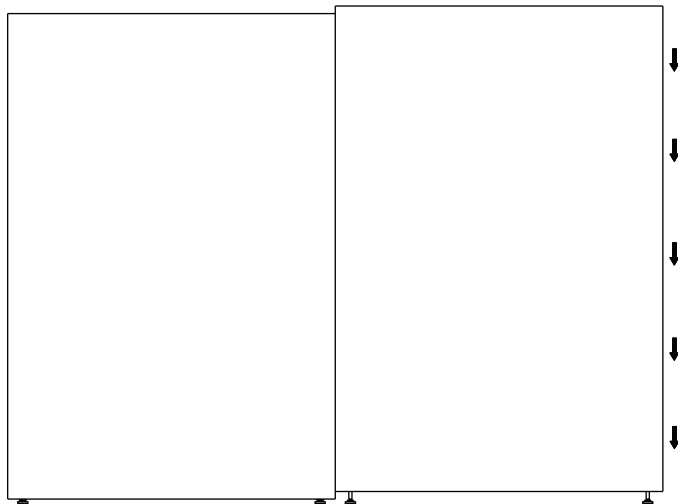


Fig. 5

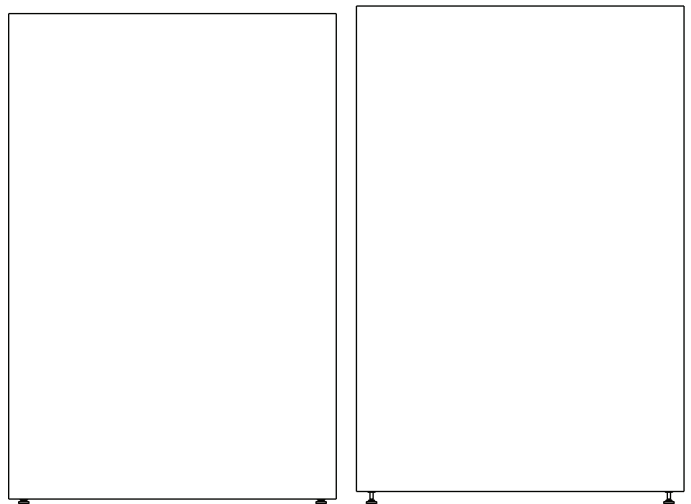

Panel 1: Male Mod-Eez Clips

Panel 2: Female Mod-Eez Clips