


Quoin Locker Coat Rod

Hardware

(4) #6 x 1/2" Self Drilling Screw

(1) Coat Rod with Plastic End Caps



(2) Mounting Brackets



1. To attach coat rod accessory kit to a locker, first remove existing center top screws (2) and coat hook if applicable. (Fig. 1)

2. Slide mounting brackets onto coat rod. (Fig. 2)

Fig. 1

Remove center top retaining screws (2), both sides.


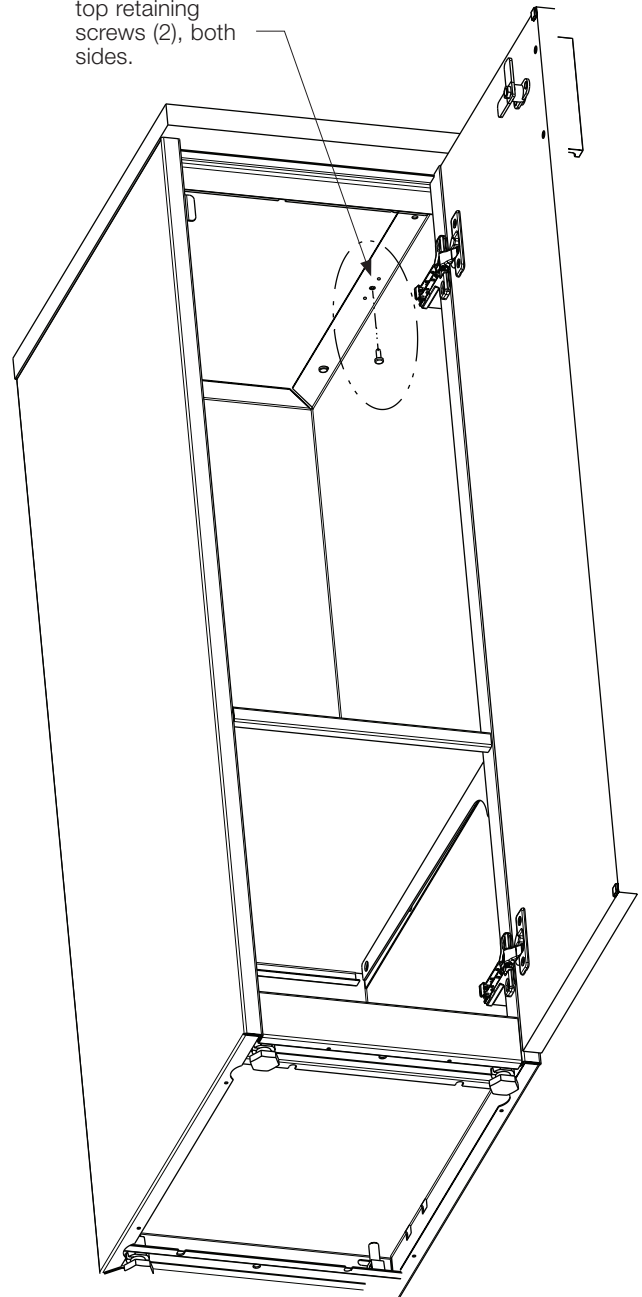


Fig. 2

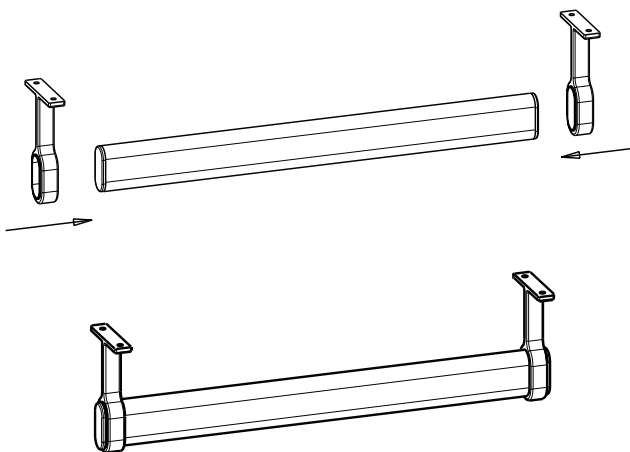

Quoin Locker Coat Rod, continued

3. Attach coat rod assembly to locker wrapper and top using (4) #6 x 1/2" screws through pre-drilled holes in wrapper. (Fig. 3)

Fig. 3

