

# Rockwell Unscripted® Creative Wall® Install Instructions

Trims: Top, Bottom, End, Headers

## Table of Contents

<u>Horizontal Trims</u>	<u>1-3</u>
<u>Vertical End Trims</u>	<u>4-5</u>
<u>Header to Wall Frame</u>	<u>6-12</u>

# Rockwell Unscripted® Creative Wall® Install Instructions

## Horizontal Trims

### Pattern Numbers Represented:

Unscripted Borders Top Trim, **UBTT**\_\_

Unscripted Borders Bottom Trim, **UBBT**\_\_

Unscripted Borders Horizontal Trim End Cap, **UBHTEC**

### Tools Needed:

Phillips Screw Driver #2 Bit

Ladders


### Part List:

(A) #6 x 3/8" Pan Head Screw (qty varies with trim length)


(B) Snap Bracket (qty varies with trim length)

(C) Trim Filler (1 per assy, metal trims only)


(D) Horizontal Trim

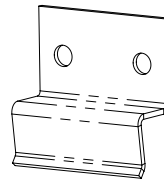

(B) 6AJ1120

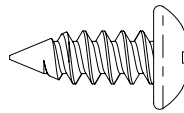

(A) 6AJ4033

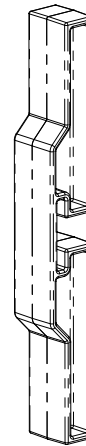


(C) 6AJ4065  
(UBHTEC)

### STEP:

#### Note:

- Horizontal Trims mount above and below the Wall Frame Horizontals
- Installation of the Upper and lower Horizontal Trims (D) is the same except for Step 6.
- Horizontal Trims (D) come with Snap Brackets (B) already assembled.
- See the Glide and Horizontal Trim Bracket Installation Instructions for Horizontal Trim bracket installation.

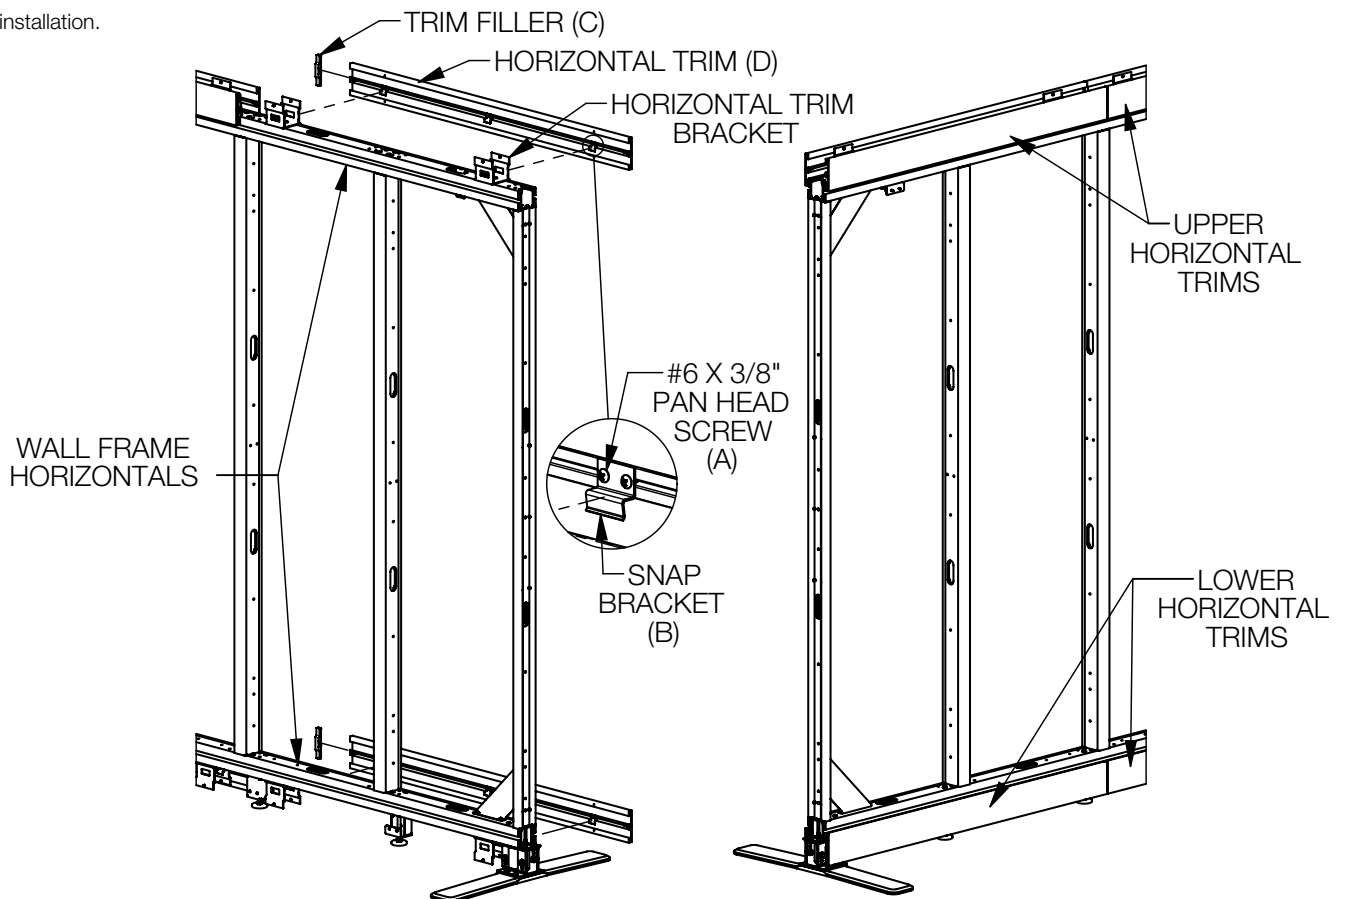

# Rockwell Unscripted® Creative Wall® Install Instructions

## Horizontal Trims

1. Select the appropriate length Horizontal Trim (D) for the location on the Wall Frame.

**Note:**


Horizontal Trims (D) are usually the same width as the Wall Frame or width of corresponding Vertical Surface. In situations such as perpendicular Beams and Off-Module Walls, shorter Horizontal Trims are needed at the upper locations to provide passage through the Horizontal Trim.

2. Metal trims only: Slide the Trim Filler (C) into one end of the Horizontal Trim (D) extrusion if they are not already installed. Ensure that (1) Trim Filler (C) will be in place at each interface between adjacent Horizontal Trims both in upper and lower Trim positions.
3. Align the Snap Bracket (B) on the back of the Horizontal Trim (D) with the rectangular holes in the Horizontal Trim Brackets previously installed on the Wall Frame.

**Note:**




In some situations the Snap Bracket (B) and/or Horizontal Trim Brackets may need to be repositioned. In all situations, each Horizontal Trim must be supported by 2 Trim Brackets.

4. Push the Horizontal Trim (D) against the Horizontal Trim Brackets and push down to engage the Snap Brackets (B).
5. Metal trims only: To prevent light leakage between adjacent Horizontal Trims, slide the previously installed Trim Filler (C) so that it straddles the joint between the Horizontal Trims.
6. The upper Horizontal Trims (D) require anti-dislodgment screws. Install the (2) #6 x 3/8" Pan Head Screw (A) through the hole in the Horizontal Trim Bracket and into the back of the Horizontal Trim (D).

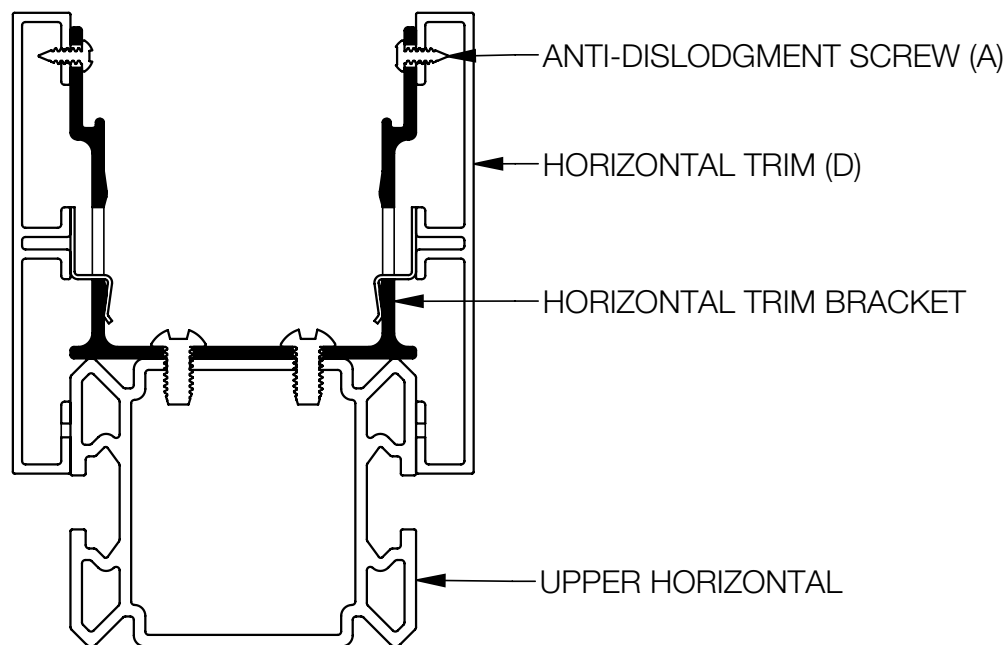

# Rockwell Unscripted® Creative Wall® Replacement Parts

## Horizontal Trims

Description	Reference*	Replacement Pattern Number
Light gap filler, horizontal trim 	6AJ4065	<b>KR6AJ4065</b> Includes: 6AJ4065 - qty 1
Screw, pan head phillips drive, #6 x .375", black 	6AJ4033	<b>KR6AJ4033</b> <b>HLKR6AJ4033 24-Response</b> Includes: 6AJ4033 - qty 1 <b>(See following table for total qty required)</b>
Trim snap bracket 	6AJ1120	<b>KR6AJ1120</b> Includes: <b>(See following table for total qty required)</b>

Hardware quantity per Horizontal Trim width			
Patterns	Widths	Total quantity for bracket and screw	
<b>UBTT, UBBT (28 - 96)</b> Horizontal trims (top and bottom, metal and wood)		6AJ1120 (bracket)	6AJ4033 (screw)
	14" w - 63" w	<b>2</b>	<b>6</b>
	64" w - 86" w	<b>3</b>	<b>9</b>
	88" w - 96" w	<b>4</b>	<b>12</b>

### General Notes

1. "HL" and "ZZ" prefix in pattern number denotes 24-Response. Part will be shipped within 24-hours via ground service, pending availability; quantity limits and higher pricing apply.
2. See the product [Price Lists on www.Knoll.com](https://www.Knoll.com) for material, textile, and finish options denoted by ( ).
3. \* Not offered as an orderable service part number.

# Rockwell Unscripted® Creative Wall® Install Instructions

## Vertical End Trims

### Pattern Numbers Represented:

Unscripted Borders End Cover

Full Height, **UBNF**\_\_

Under Header, **UBNH**\_\_

Under Crossmember, **UBNB**\_\_

### Tools Needed:

7/16" Combination Wrench

### Part List:


(A) 1/4-20 Hex Nut with Lock Washer (3 per assy)

(B) 1/4-20 Hex Base Leveler (3 per assy)

(C) Vertical End Trim



(A) 1A52309H01

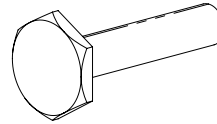

(B) 6AJ4025

### STEP:

1. Select the appropriate Vertical End Trim (C) for location on the Wall Frame.

#### Note:

Vertical End Trims (C) come in 3 sizes: Full height (89"), under Cross Beams (87") and under Headers (85").

2. Insert (3) 1/4-20 Thin-Head Hex Bolt (B) into the channel on the back side of the Vertical End Trim (C).

3. Align the 1/4-20 Thin-Head Hex Bolt (B) with the 3 holes in the Wall Frame's End-Upright (top, middle, and bottom).


#### Note:

ape can be used to hold the 1/4-20 Levelers (B) in position on the Vertical End Trim (C) while 1/4-20 Thin-Head Hex Bolt (B) are inserted into the holes in the End-Upright.

4. Use (3) 1/4-20 Hex Nuts (A) on the inboard side of the End-Upright to secure the 1/4-20 Thin-Head Hex Bolt (B). The Vertical End Trim (C) should be aligned with the top of the upper Horizontal Trim and bottom of the lower Horizontal End Trim. Do not over tighten to avoid damage to the Trim.


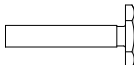
#### Note:

If Horizontal Trims have not been installed yet, the Vertical End Trim (C) can be positioned 3" beyond the Wall Frame's upper or lower Horizontals.

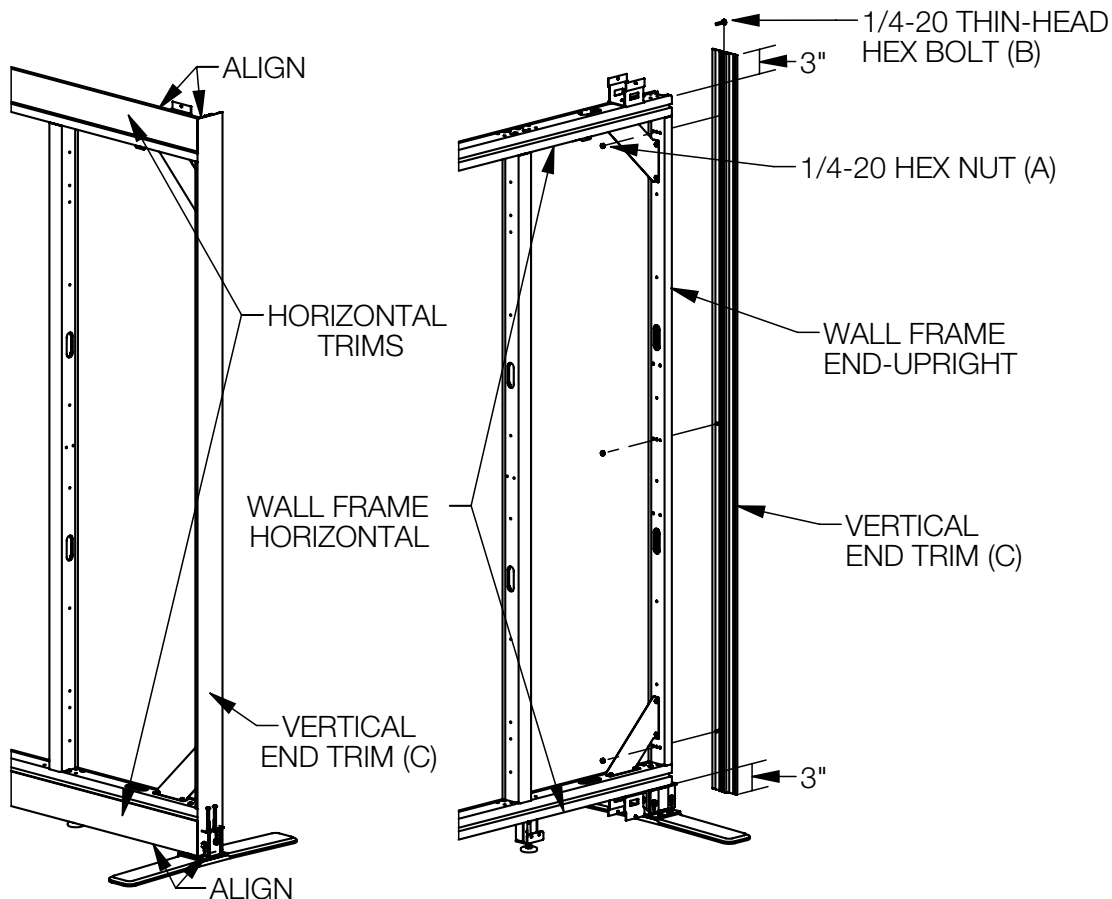

# Rockwell Unscripted® Creative Wall® Replacement Parts

## Vertical End Trims

Description	Reference*	Replacement Pattern Number
Hex nut with lock washer, 1/4-20, zinc 	1A52309H01	<b>KR1A52309H01</b> <b>HLKR1A52309H01 24-Response</b> Includes: 1A52309H01 - qty 1 (Total required per assy = 3)
Thin head hex bolt 1/4-20 x 1.25 (leveler) 	6AJ4025	<b>KR6AJ4025</b> <b>HLKR6AJ4025 24-Response</b> Includes: 6AJ4025 - qty 1 (Total required per assy = 3)

### General Notes

1. "HL" and "ZZ" prefix in pattern number denotes 24-Response. Part will be shipped within 24-hours via ground service, pending availability; quantity limits and higher pricing apply.
2. See the product [Price Lists on www.Knoll.com](https://www.Knoll.com) for material, textile, and finish options denoted by ( ).
3. \* Not offered as an orderable service part number.

# Rockwell Unscripted® Creative Wall® Install Instructions

## Header to Wall Frame

### Pattern Numbers Represented:

Unscripted Borders Headers Mounting Channel, **UBHC**\_\_

Unscripted Borders Headers Mounting Flush, **UBHF**\_\_

### Tools Needed:

Drill

Phillips #3 Bits

0.203 (13/64") Diameter Drill Bit

Ratchet & 7/16" Socket

Ladders

### Part List:

(A) Header (A)

(B) Horizontal Trim (2 per assy)

(C) Smooth-Bottom Filler (6AJ1165\_\_, 1 per assy)

or (D) Drapery Track Filler (6AJ1166\_\_, 1 per assy)

& (E) Drapery Track Block (6AJ116637, 1 per assy)

(F) ¼-20 x 3 ¼" Pan Head Screw (4 per assy)


(G) ¼-20 x ½" Pan Head Thread-Forming Screw (8 per assy)

(H) ¼-20 x ¾" Hex Head Screw (H) (qty varies by size)


(I) ¼-20 x ¾" Hex Nut with Lock Washer (I) (qty varies by size)




(I) 1A52309H01

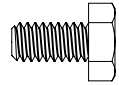

(H) 6AJ4089

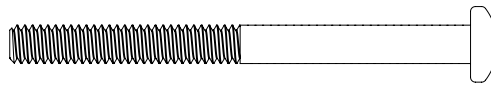

(F) 6AJ4022

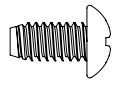


(G) 6AJ4109

### STEP:

#### Note:

- Fully assembled Headers are 4" high and are a continuation of the upper Horizontal Trims over an open span between 2 inline Wall Frames.
- Select the appropriate Header (A) for the span between Wall Frames. Headers are 21" longer than the opening they span. Each end overlaps the Wall Frames by 10.5".
- Headers (A) can have a Smooth Bottom Filler (C) or a Drapery Track Filler (D) on the bottom side of the Header depending on the bottom filler specified.

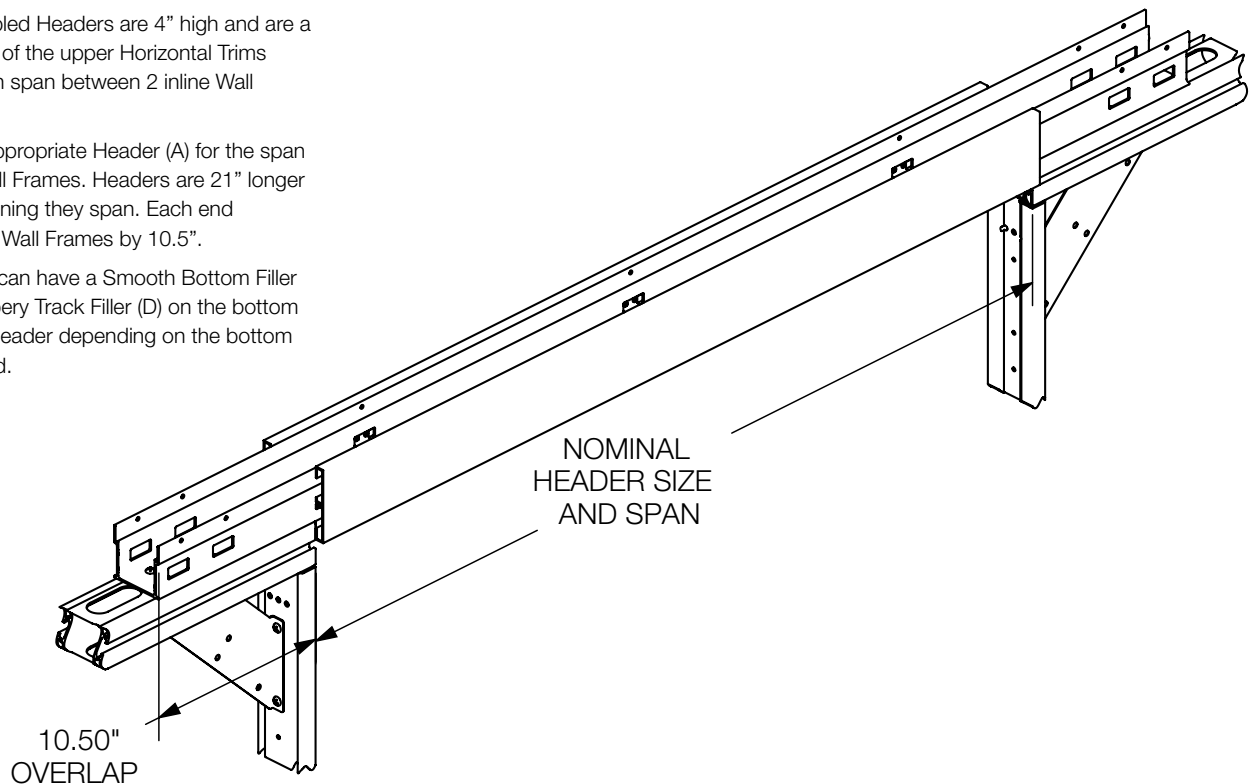


# Rockwell Unscripted® Creative Wall® Install Instructions

## Header to Wall Frame

1. First remove the upper Horizontal Trim Brackets mounted at the ends of the Wall Frames.

**Note:**

The Header (A) includes Horizontal Trim mounting details.

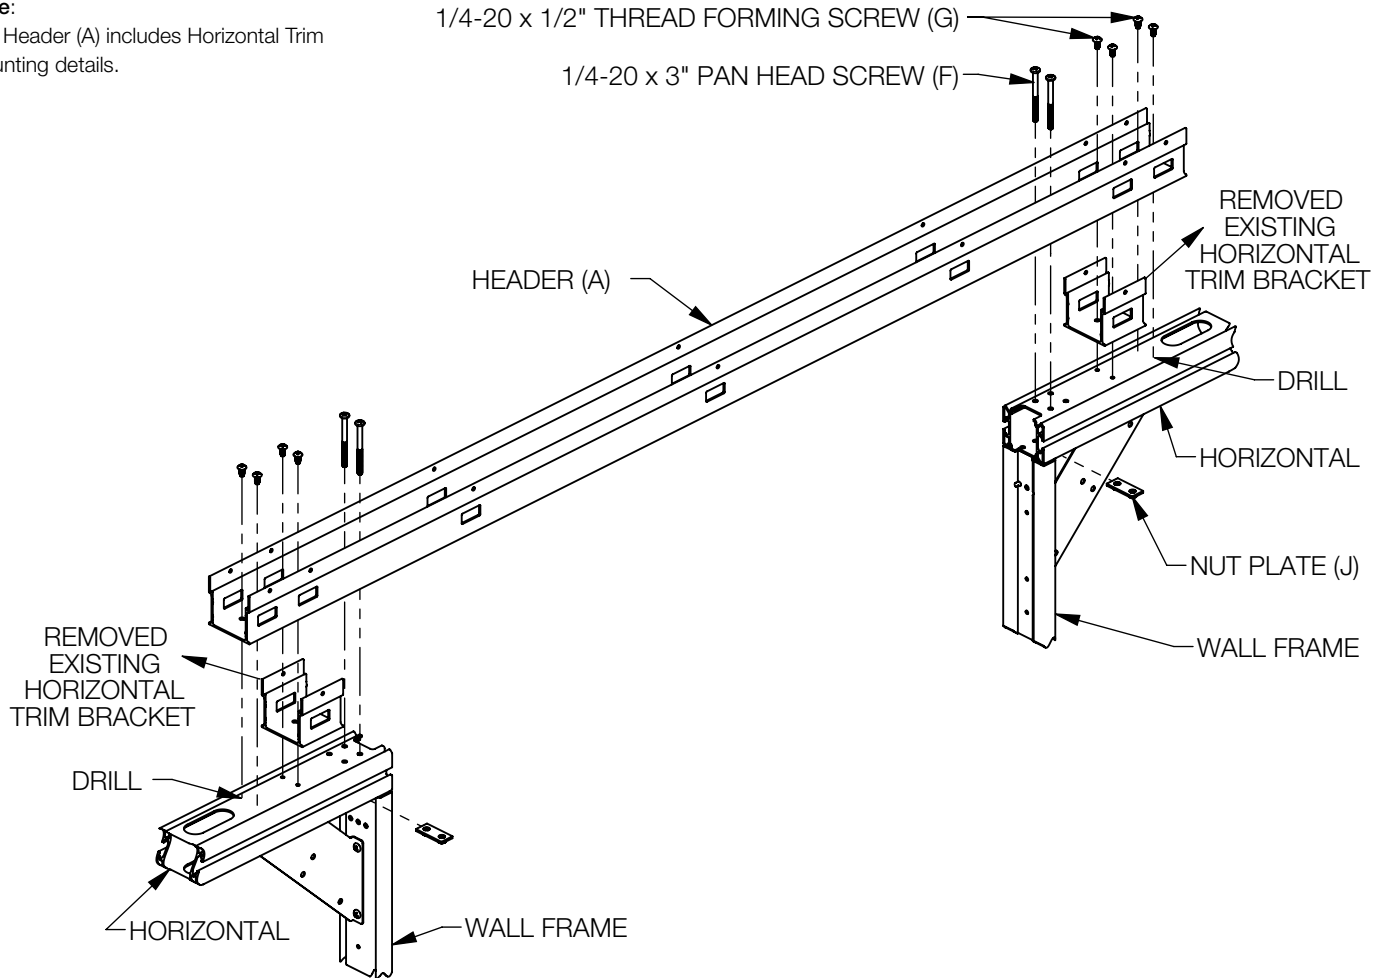

2. Place the Header (A) across the span between the 2 inline Wall Frames and attach using (1) 1/4-20 Nut Plate (J) and (2) 1/4-20 x 3" Pan Head Screws (F) through the first 2 holes in each Wall Frame's upper Horizontal.
3. Install (2) 1/4-20 x 1/2" Pan Head Thread-Forming Screws (G) through each end of the Header (A) and into the holes previously used to attach the Horizontal Trim Brackets.
4. Using the outer most holes in the Header (A) as a template, drill (2) .203 diameter pilot holes in the Wall Frame Horizontals and install (2) 1/4-20 x 1/2" Pan Head Thread-Forming Screws (G) in each end of the Header (A).

**Note:**

Complete Step 3 before tightening all screws.



# Rockwell Unscripted® Creative Wall® Install Instructions

## Header to Wall Frame


5. Install the appropriate Header Filler to the underside of the Header

### Flush Bottom Configurations:

- Assemble 1/4-20 x 3/4" Hex Head Screws (H) into the channel on the upper side of the Flush Bottom Filler (C). Quantity depends on the Header size and number of screws provided.
- Install the Filler onto the bottom side of the Header by aligning the 1/4-20 x 3/4" Hex Head Screws (H) with holes in the Header (A) and assembling 1/4-20 Hex Nuts (I) from the top side of the Header.

### Drapery Track Configurations:

- Assemble 1/4-20 x 3/4" Hex Head Screws (H) into the channel on the upper side of the Drapery Track Filler (D). Quantity depends on the Header size and number of screws provided.
- Install the Filler onto the bottom side of the Header by aligning the 1/4-20 x 3/4" Hex Head Screws (H) with holes in the Header (A) and assembling 1/4-20 Hex Nuts (I) from the top side of the Header. The Drapery Track Filler (D) is to be biased to one end of the span and against the Wall Frame's upper Horizontal.
- Assemble (1) 1/4-20 x 3/4" Hex Head Screw (H) into the channel on the upper side of the Drapery Track Block (E). This Block is a 3" length of the Drapery Track filler extrusion.
- Position the Drapery Track Block (E) in the gap at the end of the previously mounted Drapery Track Filler (D). Install onto the bottom side of the Header (A) by aligning the 1/4-20 x 3/4" Hex Head Screw (H) with hole in the Header (A) and assembling (1) 1/4-20 Hex Nut (I) from the top side of the Header. This block will be temporarily removed during curtain installation.

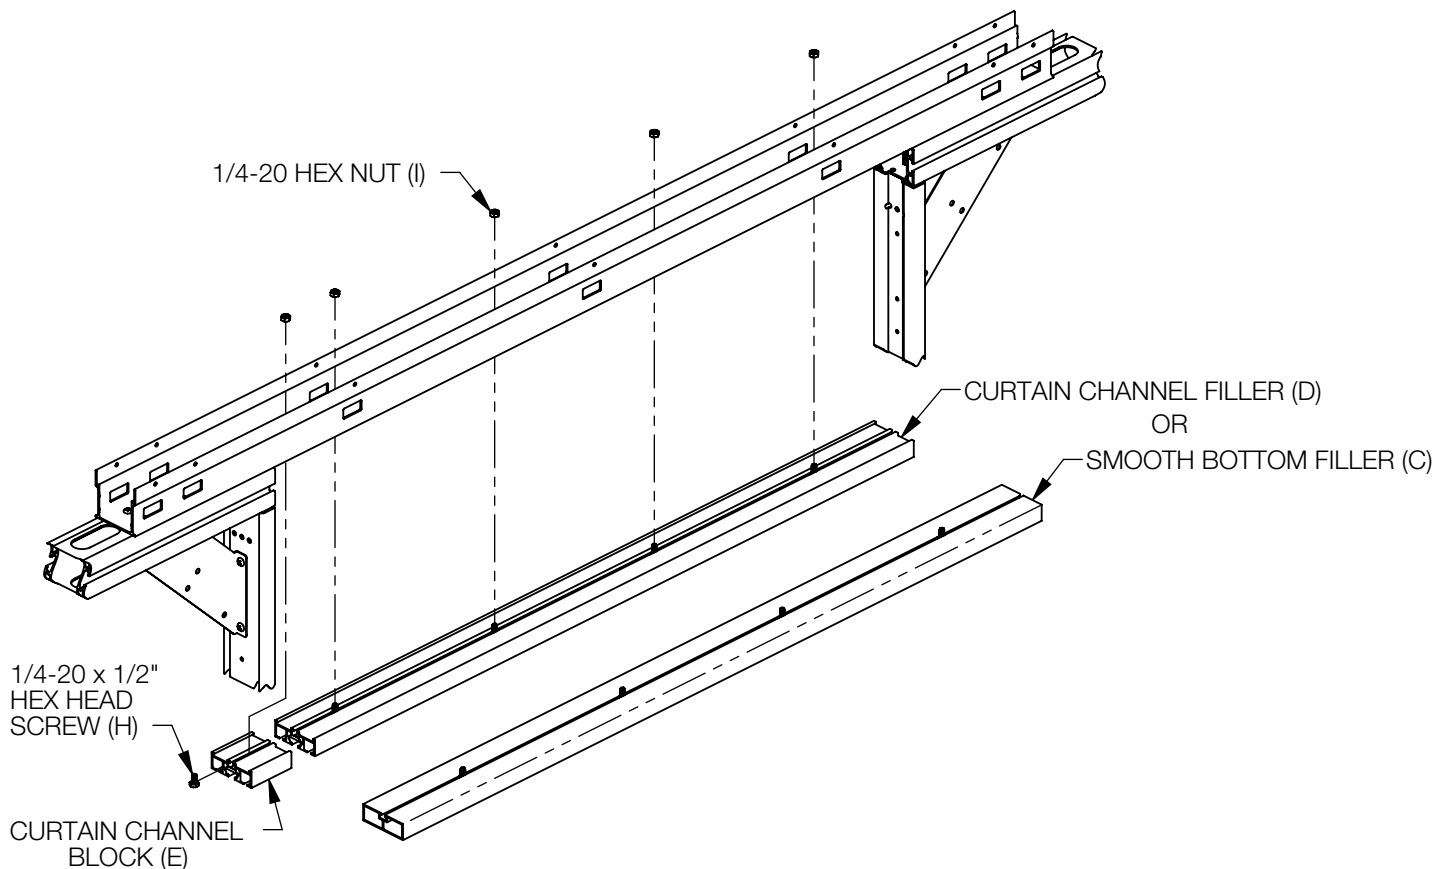


## Rockwell Unscripted® Creative Wall® Install Instructions

### Header to Wall Frame

6. Install Horizontal Trims (B) on both sides of the Header (A).


**Note:**

This Horizontal Trim (B) length corresponds with the span between the Wall Frames.

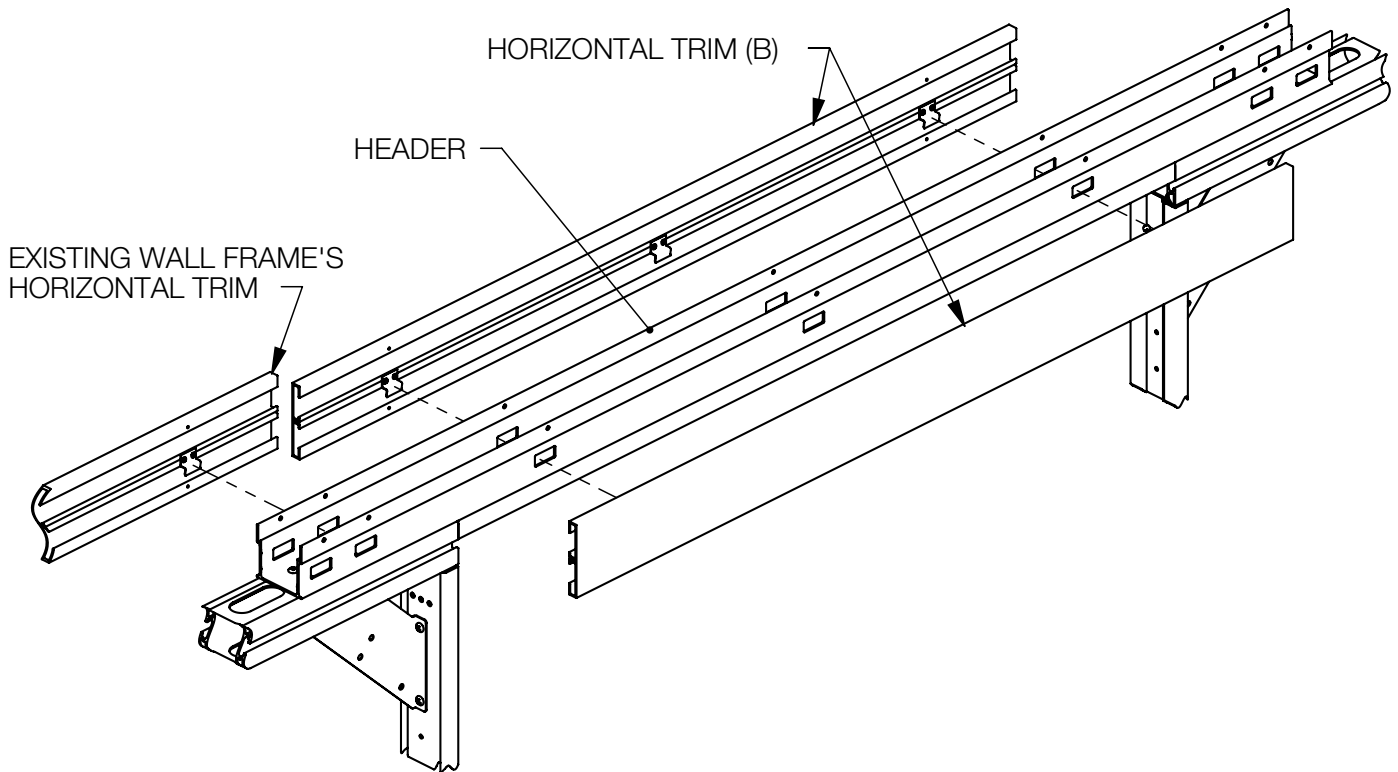

# Rockwell Unscripted® Creative Wall® Replacement Parts

## Header to Wall Frame

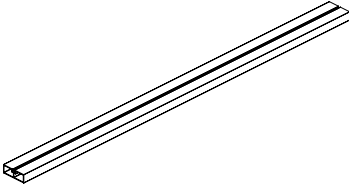
Description	Reference*	Width	Replacement Pattern Number
Filler extrusion, for door header without drapery  	<b>6AJ1165__</b>		Includes: qty 1
	6AJ116501( )	26" w	<b>KR6AJ116501( )</b>
	6AJ116502( )	28" w	<b>KR6AJ116502( )</b>
	6AJ116503( )	30" w	<b>KR6AJ116503( )</b>
	6AJ116504( )	32" w	<b>KR6AJ116504( )</b>
	6AJ116505( )	34" w	<b>KR6AJ116505( )</b>
	6AJ116506( )	36" w	<b>KR6AJ116506( )</b>
	6AJ116507( )	38" w	<b>KR6AJ116507( )</b>
	6AJ116508( )	40" w	<b>KR6AJ116508( )</b>
	6AJ116509( )	42" w	<b>KR6AJ116509( )</b>
	6AJ116510( )	44" w	<b>KR6AJ116510( )</b>
	6AJ116511( )	46" w	<b>KR6AJ116511( )</b>
	6AJ116512( )	48" w	<b>KR6AJ116512( )</b>
	6AJ116513( )	50" w	<b>KR6AJ116513( )</b>
	6AJ116514( )	52" w	<b>KR6AJ116514( )</b>
	6AJ116515( )	54" w	<b>KR6AJ116515( )</b>
	6AJ116516( )	56" w	<b>KR6AJ116516( )</b>
	6AJ116517( )	58" w	<b>KR6AJ116517( )</b>
	6AJ116518( )	60" w	<b>KR6AJ116518( )</b>
	6AJ116519( )	62" w	<b>KR6AJ116519( )</b>
	6AJ116520( )	64" w	<b>KR6AJ116520( )</b>
	6AJ116521( )	66" w	<b>KR6AJ116521( )</b>
	6AJ116522( )	68" w	<b>KR6AJ116522( )</b>
	6AJ116523( )	70" w	<b>KR6AJ116523( )</b>
	6AJ116524( )	72" w	<b>KR6AJ116524( )</b>
	6AJ116525( )	74" w	<b>KR6AJ116525( )</b>
	6AJ116526( )	76" w	<b>KR6AJ116526( )</b>
	6AJ116527( )	78" w	<b>KR6AJ116527( )</b>
	6AJ116528( )	80" w	<b>KR6AJ116528( )</b>
	6AJ116529( )	82" w	<b>KR6AJ116529( )</b>
	6AJ116530( )	84" w	<b>KR6AJ116530( )</b>
	6AJ116531( )	86" w	<b>KR6AJ116531( )</b>
	6AJ116532( )	88" w	<b>KR6AJ116532( )</b>
	6AJ116533( )	90" w	<b>KR6AJ116533( )</b>
	6AJ116534( )	92" w	<b>KR6AJ116534( )</b>
	6AJ116535( )	94" w	<b>KR6AJ116535( )</b>
	6AJ116536( )	96" w	<b>KR6AJ116536( )</b>

### General Notes

1. "HL" and "ZZ" prefix in pattern number denotes 24-Response. Part will be shipped within 24-hours via ground service, pending availability; quantity limits and higher pricing apply.
2. See the product [Price Lists on www.Knoll.com](https://www.Knoll.com) for material, textile, and finish options denoted by ( ).
3. \* Not offered as an orderable service part number.

# Rockwell Unscripted® Creative Wall® Replacement Parts

## Header to Wall Frame (cont.)

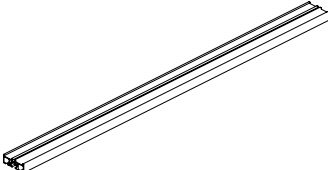



Description	Reference*	Width	Replacement Pattern Number
Filler extrusion, for door header with drapery 	<b>6AJ1166__</b>		Includes: qty 1
	6AJ116601( )	26" w	KR6AJ116601( )
	6AJ116602( )	28" w	KR6AJ116602( )
	6AJ116603( )	30" w	KR6AJ116603( )
	6AJ116604( )	32" w	KR6AJ116604( )
	6AJ116605( )	34" w	KR6AJ116605( )
	6AJ116606( )	36" w	KR6AJ116606( )
	6AJ116607( )	38" w	KR6AJ116607( )
	6AJ116608( )	40" w	KR6AJ116608( )
	6AJ116609( )	42" w	KR6AJ116609( )
	6AJ116610( )	44" w	KR6AJ116610( )
	6AJ116611( )	46" w	KR6AJ116611( )
	6AJ116612( )	48" w	KR6AJ116612( )
	6AJ116613( )	50" w	KR6AJ116613( )
	6AJ116614( )	52" w	KR6AJ116614( )
	6AJ116615( )	54" w	KR6AJ116615( )
	6AJ116616( )	56" w	KR6AJ116616( )
	6AJ116617( )	58" w	KR6AJ116617( )
	6AJ116618( )	60" w	KR6AJ116618( )
	6AJ116619( )	62" w	KR6AJ116619( )
	6AJ116620( )	64" w	KR6AJ116620( )
	6AJ116621( )	66" w	KR6AJ116621( )
	6AJ116622( )	68" w	KR6AJ116622( )
	6AJ116623( )	70" w	KR6AJ116623( )
	6AJ116624( )	72" w	KR6AJ116624( )
	6AJ116625( )	74" w	KR6AJ116625( )
	6AJ116626( )	76" w	KR6AJ116626( )
	6AJ116627( )	78" w	KR6AJ116627( )
	6AJ116628( )	80" w	KR6AJ116628( )
	6AJ116629( )	82" w	KR6AJ116629( )
	6AJ116630( )	84" w	KR6AJ116630( )
	6AJ116631( )	86" w	KR6AJ116631( )
	6AJ116632( )	88" w	KR6AJ116632( )
	6AJ116633( )	90" w	KR6AJ116633( )
	6AJ116634( )	92" w	KR6AJ116634( )
	6AJ116635( )	94" w	KR6AJ116635( )
	6AJ116636( )	96" w	KR6AJ116636( )

### General Notes

1. "HL" and "ZZ" prefix in pattern number denotes 24-Response. Part will be shipped within 24-hours via ground service, pending availability; quantity limits and higher pricing apply.
2. See the product [Price Lists on www.Knoll.com](https://www.Knoll.com) for material, textile, and finish options denoted by ( ).
3. \* Not offered as an orderable service part number.

## Rockwell Unscripted® Creative Wall® Replacement Parts

### Header to Wall Frame (cont.)

Description	Reference*	Replacement Pattern Number
Screw, pan head phillips drive, 1/4-20 x 3.25", black, with lockpatch 	6AJ4022	<b>KR6AJ4022</b> <b>HLKR6AJ4022 24-Response</b> Includes: 6AJ4022 - qty 1 (Total required per assy = 4)
Screw, pan head, phillips drive, thread forming, 1/4-20 x .5", black 	6AJ4109	<b>KR6AJ4109</b> <b>HLKR6AJ4109 24-Response</b> Includes: 6AJ4109 - qty 1 (Total required per assy = 8)
Screw, hex head, 1/4-20 x .75", Zinc 	6AJ4089	<b>KR6AJ4089</b> <b>HLKR6AJ4089 24-Response</b> Includes: (See following table for total qty required)
Hex nut with lock washer, 1/4-20, zinc 	1A52309H01	<b>KR1A52309H01</b> <b>HLKR1A52309H01 24-Response</b> Includes: 1A52309H01 - qty 1 (See following table for total qty required)

Hardware quantity per Door Header width			
Patterns	Widths	Total quantity for nut and screw	
<b>UBHC (28 - 96)</b> Door header with drapery	28" w	1A52309H01 (nut)	6AJ4089 (screw)
	30" w - 50" w	12	8
	52" w - 62" w	14	10
	64" w - 86" w	16	12
	64" w - 86" w	17	13
	88" w - 96" w	19	15
<b>UBHF (28 - 96)</b> Door header without drapery	28" w	1A52309H01 (nut)	6AJ4089 (screw)
	30" w - 52" w	6	2
	54" w - 62" w	8	4
	64" w - 86" w	10	6
	64" w - 86" w	11	7
	88" w - 96" w	13	9

#### General Notes

1. "HL" and "ZZ" prefix in pattern number denotes 24-Response. Part will be shipped within 24-hours via ground service, pending availability; quantity limits and higher pricing apply.
2. See the product [Price Lists on www.Knoll.com](https://www.Knoll.com) for material, textile, and finish options denoted by ( ).
3. \* Not offered as an orderable service part number.