


Reff® Profiles Panels

Installation of Fabric Tiles:

1. Place lower edge of Bottom Tile on the bottom Frame lip, or lower edge of "no raceway" Tile on the Bottom Plate, or lower edge of Middle and Top Tile on the top edge of Tile Divider (detail **C1** & **C2**).
2. Align the Tile horizontally by sliding the Tile in either direction until it lines up vertically on both sides of the Frame.
3. Beginning with the placed edge of the Tile, gently press inward at the locations of the Spring Clips until you feel them snap into place. Continue engaging all the Clips by working up the verticals next and finishing with the opposite edge (detail **C**).
4. Ensure Bottom, Middle Beltway (optional), Middle and Top Tiles are installed at correct location on the Frame.

5. If optional Beltway Tile is required, ensure shorter Tile is used below beltway area.


Note: If after installation, Tiles do not seem to be secure against the frame. Remove Tile and check for flattened or broken Clips. If flattened simply bend back into shape. If broken, Clip must be replaced.

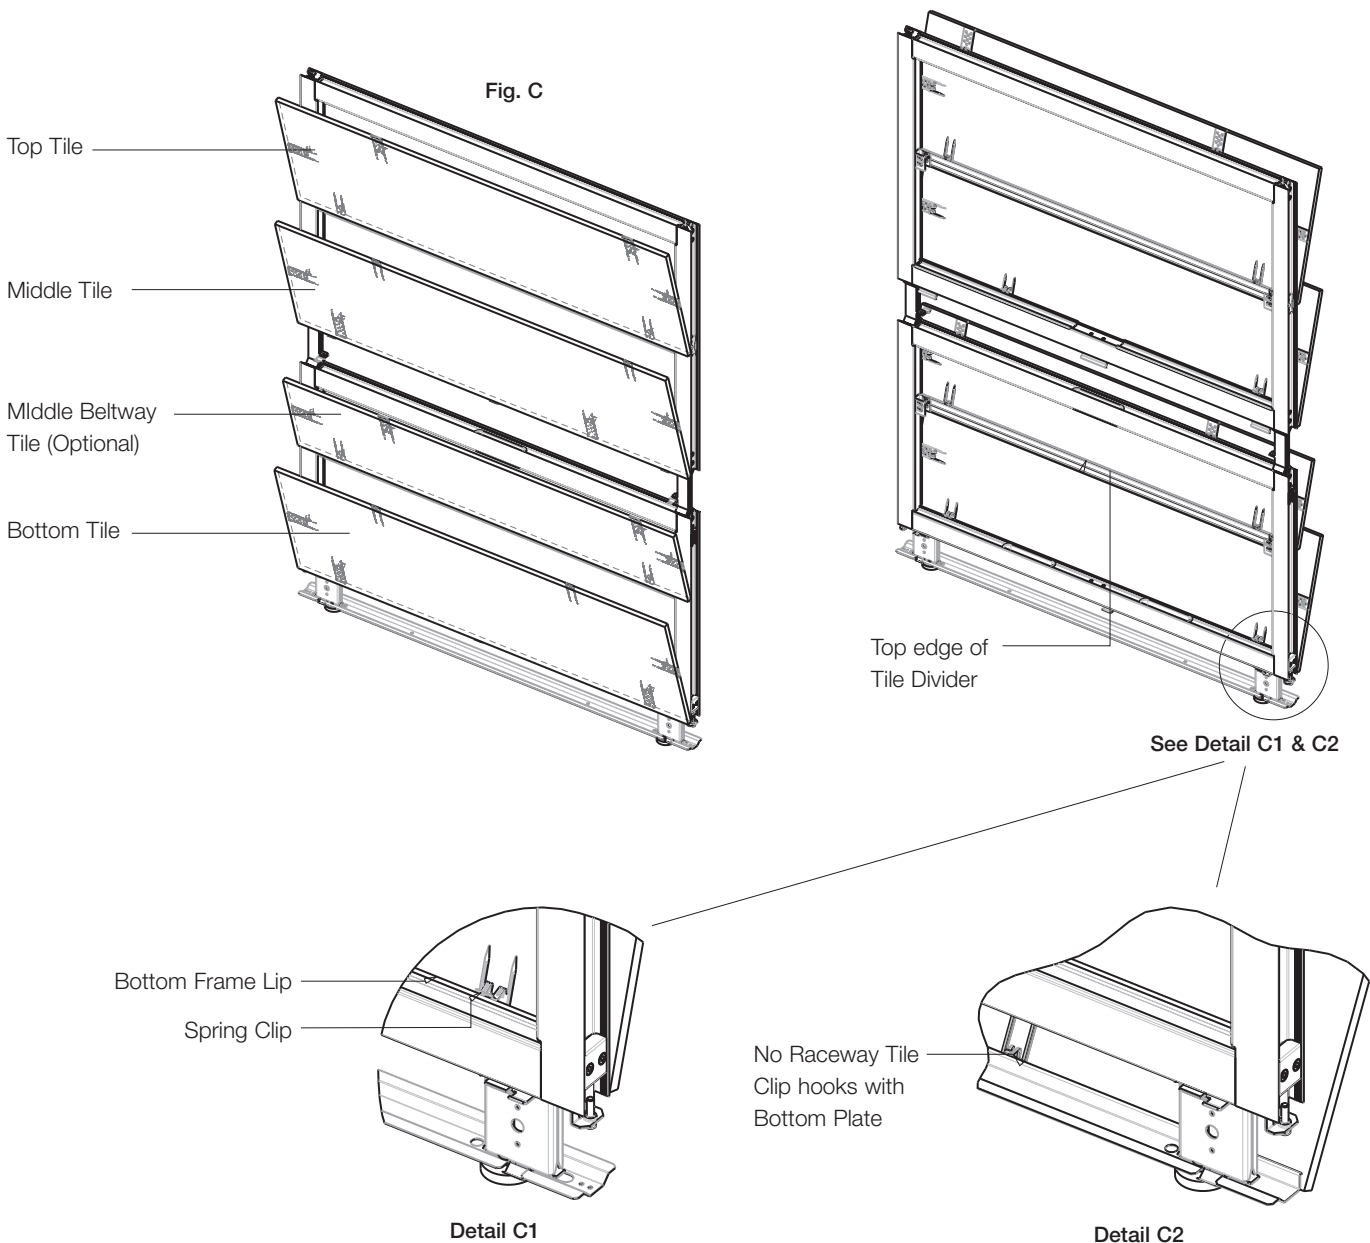

Reff® Profiles Panels

Installation of Fabric Tile Dividers:

1. Align the fabric Tile Divider notches with the Divider Bracket's tabs (detail **A**).
2. Push down Divider from both ends until you feel them snap into place (detail **B**).
3. Repeat above steps for all provided fabric Tile Dividers.

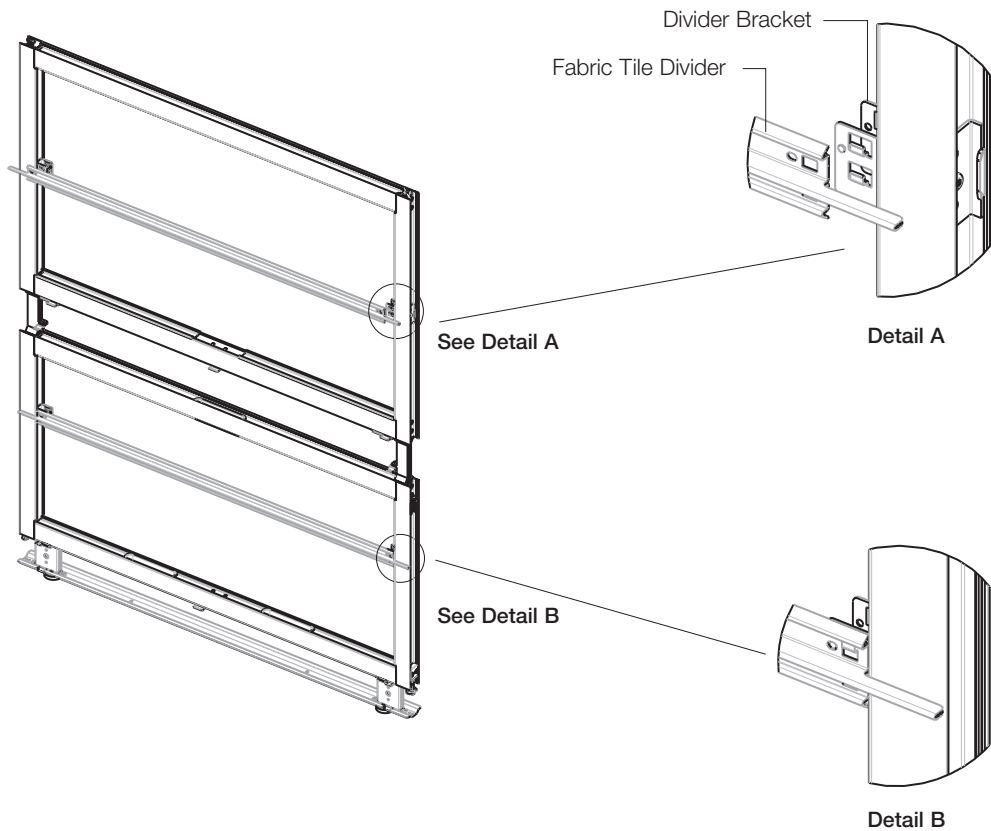


Reff® Profiles Panels

Installation of Laminate/Veneer Tiles and Dividers:

Step 1

1. Align wood Bottom Tile metal Clips with Frame vertical U bracket and slide the Tile horizontally until it lines up vertically on both sides of frame.
2. Push down Tile till it sits on its position (detail E).


STEP 1

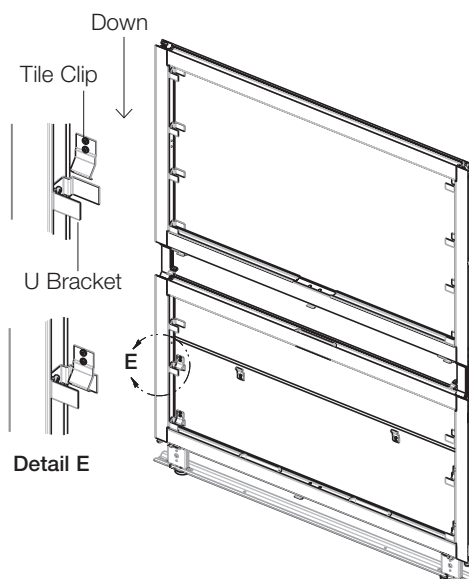



Step 2:

1. Align wood Tile Divider horizontally by sliding the divider in either direction until it lines up vertically on both sides of the wood Tile.
2. Push down wood Divider until it sits down on top of Tile. Make sure Divider is engaged with Top Clips of wood Tile (see detail D for engagement).
3. Continue installing wood Tiles from bottom up by repeating step 1&2.
4. For laminate Tiles, ensure Bottom, Middle and Top Tiles are installed at correct location on the Frame.
5. For veneer Tiles, continue installing Tiles from bottom up by repeating steps 1&2. Follow sequencing (1f-A, 1f-B, 1f-C,) to ensure grain alignment as per fig. V1.


STEP 2

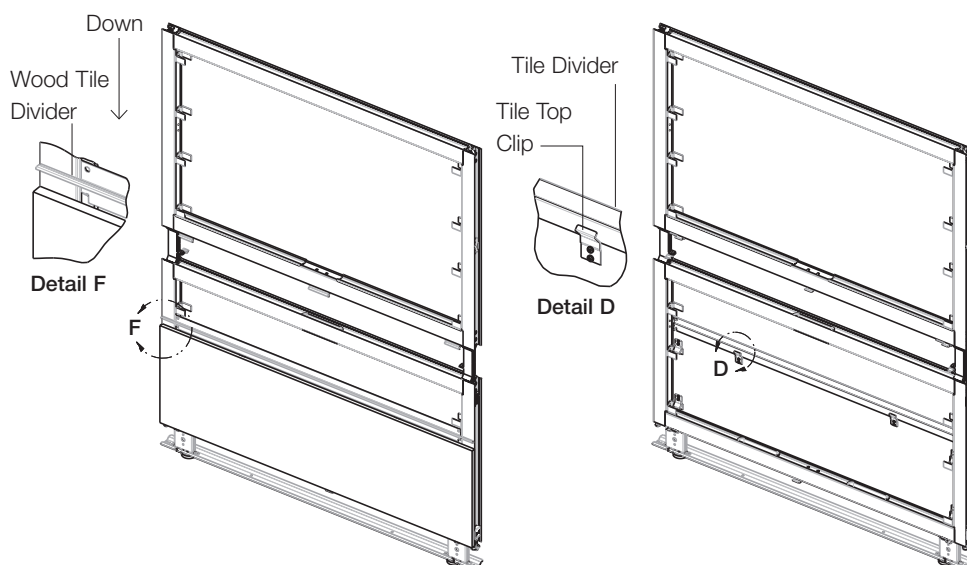

Note: If after installation, Tiles do not seem to be secure against the frame. Remove Tile and check for flattened or broken Clips. If flattened simply bend back into shape. If broken, Clip must be replaced.

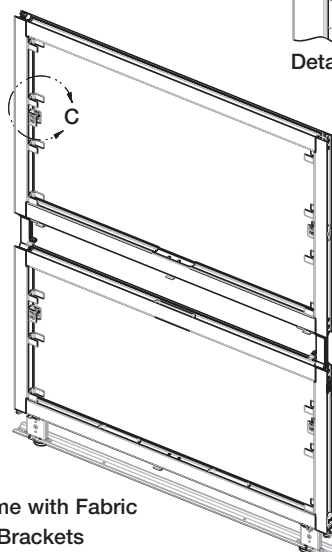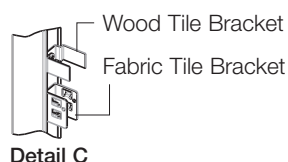

Blended Frame with Fabric
& Wood Tile Brackets

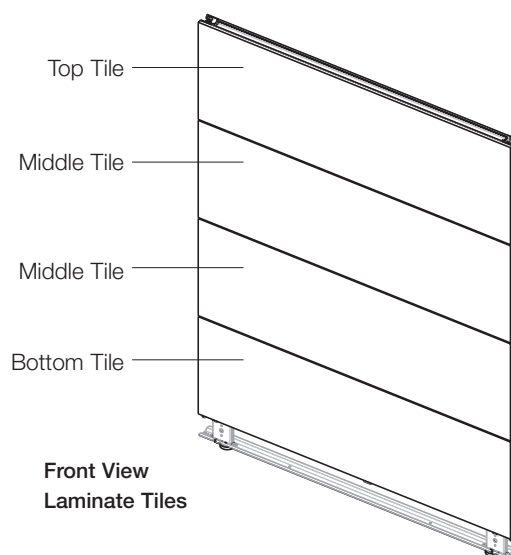

Front View
Laminate Tiles

Reff® Profiles Panels


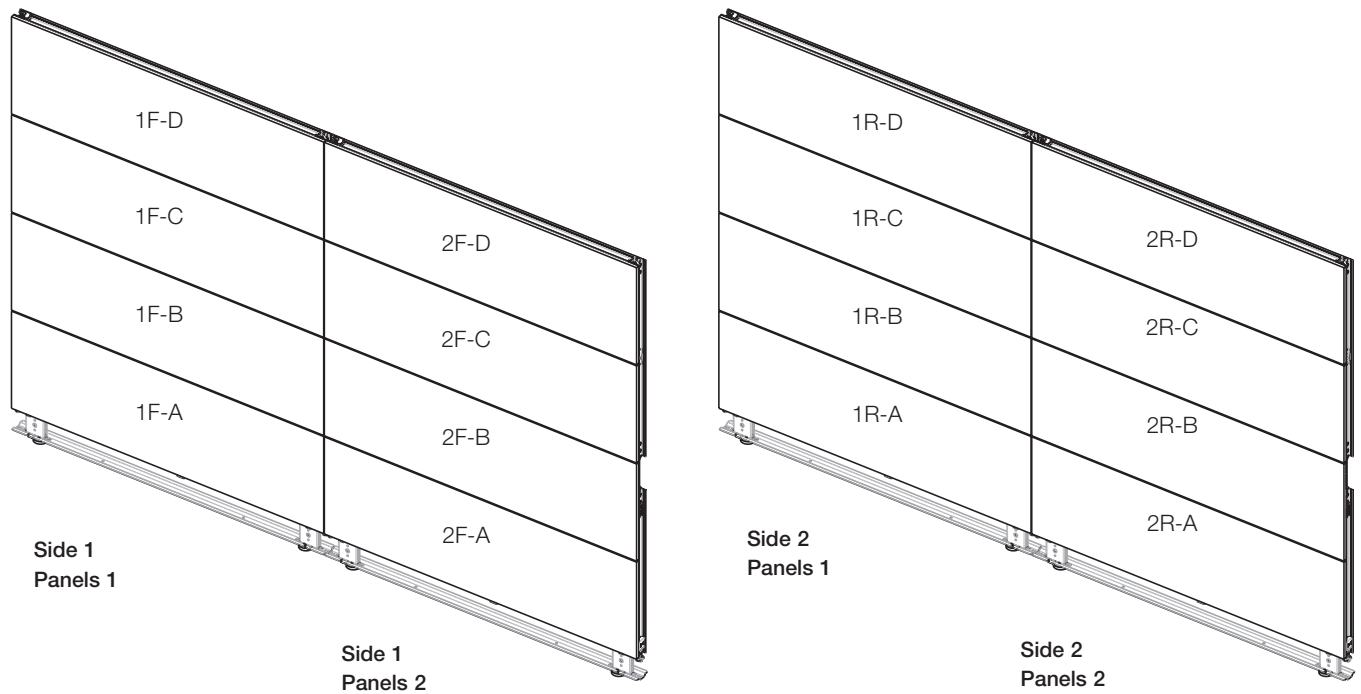


Fig. V1
Veneer Tiles Installation Sequence

Reff® Profiles Panels


Installation of Raceway Cover:

1. Align and insert the top lip of Raceway Cover into Frame Stem Bracket Tab and slide the cover horizontally until it lines up vertically on both sides of frame.
2. Push Raceway Cover on to the Frame until you feel it snap into place (detail **G1**).

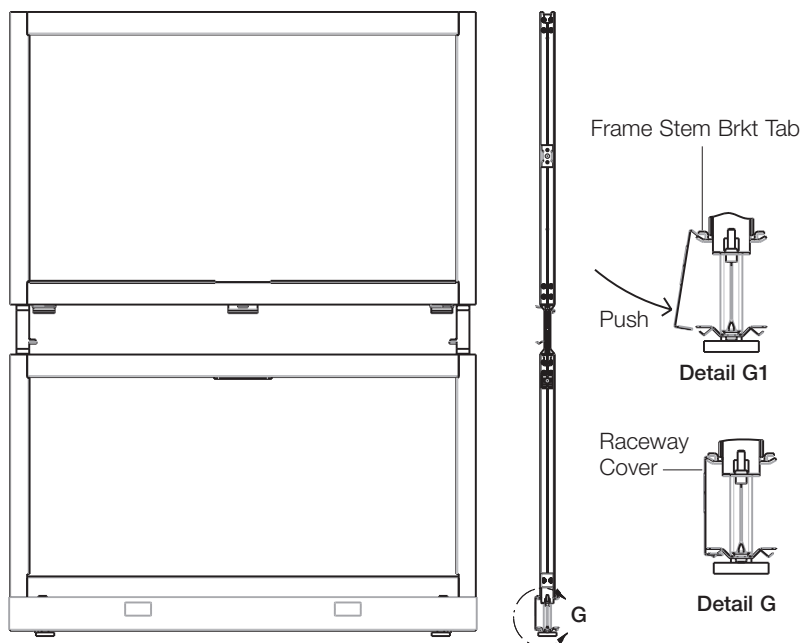

Installation of Beltway Cover:



1. Align and insert the top lip of Beltway Cover into Frame Beltway Bracket Tab and slide the cover horizontally until it lines up vertically on both sides of Frame.
2. Push Beltway Cover on to the Frame until you feel it snap into place (see detail **H1**).

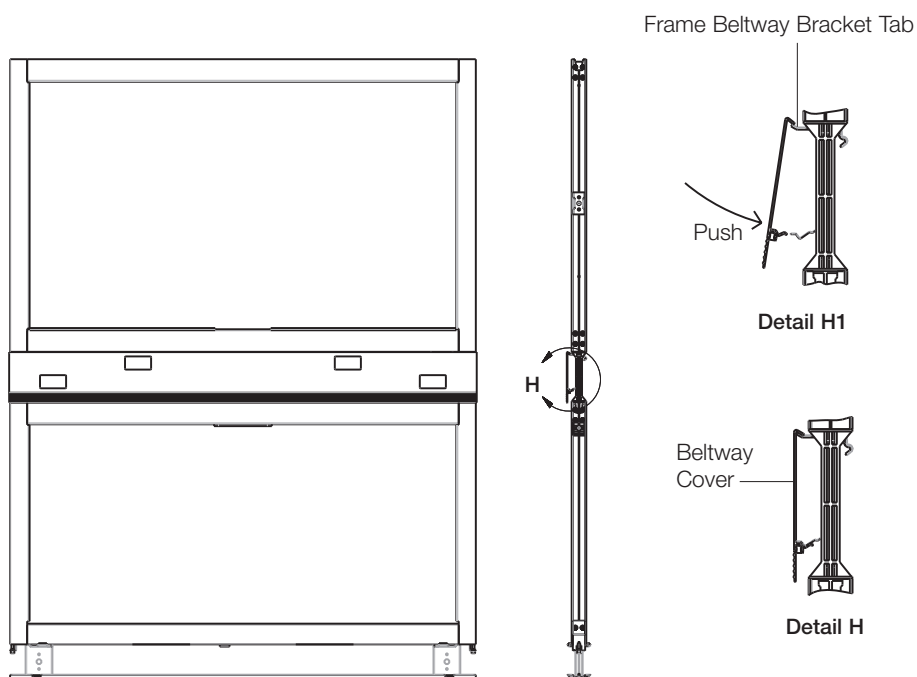



Reff® Profiles Panels

Installation of Top Trim:


1. Place the top trim on top of the Frame.
2. By sliding it in either direction, center the Top Trim. The Top Trim should over-hang each side of the Frame by approximately 1/16".
3. Tap the top Trim into place beginning at one end working your way across to the opposite end.
4. Give a final check to ensure proper installation by checking to see if there is any "waviness" or "high spots" in the top trim. If so, lightly tap on these locations until the top trim is completely flat.

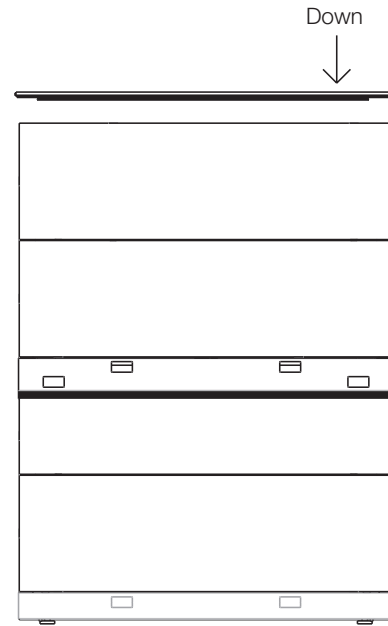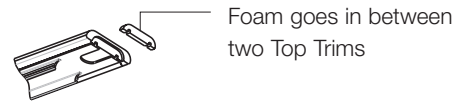

Top Trim - Wood

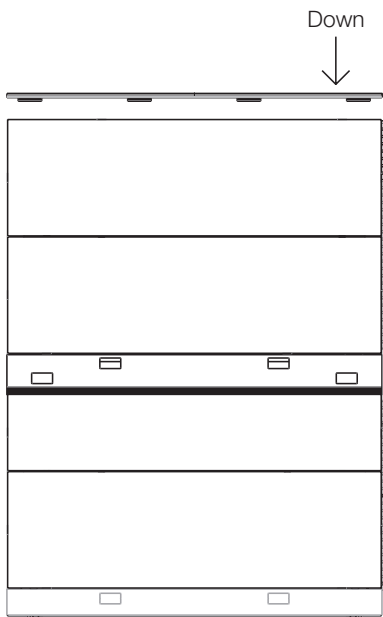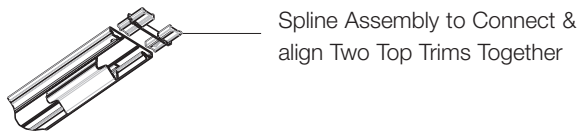



Top Trim - Aluminum

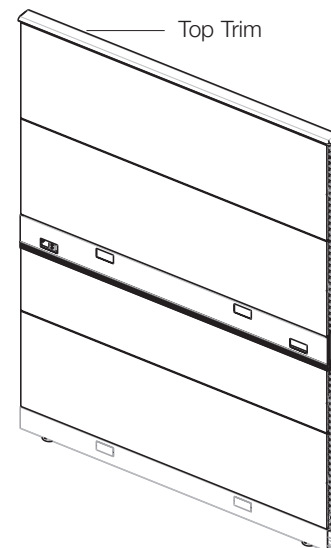

Reff® Profiles Panels

Installation of End Trim:

1. Align and engage end Trim Wedges with Frame Wedges (detail J).
2. Insert top Bracket in between Top Rail and End Trim, secure it with provided Screw (detail Q).

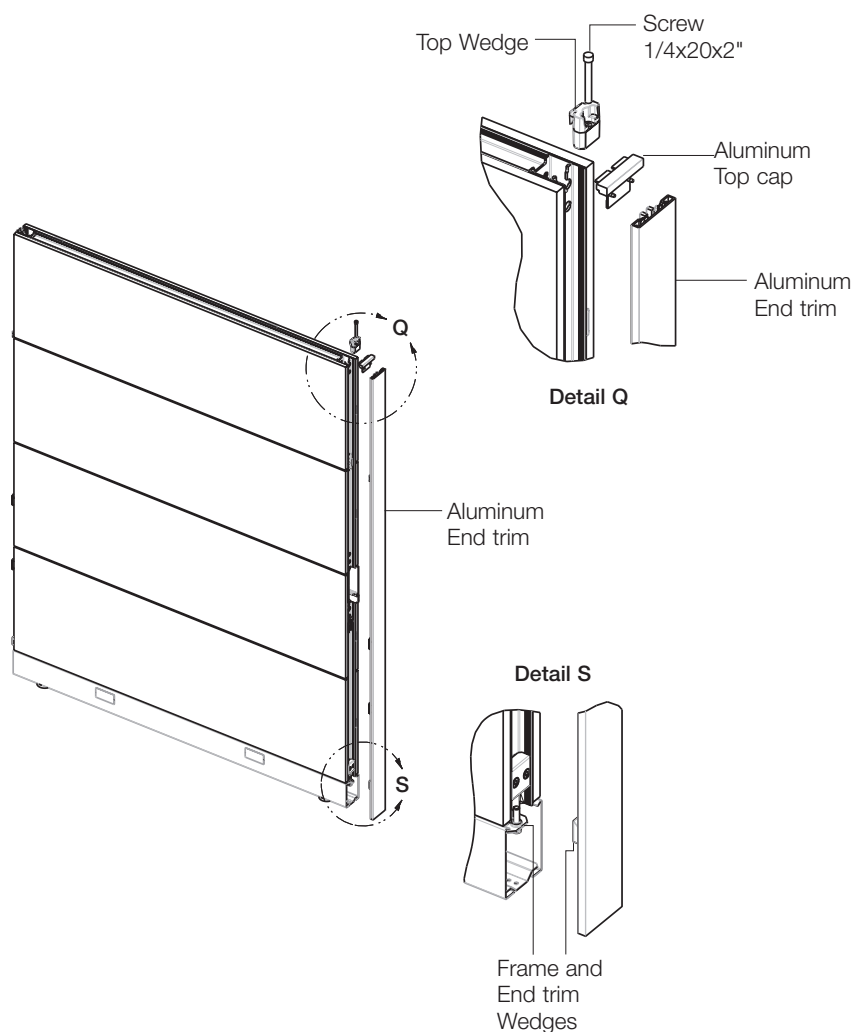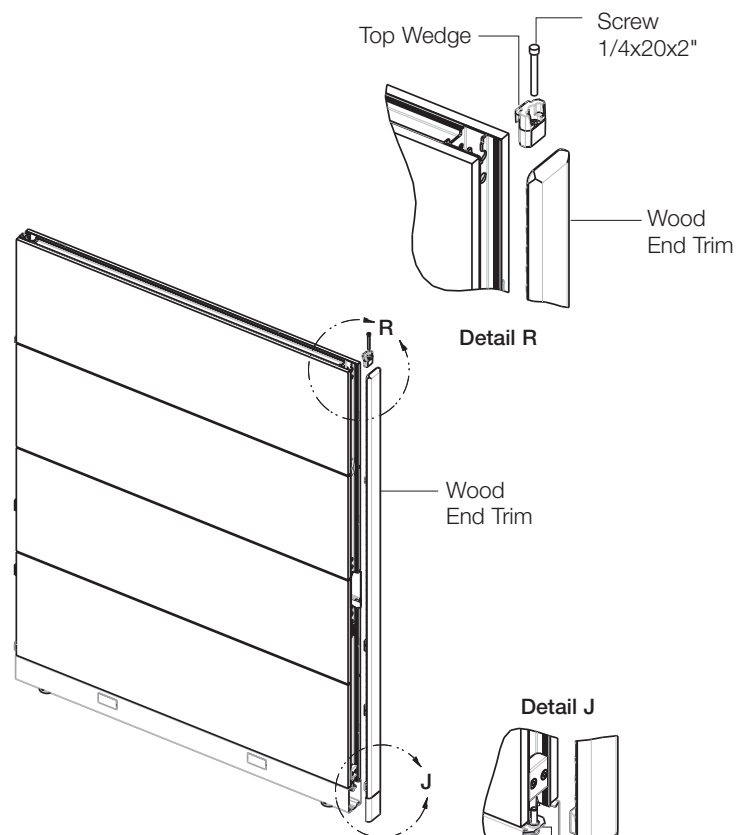

Reff® Profiles Panels


Installation of Slatwall:

1. Align and insert Shoulder Screws of Frame vertical with Slatwall Bracket slots (detail **N**).
2. Make sure Shoulder Screws are engaged and secure with Slatwall Bracket slots (detail **O**).
3. Align the Slatwall horizontally by sliding it in either direction until it has equal gap on both sides of the Frame.


Slatwall Bracket Slot

Shoulder Screw

Detail N

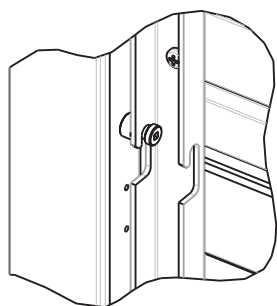

Detail O

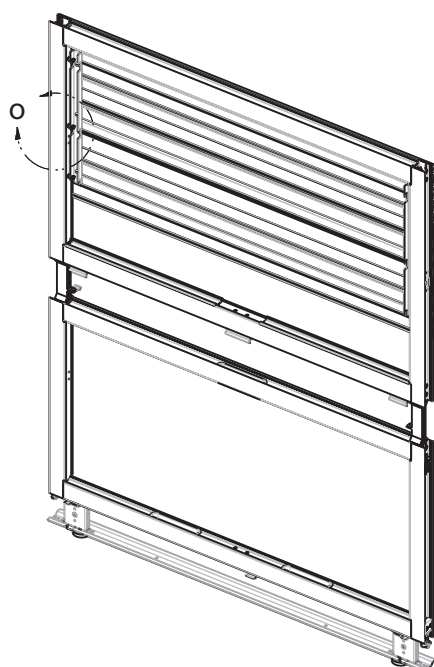

Front View

Reff® Profiles Panels

Installation of Acoustic Panel:

1. After installation of the fabric Tile Dividers on one side of the frame, insert and rest the provided Acoustic Panels on the Tile Dividers (see **fig. A1**).
2. Install the fabric Tile Dividers on the second side of the Frame, so that the Acoustic Panels are sandwiched in between the Tile Dividers (see **fig. A2**). Continue with installation of the fabric Tiles on both sides of the Frame.

Fig. A1

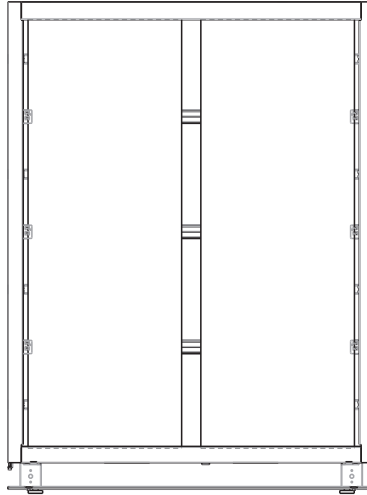


Fig. A2

