## k. Stand Rail Screws and Spacers

C-Leg and T-Leg Bases

C-Leg Bases Shown (from above)


Do not use the Rubber Bumpers (if included in the hardware kit)

Peel liner paper off and place spacers as shown, encircling the indicated screw holes (except where noted)


Screws should <u>only</u> be driven where spacers have been placed In some places (noted) spacers will not encircle a screw hole

### **BASE WIDTH**


S: 30" to 36" W M: 41" to 45" W L: 47" to 51" W

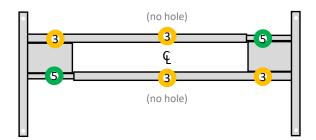

Thin Spacer (3mm thick)




3 3mm + 3mm = 3 6mm thick




Align Spacers when stacking (shown offset for clarity)


M: 46" to 51" W L: 52" to 57" W

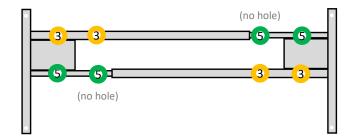


M: 52" to 57" W L: 58" to 63" W

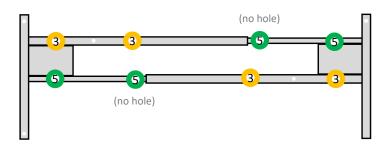

M: 58" to 59.5" W L: 64" to 69" W

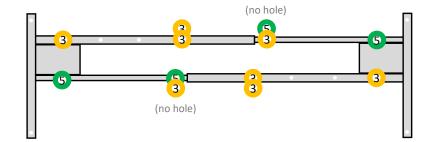

L: 70" to 71.7" W

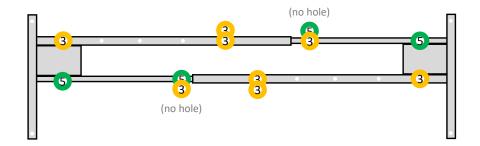


## **k. Stand** Rail Screws and Spacers Left Side of 90° and 120° Corner Bases Bases Shown (from above)


Do <u>not</u> use the Rubber Bumpers (if included in the hardware kit)

Peel liner paper off and place spacers as shown, encircling the indicated screw holes (except where noted)


Screws should <u>only</u> be driven where spacers have been placed In some places (noted) spacers will not encircle a screw hole


### **BASE WIDTH**




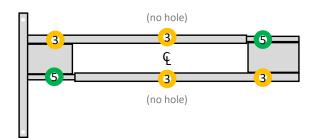

Thin Spacer (3mm thick)









Align Spacers when stacking (shown offset for clarity)


M: 46" to 51" W L: 52" to 57" W






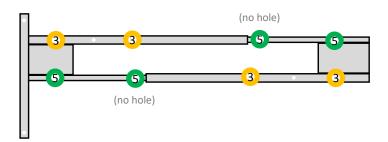

M: 58" to 59.5" W L: 64" to 69" W

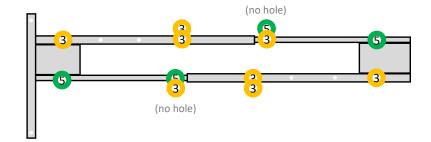

L: 70" to 71.7" W

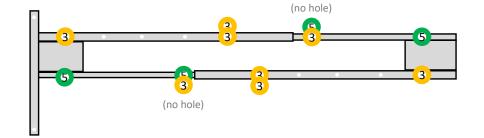

# **k. Stand** Rail Screws and Spacers Right Side of 90° and 120° Corner Bases Returns Shown (from above)

Do <u>not</u> use the Rubber Bumpers (if included in the hardware kit)

Peel liner paper off and place spacers as shown, encircling the indicated screw holes (except where noted)

Screws should <u>only</u> be driven where spacers have been placed In some places (noted) spacers will not encircle a screw hole

