
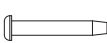





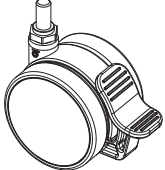
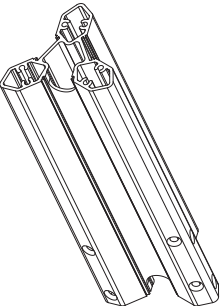
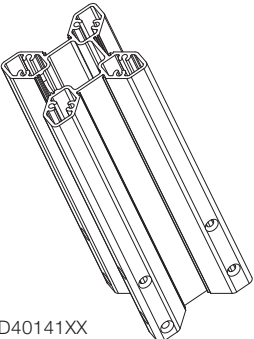
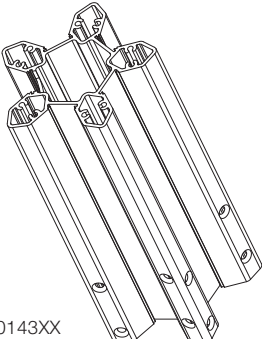
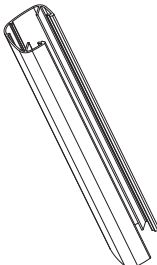
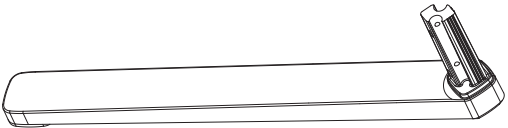

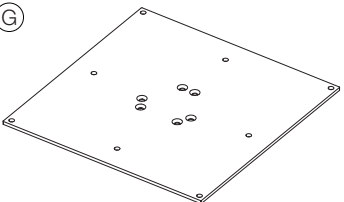
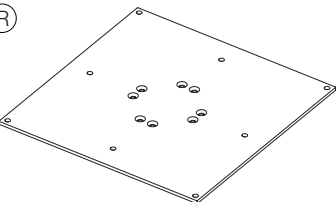
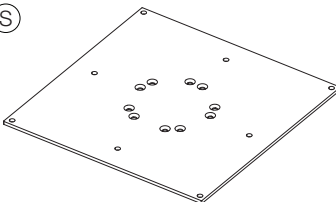
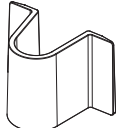


MX-Base Single Top Tables

Reference Number: 6TD00061

Tools Needed

Drill gun

HARDWARE LIST				
<p>(A)</p>  <p>6TD40174 SCR,FH,1/4-20X1</p>	<p>(B)</p>  <p>6TD4008901 SCR,1/4-20X1.5,T-F</p>	<p>(C)</p>  <p>5122218 SCR,TRP#14x7/8</p>	<p>(D)</p>  <p>6TD4010201 SCR,T-F,FL,1/4-20X5/8</p>	<p>(E)</p>  <p>6TD40166 SCR,FLT,1/4-20X1.5, T-F</p>
<p>(F)</p>  <p>6TD40033 GLIDE PAD</p>	<p>(G)</p>  <p>6TD40036 GLIDE</p>		<p>(H)</p>  <p>6TD40117B CASTER W/ BRAKE</p>	
<p>(J)</p>  <p>6TD40139XX MX3 SPINE</p>	<p>(K)</p>  <p>6TD40141XX MX4 SPINE</p>	<p>(L)</p>  <p>6TD40143XX MX5 SPINE</p>	<p>(M)</p>  <p>6TD40145XX SPINE COVER</p>	
<p>(N)</p>  <p>6TD40137 MX FOOT</p>	<p>(P)</p>  <p>6TD4000101 MX MOUNT</p>			
<p>(G)</p>  <p>6TD40167 MX3 MOUNT PLATE</p>	<p>(R)</p>  <p>6TD40168 MX4 MOUNT PLATE</p>	<p>(S)</p>  <p>6TD40169 MX5 MOUNT PLATE</p>	<p>(T)</p>  <p>6TD4006501 CABLE CLIP (OPTIONAL)</p>	

MX-Base Single Top Tables

Reference Number: 6TD00061

STEPS:

1. Assembly of MX-base (showing 4 feet base)

(Fig. 1)

- 1.1 Align the glide pad (F), to the one end of foot (N), and secure into place using 2 (D) screws.
- 1.2 Assemble the caster (H), or leveller (G) into the threaded hole of the foot (N).
- 1.3 Align and insert the tenon of foot (N), into the one of the opening of spine (K) for 4 feet base, and secure into place using 4 (A) screws.

Note: Spine (J) for 3 feet base
Spine (L) for 5 feet base

Start all 4 fasteners (2-3 threads) then follow Fig. 1A for tightening sequence.

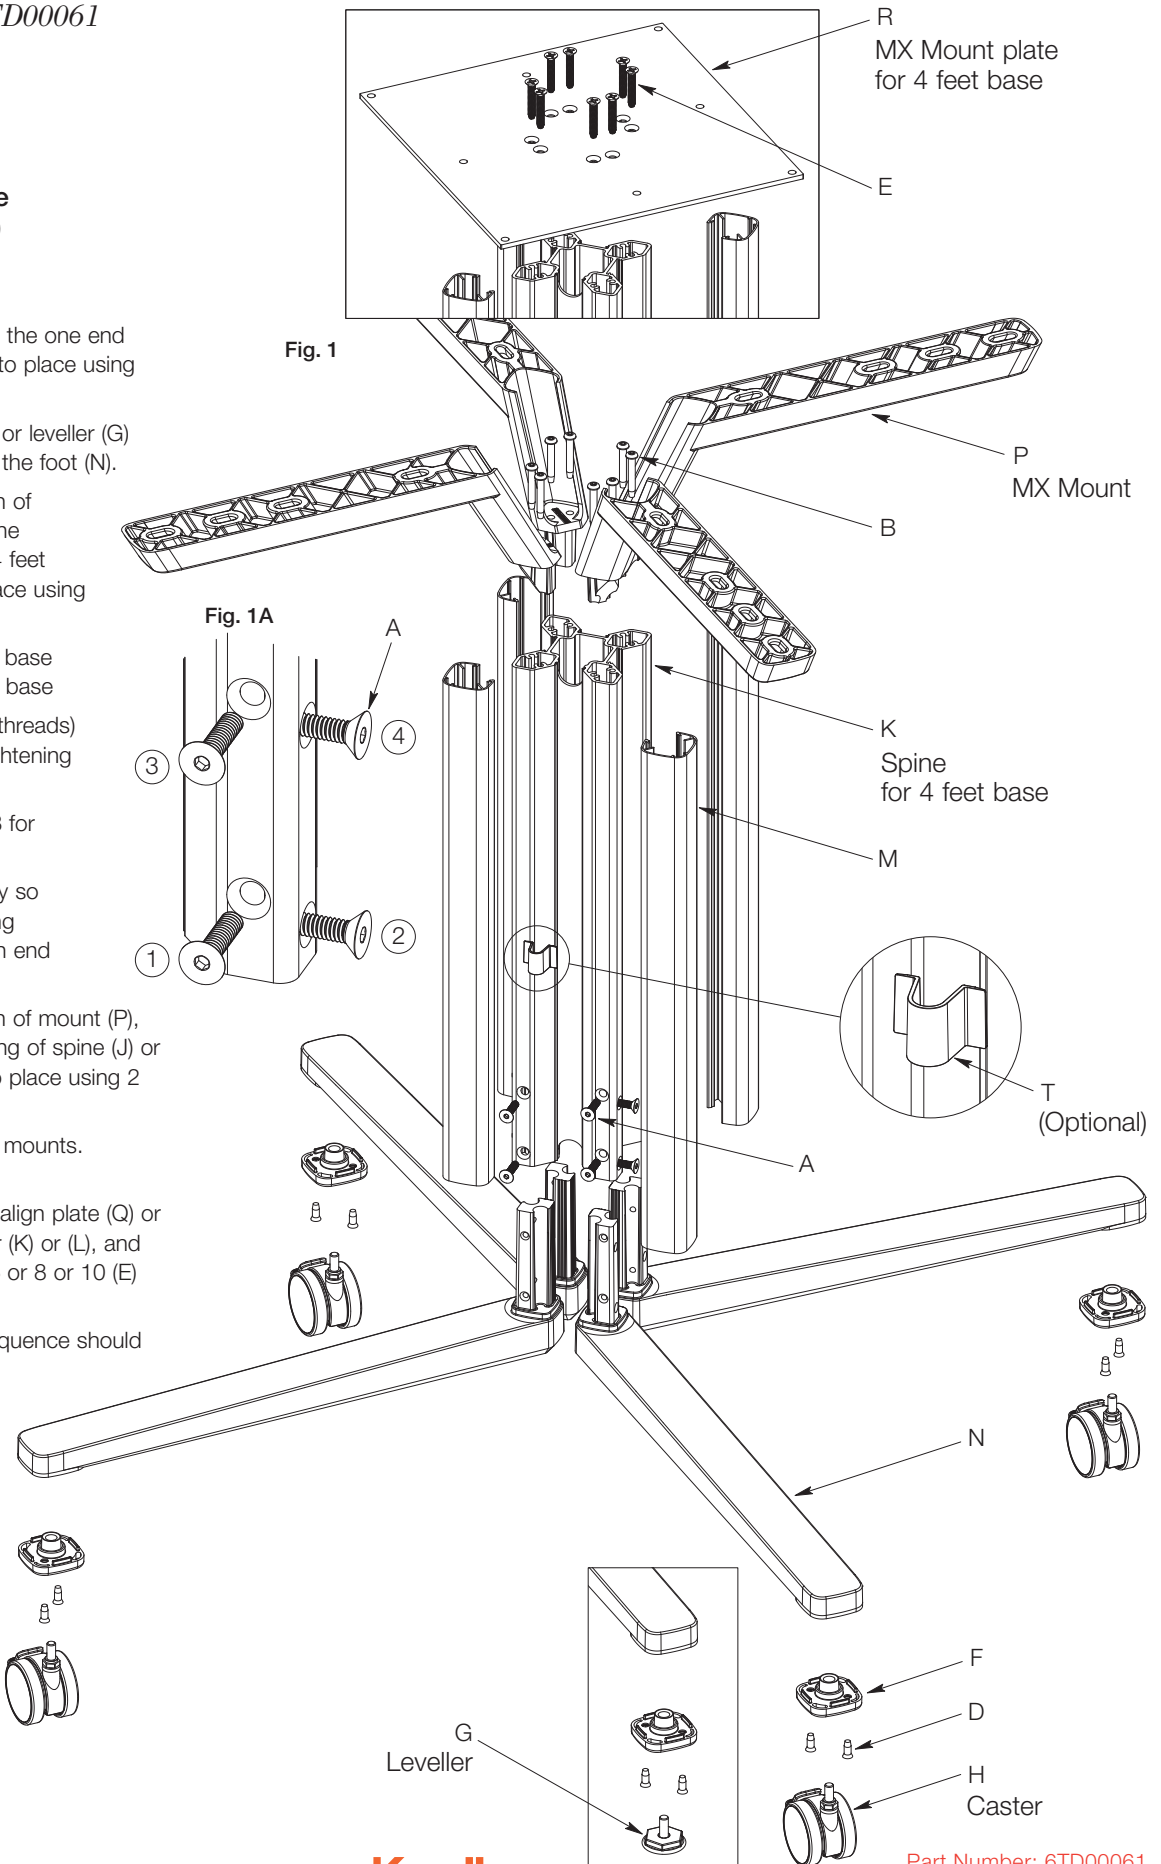
- 1.4 Repeat step 1.1, 1.2, 1.3 for all 3 or 4 or 5 feet base.
- 1.5 Reorient the leg assembly so that the glide pad is facing downwards and the open end is facing up.
- 1.6 Align and insert the tenon of mount (P), into the one of the opening of spine (J) or (K) or (L), and secure into place using 2 (B) screws.

Repeat for all 3 or 4 or 5 mounts.

Note:

For mount plate version, align plate (Q) or (R) or (S) with spine (J) or (K) or (L), and secure into place using 6 or 8 or 10 (E) screws.

Criss-cross tightening sequence should be used.



MX Conference Tables

Reference Number: 6TD00062

2. Installation of assembled MX-base with worksurface

(Fig. 2)

- 2.1 Lay worksurface upside down on a soft non scratching surface, round worksurface shown for example.
- 2.2 Center and align holes of mount (P) of assembled leg over the provided pilot holes and attach using 12 or 16 or 20 (C) screws.

Note:


For mount plate version, center and align holes of mount plate (Q) or (R) or (S) of assembled leg over the provided pilot holes and attach using 8 (C) screws.

Criss-cross tightening sequence should be used.

3. Installation of cable clip (T) (Optional)

(Fig. 2)

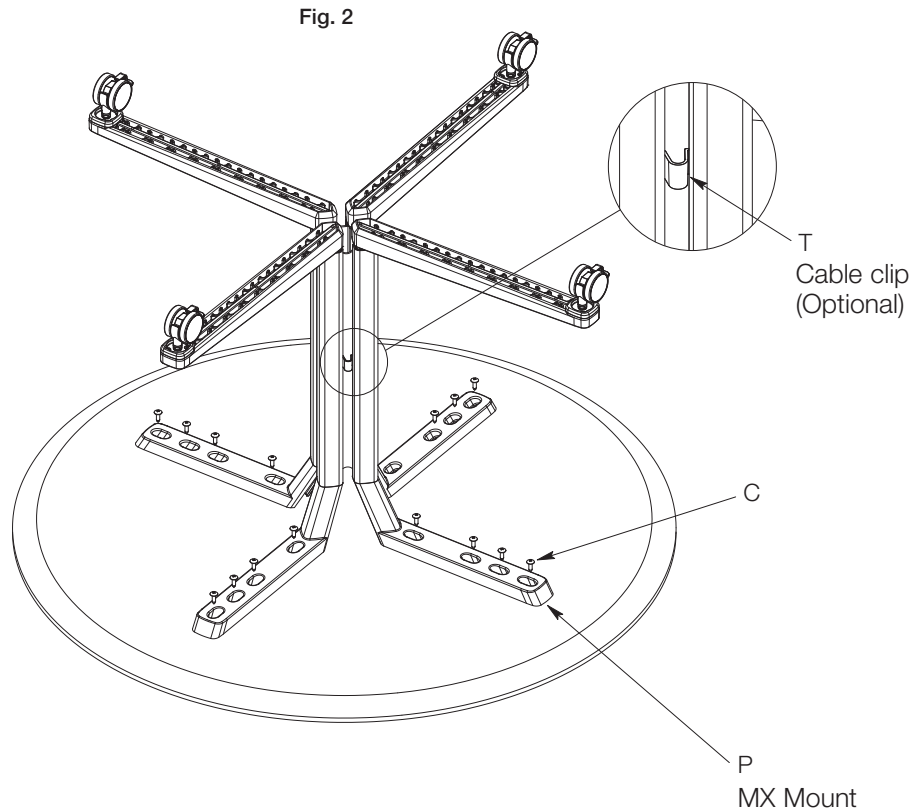- 3.1 First, insert one side of cable clip (T), into groove of spine (J) or (K) or (L), then take a long object (similar to pen) and push in the other side.



Complete assembled table with casters

