


# Four Leg Tables

Glides or casters

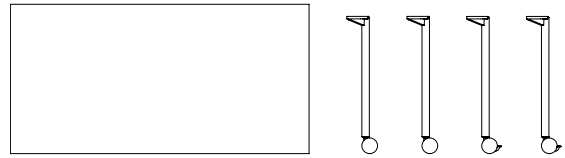

\* Casters shown

## Rectangular tables:

- KFXW4818 KFXW4830
- KFXW6018 KFXW6030
- KFXW7218 KFXW7230
- KFXW4824 KFXW4836
- KFXW6024 KFXW6036
- KFXW7224 KFXW7236

## Square tables:

- KFXW3636
- KFXW4242
- KFXW4848

## Parts list:

- 1 Table top
- 4 Legs (with connectors)

## Tools needed:

- Allen wrench
- Torque wrench
- Phillips screwdriver

## Hardware:

- 24 Socket cap head 1/4-20 x 1.00 screws
- 2 Vertical wire management clips (clear plastic)
- 4 Horizontal wire management clips with wood screws

Please pay close attention to torque requirements.

### Step 1.

Position each plastic ganging connector (A) within the upper casting slot for each leg (B).

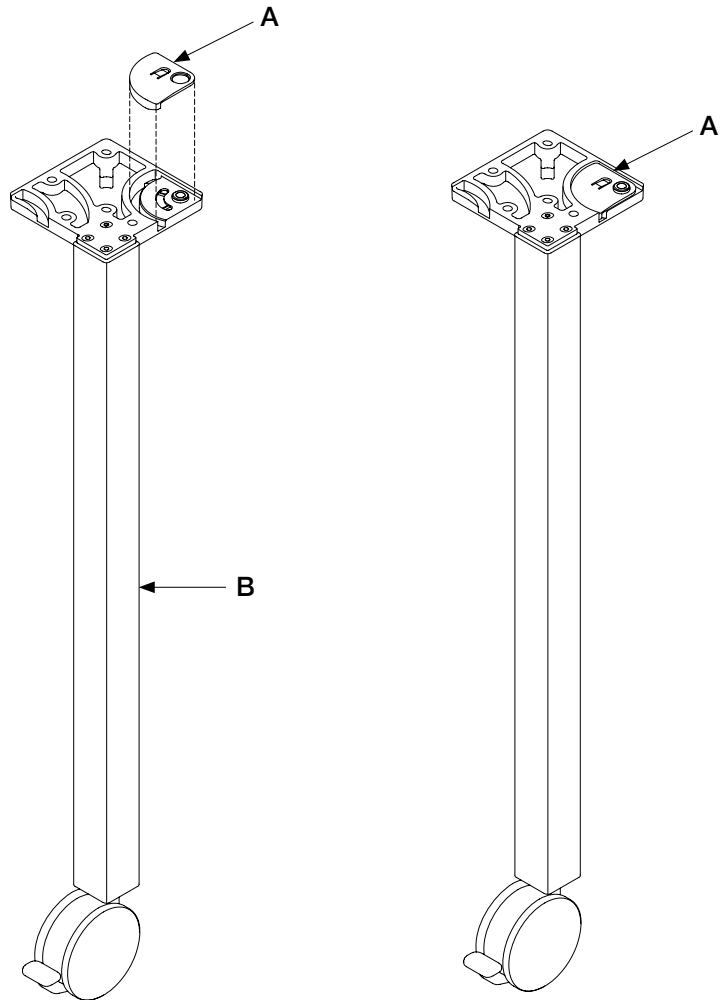


Fig. 1

# Four Leg Tables

## Step 2.

Lay the inverted table top on the floor.

## Step 3.

Attach each leg to the table top using Socket cap head 1/4-20 x 1.00 screws (C), 6 per leg, torque: 100 in/lb. For tables with casters, keep both locking casters (D) on the same side of the top.

## Step 4.

Turn the assembled table into the upright position.

All tables come with 2 vertical wire management clips, 4 horizontal wire management clips and wood screws for use with optional electrical modules. See separate electrical installation instructions for details.

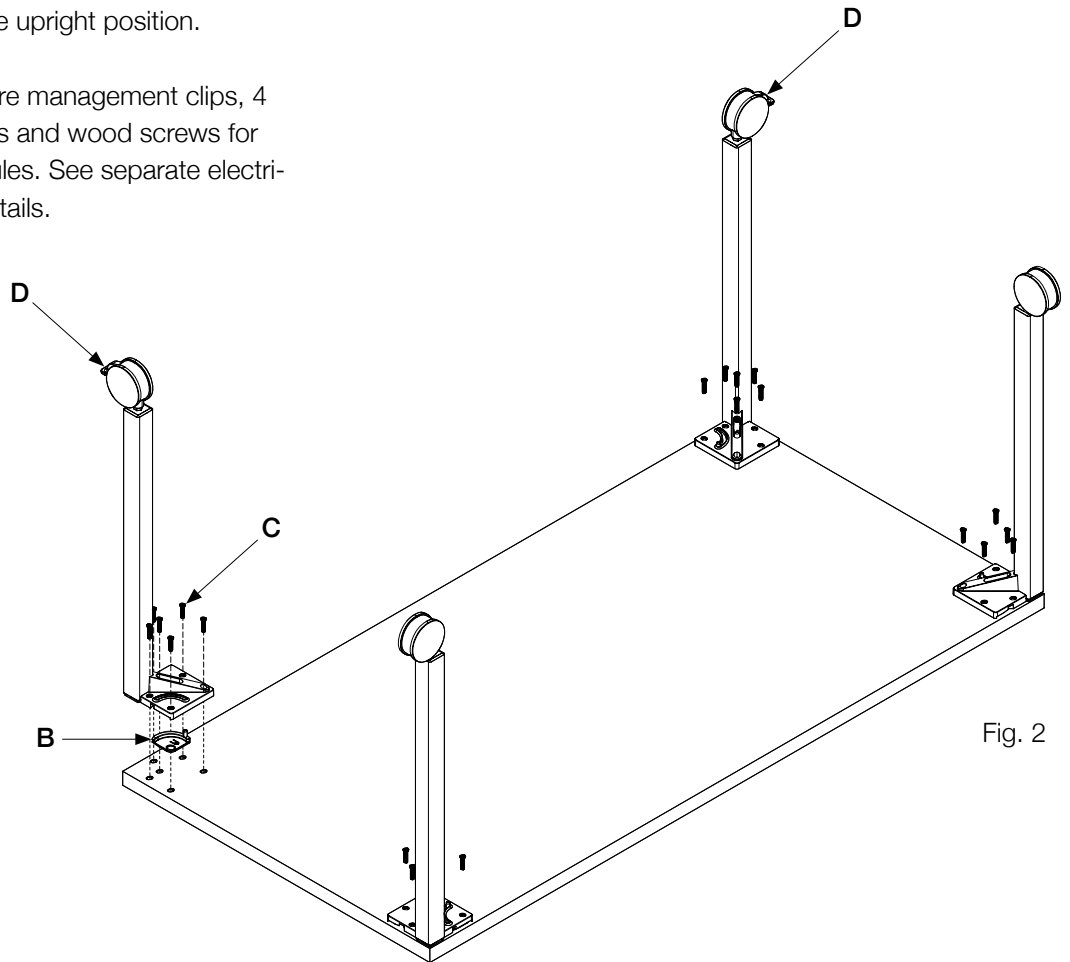


Fig. 2